

LA CROSSE[®]
TECHNOLOGY

Digital Atomic **Wall Clock**



SET UP GUIDE

 
MODEL: W79752

Power Up


1. Insert 2-AA batteries into your Outdoor Sensor.
2. Insert 2-AA batteries into your Atomic Clock.
3. Enter the Settings Menu to adjust your time and date.
4. Once the sensor is reading to your clock, place the sensor outside in a shaded location. View our sensor mounting video here:

bit.ly/th_sensor_mounting

Outdoor Sensor
TX141
(all versions)

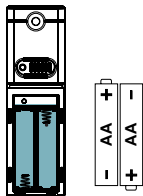

Atomic Clock
W79752

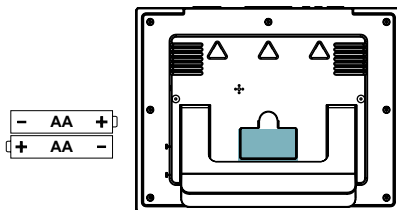 

Atomic Time

- The clock will automatically search for the Atomic Time Signal two hours after power up and at UTC 7:00, 8:00, 9:00, 10:00, and 11:00.
- The Atomic Time Signal Icon (📶) will flash while searching and be solid when it has connected.
- From the normal time display, press the **SET** button to manually start or stop a search for the WWVB time signal. For information about WWVB visit: bit.ly/AtomicTime.

Settings Menu

1. Hold the **SET** button to enter the Settings Menu.
2. Use the **+/-** buttons to adjust values.
3. Press **SET** to confirm values.
4. Press the **SNOOZE** button at any time to save and exit.

Settings Menu Order:

- Language (English, Spanish, French)
 - Beep ON/OFF
 - Atomic ON/OFF
 - DST ON AUTOMATIC/ DST ALWAYS OFF / DST ALWAYS ON
(Change Spring/Fall) (Standard Time all year) (DST all year)
 - Time Zone
 - 12/24 Hour Format
 - Hour
 - Minutes
 - Year
 - Month
 - Date
 - Fahrenheit/Celsius
- | | TIME ZONE |
|--|------------------|
| | ATLANTIC |
| | EASTERN |
| | CENTRAL |
| | MOUNTAIN |
| | PACIFIC |
| | ALASKA |
| | HAWAII |

Language: The language selected will adjust the weekday and month readouts as well as other menu items.

 
Atomic OFF: When selected, the menu will skip DST and Time Zone settings and move straight to the 12/24 Hour setting.

Weekday: Sets automatically when Year, Month and Date are set.

Time Alarm

Set Alarm:

1. Hold the **ALARM** button until the display changes to enter the Alarm Settings.
2. Press and release the **+/-** buttons to adjust values.
3. Press the **ALARM** button to confirm and move to the next item.

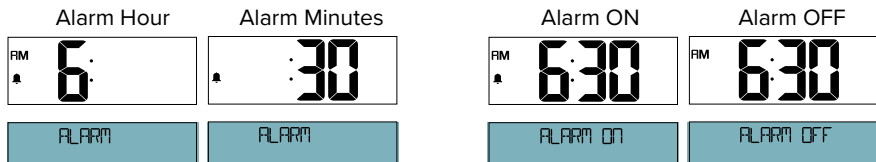

Silence a sounding alarm:

Press any button except SNOOZE to silence the alarm for 24 hours.

Activate/Deactivate Alarm:

- Press the **ALARM** button to activate or deactivate the alarm.
- The Alarm Icon 📌 will show when alarm is active.

Snooze:

- When the alarm sounds, press the **SNOOZE** button to silence the alarm for 10 minutes. **Zz** will show.

Note: The alarm will sound with increasing frequency for two minutes, then shut off automatically if not silenced.

Moon Phase

The moon phase is based on the Lunar Calendar and the year, month, and date settings.



New Moon



Small Waxing Crescent



Large Waxing Crescent



First Quarter



Small Waxing Gibbous



Large Waxing Gibbous



Full Moon



Large Waning Gibbous



Small Waning Gibbous



Last Quarter



Large Waning Crescent



Small Waning Crescent

Temperature

Temperature Trend Arrows:

Both the Indoor and Outdoor Temperature have Trend Arrows to indicate temperature changes (2°F / 1°C) over the past one hour period.




Temperature has risen over the past hour.

Temperature has been steady over the past hour.

Temperature has fallen over the past hour.

Temperature

If you are seeing **NO** or dashes for your outdoor readings, please try the following steps:

1. Hold the + (**PLUS**) button to search for your outdoor sensor. The Reception Indicator.  will begin to animate.
2. If after 3 minutes the sensor still isn't connected, bring the sensor inside next to the display and remove power from both the sensor and clock.
3. Press any button on the clock 20 times and leave the parts sit for a few moments with the power off.
4. Install a new set of alkaline batteries into the sensor, then into your clock. For additional help visit: bit.ly/basic_restart
5. If your outdoor data is still not appearing after these steps, please contact our support staff via the link below.

Sensor Connected



Sensor Not Connected



Search for Sensor



Low Battery Indicator

- By the Time, replace clock batteries.
- By the Outdoor Temperature, replace sensor batteries.

We're Here to Help

If you require additional assistance, get in touch with our friendly customer support team based in La Crosse, WI.

Self Help: bit.ly/w79752_support

Online: bit.ly/contact_techsupport

Phone: 1.608.782.1610

Our knowledgeable customer support team is available:
Mon-Fri 8am-6pm CST

Stay in Touch!

Ask questions, watch setup videos, and provide feedback on our social media outlets. Follow La Crosse Technology on YouTube, Twitter, Facebook and Instagram.



CA WARNING:

This product can expose you to chemicals including acrylonitrile, butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to: www.P65Warnings.ca.gov

SCAN HERE
Additional Info
and Support 



 
SPECIFICATIONS

Atomic Clock (W79752)

- **Temperature Range:** 32°F to 99°F (0°C to 37°C)
- **Update Interval:** About every 51 seconds
- **Power:** 2-AA, IEC, LR6 batteries (not included)
- **Battery Life:** Over 12 months

Outdoor Sensor (TX141 (all versions))

- **Temperature Range:** -40°F to 140°F (-40°C to 60°C)
- **Transmission Range:** Over 330 ft. open air (100 meters) RF 433MHz
- **Update Interval:** About every 51 seconds
- **Power:** 2-AA, IEC, LR6 batteries (not included)
- **Battery Life:** Over 24 months

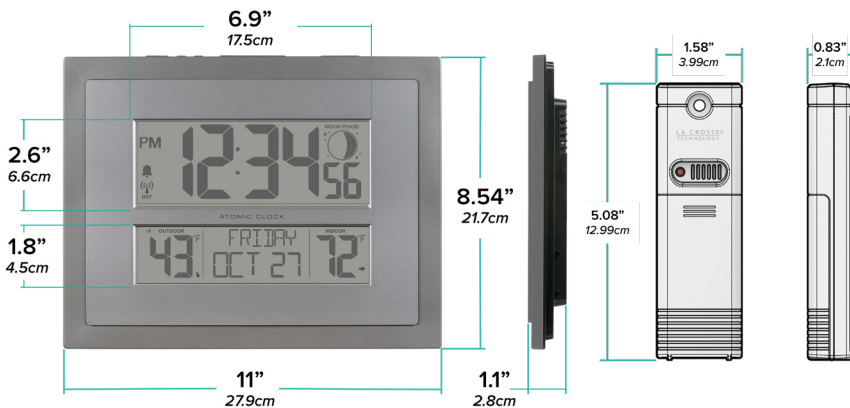

Warranty & Patents

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd,
2830 S. 26th St.
La Crosse, WI 54601

For Full Warranty Details, Visit:

www.lacrossetechnology.com/pages/warranty

Patents:

www.lacrossetechnology.com/pages/patents

Care & Maintenance

Battery Replacement Instructions

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

FCC Statment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

DOUBLE YOUR WARRANTY



Scan Here

Scan the QR Code or visit:

bit.ly/w79752_register

to register your product and double the standard 1-year warranty for free by opting to receive occasional product emails.