

## WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: [www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

## CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## CAUTION!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

 **WARNING:** This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**LA CROSSE®**  
**TECHNOLOGY**

# DIGITAL WALL CLOCK

## WITH INDOOR TEMPERATURE



MODEL: WT-8002Uv2

DC: 032420

For more product information visit: [bit.ly/laxtech\\_support](http://bit.ly/laxtech_support)

## POWER UP

1. Insert 3-AAA batteries into your Wall Clock.
2. Configure your basic settings.

## SETTINGS

1. Hold the SET button to enter the Settings Menu.
2. Press the + or - button to adjust values.
3. Press the SET button to confirm and move to next item.
4. Press the SNOOZE button any time to exit.

### Settings Menu Order:

- 12/24 Hour Time
- Hour
- Minutes
- Year
- Month
- Date
- Month/Date or Date/Month
- Fahrenheit/Celsius

**Weekday:** The Weekday will set automatically when Year, Month and Date are set.


## ALARM

1. Hold the ALARM button to enter the Alarm Settings.
2. Press the + or - button to adjust values.
3. Press the ALARM button to confirm and move to next item.
4. Press the SNOOZE button at any time to exit.


### Alarm Settings Order:

- Hour
- Minutes

### Activate/Deactivate:

- Press the ALARM button to activate or deactivate the alarm or silence a sounding alarm for 24 hours.
- The Alarm Icon  will show when active.

### Snooze:

- Press the SNOOZE button to silence an alarm for 10 minutes.
- Alarm Icon  will flash while snoozing.
- Snooze may be repeated.

## LOW BATTERY INDICATOR

When the Low Battery Indicator  appears replace batteries in your Wall Clock.

## WE'RE HERE TO HELP!

If you require additional support, get in touch with our friendly customer support team based out of La Crosse, WI.

**Phone:** 1-608-782-1610

**Online:** [bit.ly/contact\\_techsupport](https://bit.ly/contact_techsupport)

Our knowledgeable customer support team is available:  
Monday-Friday, 8am-6pm CST.

## JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



## SPECIFICATIONS

**Temperature Range:** +32°F to 122°F (0°C to 50°C)

**Power:** 3 “AAA” (LR3, IEC) batteries (sold separately)

**Battery Life:** Over 24 months

**Dimensions:** 8.66” L x 0.95” W x 6.85” H  
(21.99cm L x 2.41cm W x 17.39cm H)