

## K84377 FAQs

The links below will work in most PDF viewers and link to the topic area by clicking the link. We recommend Adobe Reader version 10 or greater available at:  
<http://get.adobe.com/reader>

## TABLE OF CONTENTS

<b>K84377 FAQs</b> .....	1
Battery .....	1
Initial Setup.....	1
Thermometer Factory Restart.....	2
<b>Window Thermometer</b> .....	2
Power requirements .....	2
Set Time .....	2
Can I view temperature in Celsius?.....	2
MIN/MAX Temperature .....	2
Dashes, OF.L or stuck Temperature.....	2
Thermometer has a Distorted Display. ....	4
Thermometer has missing segments. ....	4
Thermometer is Blank: No letters, numbers or dashed lines. ....	4

### Battery

- ✓ Half of all warranty issues can be resolved with fresh battery of the appropriate voltage.
- ✓ We suggest name brand alkaline battery.

### Initial Setup

1. Remove the mounting holder and transparent cover from the LCD.
2. Hold the white grips on the side of the LCD and carefully remove it from the white case.  
**Note:** Do not touch the LCD directly.
3. Remove the plastic safety strip, preventing the battery from making contact. Insert the LR44 button cell battery with the + side facing up.
4. Remove the protective scratch guard from the LCD.
5. Set time and date (see program menu).
6. Slide the IN/OUT switch to select indoor or outdoor use.
7. Carefully put the LCD back into the white case (circuit board will face the back, buttons will face the front).
8. Replace the transparent cover over the LCD. Press firmly to secure it to the white case.

## Thermometer Factory Restart

1. Remove the battery for 15 minutes.
2. Press one of the buttons at least 20 times to clear all memory.
3. Insert a fresh battery into the thermometer.
4. Do not press buttons for 15 minutes.

## Window Thermometer

### Power requirements

- ✓ 1 LR44 button cell battery.

## Set Time

1. Carefully remove LCD from the white case.
2. Hold the MODE button until the **hours** flash.
3. Press and release the + button to adjust the hours.
4. Press and release the MODE button and the **minutes** will flash.
5. Press and release the + button to adjust the minutes.
6. Press the MODE button to return to the temperature display.

**Note:** The time must be set for the Min/Max temperature to work properly. If you do not exit the program menu, the display will stay in program mode and not show the temperature.

## Can I view temperature in Celsius?

- ✓ This station reads in Fahrenheit only.

## MIN/MAX Temperature

- ✓ The station shows the high/low temperature for the past 24 hours.
- The minimum temperature automatically resets at **8:00 P.M.**
- The maximum temperature automatically resets at **8:00 A.M.**
- If the time is not set, the minimum and maximum temperatures will not reset at the correct local time or may read dashes (---).

## Dashes, OF.L or stuck Temperature

- ✓ This is generally a power related issue.
- ✓ Battery may be overpowered or underpowered. Remove battery from wireless thermometer.
- ✓ Press any button 20 times. Leave the thermometer unpowered for 1-2 hours.
- ✓ Install fresh alkaline battery with correct polarity.
- ✓ If the indoor temperature is still dashes or OF.L, the thermometer may need replacement.

## Mount on Window

### Indoor Use:

1. Remove the window thermometer from the mounting holder.
2. Clean and dry the area to mount the window thermometer so the adhesive will stick.
3. Remove the thin cover from the adhesive to reveal the sticky side.
4. Carefully place the mounting holder with the opening facing up.
5. Insert the window thermometer.

### Outdoor Use:

1. Choose an outdoor window location that is fairly dry and shaded for accurate readings.
2. Remove the window thermometer from the mounting holder.
3. Clean and dry the area to mount the window thermometer so the adhesive will stick.
4. Remove the thin cover from the adhesive to reveal the sticky side.
5. Carefully place the mounting holder with the opening facing up.
6. Insert the window thermometer.
  - Avoid direct sunshine, as it will cause false high temperature readings.
  - Constant direct sunlight may fade the LCD, making it difficult to read.
  - Due to the heat emission and sheltered location of your window, the temperature may read higher with a window-mounted location than at a free unsheltered location outside.

## Remove from Window

The adhesive used to secure the thermometer is very strong and elastic. The best way to remove the holder from the window is with a flat blade and patience.

- ✓ Remove the window thermometer from the holder.
- ✓ Gently slide a flat blade beneath one end of the holder. Lift slowly and gently allowing the adhesive to slowly stretch and finally release from the window. Repeat the process on the other side.
- ✓ This takes several minutes to accomplish. Be careful not to damage the window.
- ✓ New adhesive will be required to remount. Check in your local hardware store.

## Accuracy

Since no window is a perfect insulator, it is possible that this temperature skew is caused by heat leakage through the window pane.

- ✓ To double-check the accuracy of the thermometer, remove it from the mounting bracket (leave the bracket attached to the window), bring it indoors for two hours, and set it next to the thermostat.
- ✓ If it is within 2-3 degrees, the thermometer is working correctly. If the temperature gap is greater than 3 degrees after 2 hours, the window thermometer may be defective.

- Is the thermometer mounted in a shady location?
- Is the temperature incorrect at night as well as during the day?

#### Thermometer has a Distorted Display.

- ✓ On a brand new Wireless Thermometer, check for thin plastic films of printed scratch guard that may be on the screen of the wireless thermometer. This thin piece of plastic has printed numbers for store displays.
- ✓ With all power removed, the thermometer should be blank.
- ✓ If numbers still appear, please check for scratch guard.
- ✓ Check that the battery are installed correctly.
- ✓ [Battery](#) may be overpowered or underpowered.
- ✓ Remove battery from Wireless Thermometer.
- ✓ Press any button 20 times. Leave the battery out of the display for 2 hours.
- ✓ Insert fresh battery into the wireless thermometer.

#### Thermometer has missing segments.

- ✓ This is generally a power related issue.
- ✓ Check that the battery are installed correctly.
- ✓ [Battery](#) may be overpowered or underpowered.
- ✓ Remove battery from wireless thermometer.
- ✓ Press any button 20 times. Leave the battery out of the display for 2 hours.
- ✓ Insert fresh battery into the wireless thermometer.

#### Thermometer is Blank: No letters, numbers or dashed lines.

- ✓ Check that the battery are installed correctly.
- ✓ [Battery](#) may be overpowered or underpowered.
- ✓ Remove battery from wireless thermometer.
- ✓ Press any button 20 times. Leave the battery out of the display for 2 hours.
- ✓ Insert fresh battery into the wireless thermometer.