



## 0.9-INCH LED CLOCK RADIO

WITH NATURE SOUNDS AND MOOD LIGHT




MODEL: M80734

DC: 052019

Find more product information and support here: [bit.ly/laxtech\\_support](https://bit.ly/laxtech_support)

### POWER UP

Insert the 5 volt power cord into an outlet, then into the back of your Clock Radio. **Optional:** Insert 2-AAA batteries for backup.

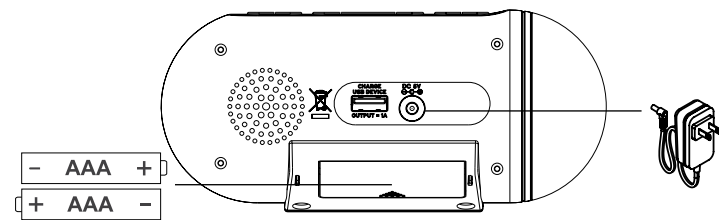

### SETTINGS MENU

1. Hold the SET/MEM button to enter the Settings Menu.
2. Press the + or - button to adjust values. Hold to adjust quickly.
3. Press the SET/MEM button to confirm and move to next item, or exit.

#### Settings Menu Order:

Hour: “12” (The PM Indicator will be lit from 12:00 pm to 11:59 pm)

Minutes: “00”

12/24 Hour: “12Hr”

Year “2019”

Month: “1”

Date: “1”

Snooze (Nap) Duration: “n5” (5 to 60 minutes)

**Note:** Your clock will exit the Settings Menu when no further buttons are pressed for 10 seconds.

### DISPLAY’S BRIGHTNESS & COLOR MOOD LIGHT

- Press the +/LIGHT button to turn ON or OFF the Color Mood Light. When your Mood Light is ON, the colors will continually change.
- Press the **z z ...** button repeatedly to adjust your LED display’s brightness (HI-LO-OFF).

**Note:** The color changing light will be stopped temporarily when the time display is turned off. It will resume when the time display is turned on at high or low brightness.

### NATURE SOUNDS

1. Press the -/SOUND button to turn Nature Sounds ON.
2. Press the VOL/SET button to select HI or LO volume.
3. Hold the -/SOUND button to turn Nature Sounds OFF.

When Nature Sounds are ON, press the -/SOUND button to select desired sound.

#### Nature Sounds:

**N1** = Birds

**N2** = River

**N3** = Jungle

**N4** = Ocean

**N5** = Thunder Storm

**N6** = Chime

**N7** = Campfire

**N8** = White Noise

Your clock will stay on the last sound selected and play continuously.

### SET ALARMS

1. Hold the AL 1 • 2 button to enter the Alarm Settings Menu.
2. Press the + or - button to adjust values. Hold to adjust quickly.
3. Press the AL 1 • 2 button to confirm and move to next item, or exit.
4. Press the SET/MEM button anytime to exit Alarm Settings.

#### Alarm Settings Menu Order:

Alarm 1 Hour: “6”

Alarm 1 Minutes: “00”

Alarm 1 Wake up Sound:

• **bu** = Buzzer (No preview, volume not adjustable on buzzer)

• **rd** = Radio (No preview)

• **N1** = Birds

• **N2** = River

• **N3** = Jungle

• **N4** = Ocean

• **N5** = Thunder Storm

• **N6** = Chime

• **N7** = Campfire

• **N8** = White Noise

**Note:** Each Nature Sound will preview for 3 seconds at low volume.

Alarm 1 Schedule:

**1 - 7** = Daily Alarm (Monday - Sunday)

**1 - 5** = Weekday Alarm (Monday - Friday)

**6 - 7** = Weekend Alarm (Saturday - Sunday)

**1 - 1** = Single Day Alarm (Alarm will sound one time only)

Alarm 1 Volume: Use the + or - button to adjust volume (HI or LO) on all Alarm Sounds except Buzzer.

**Set Alarm 2:** Starting with the hour, the menu will allow you to choose separate settings for your second alarm. These will follow the same order as Alarm 1.

### ACTIVATE/DEACTIVATE ALARMS

1. Press the AL 1 • 2 button once to activate Alarm 1
2. Press the AL 1 • 2 button twice to activate Alarm 2
3. Press the AL 1 • 2 button three/four times to activate/deactivate both alarms.

• When Alarm 1 is active the Alarm 1 Icon **1** will show.

• When Alarm 2 is active the Alarm 2 Icon **2** will show.

#### Turn Off a Sounding Alarm:

When an alarm sounds and the alarm icon flashes, press the AL 1 • 2 button once to reset the alarm to go off at the next time specified in your settings. The appropriate alarm icon will remain solid, indicating and active alarm.

### SNOOZE ALARMS

When an alarm sounds and the alarm icon flashes, press the **z z ...** button to silence the alarm for the preselected Snooze Duration.

**Note:** If the second alarm sounds, it will override the first alarm when snoozed. The first alarm will sound again at the next specified time.

FM ANTENNA

Fully extend the Wire Antenna and vary the position for best FM reception.

**Note:** Do not strip, alter, or attach to other antennas.

LISTEN TO FM RADIO

- 1. Press the RADIO/SLEEP button. “ON” and frequency will show.
- 2. Press the + or - button to change frequencies. Hold to scan for the next clear station.
- 3. Press the VOL/SET button to select Volume. “L05” will show.
- 4. Press the + or - button to adjust volume (L01 to L16).

Turn Radio OFF:

When Time is showing, press the RADIO/SLEEP button to turn your radio OFF.

Store up to 20 FM Radio Stations to Memory:

- 1. With the radio playing, hold the SET/MEM button until “P01” flashes.
- 2. Use the + or - button so select which memory position you’d like the station saved in.
- 3. Press the SET/MEM button to store the station in that position.
- 4. Repeat these steps to fill the custom stations however you please.

Remove a stored station from memory:

Follow the steps above to store a different station in place of a stored station.

Select a preset radio station:

With radio playing, press the SET/MEM button once. Press the + or - button to select a preset station. Your preset station will play.

SLEEP TIMER (5 TO 90 MINUTES)

- 1. With radio playing, hold the RADIO/SLEEP button.  
“05” (sleep time 5 minutes) will show.
- 2. Press the RADIO/SLEEP button to select how long you’d like your timer to play the radio for. Sleep times range from 5 to 90 minutes and will start automatically once left on screen. The SL Icon will show when active.
- 3. Hold the RADIO/SLEEP button to view remaining sleep time.
- 4. Press the RADIO/SLEEP button to deactivate the Radio/Sleep Timer, before time has elapsed.

USB CHARGING PORT

Connect your external device’s USB charging cable (sold separately) to the USB Charging Port.

Notes:

- Use the original power cord (5V-1.2A) to power your clock radio. Other power cords may not charge your phone.
- Charging times will vary.
- USB Power Output: 1 Amp maximum current.
- Charge 1 Amp devices or devices that are self-regulating.
- This is a power output charging port. It does not provide power to your clock.
- This clock was not designed to charge iPads or other tablets.

SPECIFICATIONS

















**Power:** AC/DC: KA0601A-0501200USS  
Optional 2-AAA batteries (sold separately)

**USB:** Output 1 amp maximum

**FM Radio:** 87.5-108 MHz

**Dimensions:** 6.18” L x 2.68” w x 2.73” T (15.70 L x 6.80 W x 6.94 H cm)

BUTTON FUNCTIONS

 SOUND	 SET MEM	 VOL SET	 Zz ... 	 RADIO SLEEP	 ALI-2 ON-OFF	 LIGHT
 SOUND	Press to select Nature Sound Hold to turn OFF Nature Sound. <b>Settings Menu:</b> Press to decrease value. Hold to decrease quickly. <b>Radio ON:</b> Press to tune radio. Hold to scan for stations.					
 SET MEM	Hold to enter the Settings Menu. Press to confirm and move to next item. <b>Radio ON:</b> Hold to select memory position. Press to store station to memory.					
 VOL SET	Press to enter Volume Adjustments. Use the + or - buttons to adjust volume in Radio and Nature Sounds.					
 Zz ... 	Press to adjust LED display's brightness HI-LO-OFF. <b>Sounding Alarm:</b> Press to silence alarm for preselected Snooze Duration.					
 RADIO SLEEP	Press to turn Radio ON or OFF. <b>Radio ON:</b> Hold to enter Sleep Settings. Press to select preset sleep times.					
 ALI-2 ON-OFF	Hold to enter Alarm Settings. Press to Activate or Deactivate Alarms.					
 LIGHT	Press to turn ON/OFF Color Changing Mood Light. <b>Settings Menu:</b> Press to increase value. Hold to increase quickly. <b>Radio ON:</b> Press to tune radio. Hold to scan for stations.					

WARRANTY & SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If your product is not working properly, please send: your product, a letter explaining the problem, and \$5.00 for postage and handling to:




Equity by La Crosse Warranty Department, 2830 26<sup>th</sup> St S.,La Crosse, WI 54601

For Full Warranty Details Visit: [www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:** To prevent electrical shock, do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

**ATTENTION:** POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT

 The Lightning Flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.	 CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL.	 The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.
--	--	---

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.


This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.


CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment. All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

 **WARNING:** This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

SAFETY INSTRUCTIONS

- 1. **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
- 2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
- 3. **Water and Moisture:** The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- 4. **Ventilation:** The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or place in a built-in installation such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 5. **Heat:** The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 6. **Power Sources:** The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 7. **Grounding or Polarization:** Precautions should be taken so that the grounding or polarization means of an appliance are not defeated.
- 8. **Power Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on, or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point where they exit from the appliance.
- 9. **Cleaning:** The appliance should be cleaned only as recommended by the manufacturer.
- 10. **Object and Liquid Entry:** Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 11. **Damage Requiring Service:** The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged.
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
- 12. **Servicing:** The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

 Please help in the preservation of the environment and return used batteries to an authorized depot. Remove the battery from the clock if you do not intend to use it for an extended period of time.  
**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CARE & MAINTENANCE

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and –).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.