


HANDHELD WEATHER RADIO AM/FM | NOAA WEATHER BAND

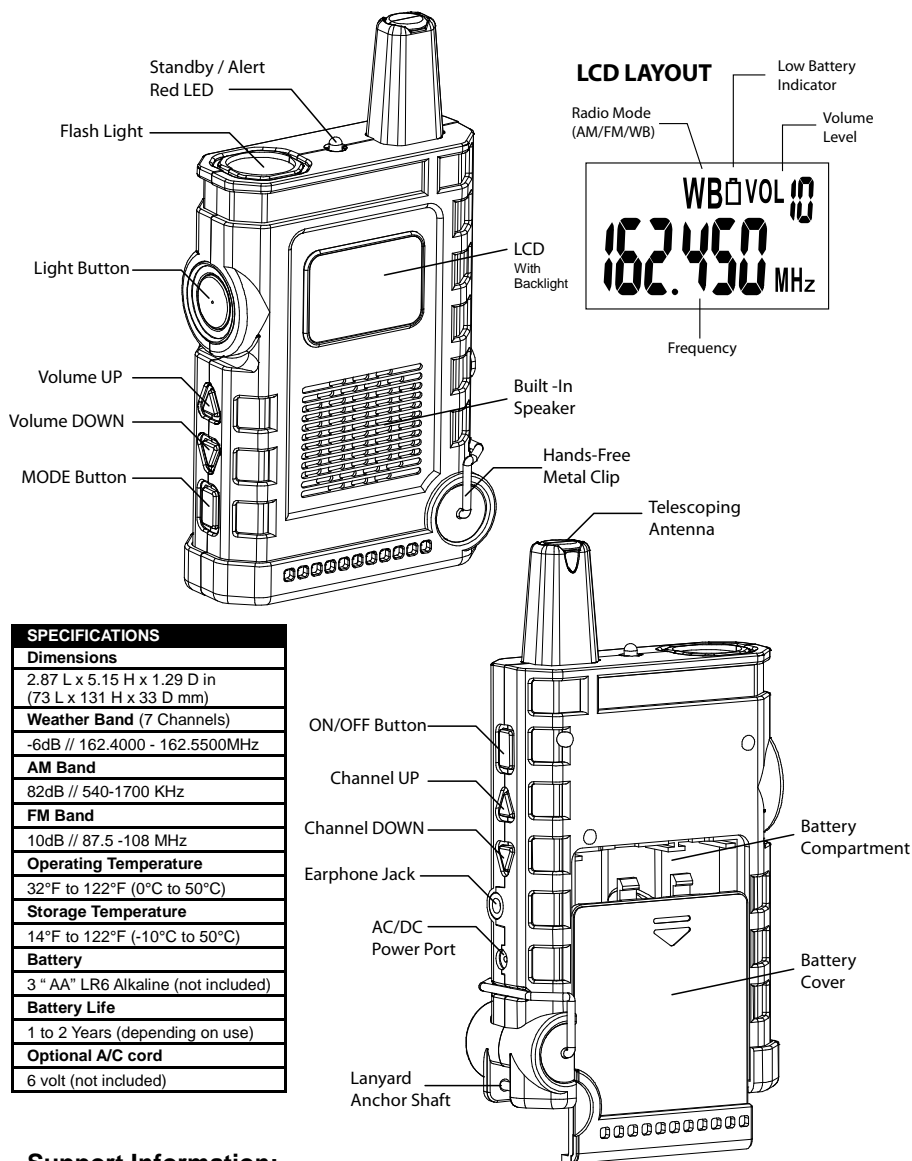

SPECIFICATIONS

Dimensions

2.87 L x 5.15 H x 1.29 D in
(73 L x 131 H x 33 D mm)

Weather Band (7 Channels)

-6dB // 162.4000 - 162.5500MHz

AM Band

82dB // 540-1700 KHz

FM Band

10dB // 87.5 -108 MHz

Operating Temperature

32°F to 122°F (0°C to 50°C)

Storage Temperature

14°F to 122°F (-10°C to 50°C)

Battery

3 "AA" LR6 Alkaline (not included)

Battery Life

1 to 2 Years (depending on use)

Optional A/C cord

6 volt (not included)

Support Information:

<http://www.lacrosseclock.com/support>

GET STARTED

Step 1:

Insert 3 new "AA" batteries (not included) into the Weather Radio. Observe the correct polarity on the battery compartment.

Step 2:

Turn On the Weather Radio. Use the ON/OFF button located on the right side of the radio.

Step 3:

Select listening mode. Use the MODE button located on the left side of the radio (AM, FM or WB).

Step 4:

Select station. Use the channel UP/DOWN arrow buttons located on the right side of the radio.

WEATHER ALERTS*

Use the MODE button to select Weather Band (WB) mode. The radio must be in WB mode to receive alerts automatically.

DURING AN ALERT:

- The LCD Backlight will change from BLUE to RED and will flash.
- The top red LED light will also flash (every 2 seconds for 5 minutes).
- The volume will increase to maximum level 16 for 5 minutes. Use the VOL buttons (▲▼) to adjust the volume.
- When alert sounds, press and hold the MODE button to place radio back to WB standby.

STANDBY:

- When in WB mode, hold the MODE button for 2 seconds to enter WB Standby.
- When in Standby, the red LED on top will slowly flash (every 5 seconds).

STANDBY/ALERT RED LED LIGHT (on top)

- Will flash every 2 seconds during weather alert.
- Will flash every 5 seconds in WB standby mode.

LCD BACKLIGHT

- Blue backlight turns on for 10 seconds for any button press.
- Backlight will change to RED Color and flash during a weather alert (every 2 seconds for 5 minutes).

AM/FM RADIO MODES

1. When the radio is ON, press the MODE button toggle between:
AM radio // FM radio // WB radio
2. Use the CH buttons (▲▼) to select the station.
3. Hold the CH buttons to search for the next available station.
4. Press the VOL buttons (▲▼) to adjust volume.

TELESCOPING ANTENNA

- Fully extend the telescoping antenna to receive a steady strong signal.
- Place the radio near a window if you are indoors for best reception.

WHITE LED FLASHLIGHT HI/LOW/OFF

- Press and Hold the LIGHT button to turn ON at high intensity (100%).
- Press and Hold again to turn to low intensity (5%).
- Press and Hold a third time to turn the light OFF.

OPTIONAL A/C POWER CORD

- For A/C adapter purchase info, visit: www.lacrossecclock.com/t83738
- Plug 6.0V adapter (not included) into the wall outlet and into the DC power port on the side of the radio.
- Turn radio on, select mode and station, then adjust volume.

OPTIONAL EARPHONES

- Plug in a set of 3.5mm earphones (not included) into the earphone jack to listen privately to the radio.

DISCLAIMER

* Disclaimer: La Crosse McCormick, LLC. ("La Crosse") provides various alert options to aid users. La Crosse shall not be liable for accuracy, usefulness or availability of information transmitted via the service. Users are solely responsible for damages to persons or property by service use.

CARE AND MAINTENANCE

- **Do not mix old and new batteries**
- **Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries**
- **Radio is not waterproof.**
- Extreme temperatures, vibration, and shock should be avoided to prevent damage to the units.
- Clean with a soft, damp cloth. Do not use solvents or scouring agents; they may mark the radio.
- Do not submerge the weather radio in water.
- Opening the casing invalidates the warranty. Do not try to repair the unit.
- Do not leave in vehicle in extreme temperatures.

WARRANTY: 1-Year Limited Warranty

La Crosse McCormick, LLC warrants that if the accompanying product proves to be defective to the original purchaser in material or workmanship within 1-year from the original retail purchase, La Crosse McCormick, LLC will, at La Crosse McCormick, LLC's option, either repair or replace same without charge (but no cash refund will be made).

SERVICE PROCEDURE

Please follow the procedure below to ensure the radio is properly serviced and returned. Failing to follow the procedures may result in delays or loss of product.

1. **PROOF-OF-PURCHASE:** Include some form of proof-of-purchase.
2. **RADIO:** Enclose the Weather Band Radio.
3. **PROPER PACKING:** Pack the radio securely to prevent damage during transit. Use original packing material if possible.
4. **PROBLEM DESCRIPTION:** Enclose a detailed written description of the problem.
5. **CONTACT INFORMATION:** Enclose a typed or clearly printed name, address and phone number where you can be contacted during the day M-F.
6. **PREPAID TRACEABLE CARRIER:** Ship the package with the contents listed above, prepaid and insured by way of traceable carrier (to avoid loss in transit). The Manufacturer is not responsible for units not received if the package has not been properly insured.

Mail to:

La Crosse McCormick
Warranty Department
2817 Losey Blvd S
La Crosse, WI 54601

7. **REPAIR/EXCHANGE:** The radio will be repaired or exchanged upon its receipt if it is under warranty.
8. **SERVICE TIMELINE:** Please allow approximately 2-4 weeks for the radio to be serviced under warranty.

Support: www.lacrossecclock.com/support

Contact Support: 1-608-782-1610

Product Registration: www.lacrossecclock.com/register



**Scan for full Manual
Model No.: T83738**

FCC Statement

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.