

Projection Alarm Clock

 
with Indoor Temperature



Model: W85923v3
DC:022818

POWER UP

1. Insert the stand into bottom of clock.
2. Insert the 4.5 volt power cord into an outlet, then into your clock. Optional: Install 2-AAA batteries into your clock.

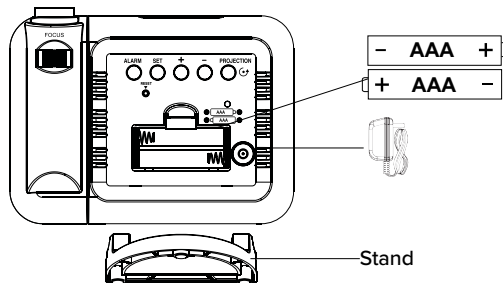


SETTINGS

- Hold then release the SET button to enter time set mode.
- Press and release the + or - buttons to adjust the values. Hold to adjust quickly.
- Press and release the SET button to confirm and move to the next item.
- Press the SNOOZE/LIGHT button at any time to exit.

Time set order:

- | | |
|---------------------------|-----------------------|
| 1. 12/24 hour time format | 5. Month |
| 2. Hour | 6. Date |
| 3. Minutes | 7. Fahrenheit/Celsius |

 PROJECTION

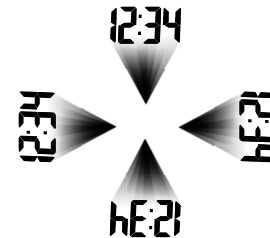


Rotate Projection:

- Press and release the PROJECTION button to rotate the image.
- The projected image can be rotated in 90 degree increments.

Focus Projection:

- Use the Focus Wheel on the back of your projection arm to provide a clear projection image.

 Note: Power cord use is required for projection.

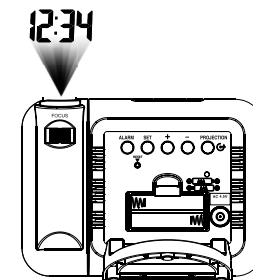

ADJUSTABLE BACKLIGHT

- **Power Cord:** Backlight and projection are on constantly. Press SNOOZE/LIGHT to adjust the backlight: High-Medium-Low-OFF.
- **Batteries only:** Press the SNOOZE/LIGHT button for a 10 second backlight and projection.

OTHER BUTTON FUNCTIONS

- **Hold ALARM:** Set alarm time. Use + or - buttons to adjust. Press ALARM button to confirm.
- **Press ALARM:** to activate/deactivate time alarm.
- **Press SNOOZE/LIGHT:** Press SNOOZE (when alarm sounds): To silence alarm for 10 minutes.
- **Press SNOOZE/LIGHT:** To adjust backlight. Press at any time to exit setting mode.
- **Press RESET:** Press once with pen or paper clip if buttons are not responsive. This restores clock to default settings.

WE'RE HERE TO HELP!

FIND FULL MANUALS, FAQs, AND MORE UNDER THE **SUPPORT** TAB HERE: <http://bit.ly/W85923v3>

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



WARRANTY INFO

NEED MORE HELP?

Our knowledgeable customer support team is available: Monday-Friday, 8am-6pm CST. **Phone:** 1.608.782.1610

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

For Full Warranty Details, Visit:

www.lacrossetechnology.com/support

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

CANADA STATEMENT

This device complies with CNR Industry Canada license -exempt devices. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.