


Atomic Digital Wall Clock



Model: W88631
DC: 012318

POWER UP

- Install 2-AAA batteries into your clock.
- For detailed instructions on how to power up your clock, please review the full manual at: <http://bit.ly/W88631>

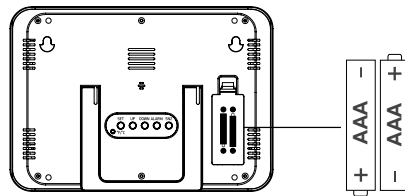

SETTINGS

1. Hold the SET °F/°C button to enter the settings menu.
2. Press the UP or DOWN buttons to adjust the values.
3. Press the SET °F/°C button to confirm adjustments and move to the next item.

Settings Menu Order:

1. WWVB time signal (On/Off)
2. Time Zone - 7 time zones
3. DST (Daylight Saving Time On/Off)
4. Hour
5. Minutes
6. Year
7. Month
8. Date

Time Zones
AST = Atlantic
EST = Eastern
CST = Central
MST = Mountain
PST = Pacific
AKT = Alaska
HAT = Hawaii

WWVB ATOMIC TIME

- The clock will search for WWVB Atomic time signal for 8 minutes after batteries are installed. Tower flashes.
- If can receive the signal within these 8 minutes, it will only search after midnight every day. (UTC 7:00, 8:00, 9:00, 10:00, 11:00)
- If it can not receive the signal within these 8 minutes, it will search every 2 hours (8 minutes per time) until it receives, then start to search after midnight every day.
- Hold the DOWN for 3 seconds to start or stop a search for the WWVB Atomic Time signal.
- For information about WWVB Atomic Time visit: <http://bit.ly/AtomicTime>

OTHER BUTTON FUNCTIONS

ALARM: Hold to enter alarm settings. “AL” will show. Use UP and DOWN buttons to adjust. Press ALARM to confirm.

ALARM: Press to view alarm time. Press again to activate or deactivate time alarm.

SNZ: When alarm sounds press SNZ to silence alarm for 10 minutes. Zz will flash.

SET °F/°C: Press to select Fahrenheit or Celsius temperature display.

LOW BATTERY INDICATOR

- When the low battery indicator appears above the seconds, replace batteries in your clock.

WE'RE HERE TO HELP!

FIND FULL MANUALS & FAQs UNDER THE **SUPPORT TAB** AT:
<http://bit.ly/W88631>

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



NEED MORE HELP?

If you require additional support, call our friendly customer support representatives based out of our office in La Crosse, Wisconsin.

Phone: 1.608.782.1610

Our knowledgeable customer support team is available Monday-Friday, 8am-6pm CST.

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

For Full Warranty Details, Visit:
www.lacrossetechnology.com/support

SPECIFICATIONS

Indoor Temperature Range: 32°F to 122°F (0°C to 50°C)
Power Requirements: 2-AAA, IEC, LR3 batteries (not included)
Dimensions: 7.80" L x 1.10" W x 5.47" H (198.12 x 27.94 x 138.93 mm)

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use;
- Clean the battery contacts and also those of the device prior to battery installation;
- Ensure the batteries have with correct polarity (+ / -)
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

CANADA STATEMENT

This device complies with CNR Industry Canada license -exempt devices. Operation is subject to the following two conditions:
(1) This device may not cause interference; and
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.