


## Multi-Color Alarm Clock



Model: W88723  
DC: 012218

### POWER UP

1. Insert the 5V adapter into the outlet, than into your clock.
2. (Optional): Insert two fresh AAA batteries (not included) into your clock.

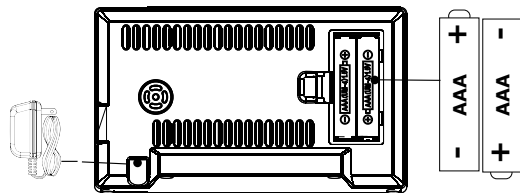

### SETTINGS

1. Hold the SET button to enter the settings menu.
2. Press the + or - buttons to adjust the values.
3. Press the SET button to confirm adjustments and move to the next item.

#### Setting Menu Order:

1. Hour
2. Minutes
3. Year
4. Month
5. Date

**Note:** Weekday will set automatically when year, month and date are set. If weekday is incorrect, check the year setting.

### FAHRENHEIT | CELSIUS SELECTION

- Press and release the - button to switch between Fahrenheit or Celsius temperature display.

### 12/24 HOUR SELECTION

- Press and release the + button to switch between 12 hour or 24 hour time display.

### ADJUSTABLE BACKLIGHT

- Power adapter required for a constant backlight.
- Press and release the LIGHT HI-LOW-OFF button to adjust the backlight brightness or turn backlight off.
- When operating on batteries only, press the LIGHT HI-LOW-OFF button to briefly activate the backlight.

### MOON PHASE



- The clock will show one of the eight phases of the moon and change throughout the month.

### SET ALARM 1 OR ALARM 2

1. Press and release the ALARM button to select Alarm 1 or Alarm 2.
2. Hold the ALARM button for 5 seconds to enter alarm settings. The alarm hour will flash.
3. Press the + or - buttons to adjust the alarm hour.
4. Press the ALARM button to confirm and move to the alarm minutes.
5. Press the + or - buttons to adjust the alarm minutes.
6. Press the ALARM button to confirm and exit.

### ACTIVATE | DEACTIVATE ALARMS

- Press and release the ALARM button to select Alarm 1 or Alarm 2.
- Press the SET/ALARM ON/OFF button to activate the selected alarm. Once activated, the bell icon appears.
- Press the SET/ALARM ON/OFF button again to deactivate the selected alarm. The bell icon will disappear.

### SNOOZE

- When the alarm sounds, press the SNOOZE/LIGHT button to trigger snooze alarm for 9 minutes.
- The snooze icon Zz will flash next to your time.
- Press any button to turn off the snooze feature when the snooze alarm sounds. The snooze icon will disappear.

USB CHARGING PORT

There is a 1 Amp USB charging port on the side of the clock.

- Connect your external device’s USB charging cable (not included) to the USB charging port.

- Charging times will vary.

- USB Power Output: 1A maximum current.

- Charge 1A devices or devices that are self-regulating.

TEMPERATURE TREND ARROWS

The temperature (2°F / 1°C) trend indicators update every 30 minutes or less.

**UP Arrow** = Temperature has risen in the past 3 hours

**Right Arrow** = Temperature has not changed in the past 3 hours

**Down Arrow** = Temperature has fallen in the past 3 hours

WE’RE HERE TO HELP!

FIND FULL MANUALS & FAQs UNDER THE **SUPPORT TAB** AT:  
<http://bit.ly/W88723>

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



NEED MORE HELP?

If you require additional support, call our friendly customer support representatives based out of our office in La Crosse, Wisconsin.

**Phone:** 1.608.782.1610

Our knowledgeable customer support team is available Monday-Friday, 8am-6pm CST.

SPECIFICATIONS

**Indoor Temperature Range:** 32°F to 122°F (0°C to 50°C)

**Power:** 5-volt power adapter, included AC 6: HX06-0501200-AU  
**Optional:** 2-AAA, IEC, LR3 batteries (not included)

**Dimensions:** 5.9” L x 1.9” W x 3.5 “ H (150 x 48 x 89 mm)

**USB Output:** 1 Amp maximum

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

**For Full Warranty Details, Visit:**  
[www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use;
- Clean the battery contacts and also those of the device prior to battery installation;
- Ensure the batteries have with correct polarity (+ / -)
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

CANADA STATEMENT

This device complies with CNR Industry Canada license -exempt devices. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Caution!**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.