

LA CROSSE[®]
TECHNOLOGY

MULTI-COLOR ALARM CLOCK




MODEL: W88723v2
DC: 032519

TABLE OF CONTENTS


- [3. Power up](#)
- [3. Features](#)
- [3. Custom Date Display](#)
- [4. Settings Menu](#)
- [5. Time Alarm](#)
- [6. Adjustable Backlight](#)
- [6. Auto Dim Backlight](#)
- [7. Moon Phase](#)
- [7. USB Charging Port](#)
- [7. Low Battery](#)
- [7. Specifications](#)
- [8. We're Here to Help](#)
- [8. Join the Conversation](#)
- [8. Warranty Info](#)
- [8. Care and Maintenance](#)
- [8. FCC Statement](#)
- [8. Canada Statement](#)

POWER UP

 1. Insert the 5 volt power cord into the outlet, then into your Alarm Clock. Optional: Insert 2-AAA batteries for backup.
2. Set time, date, etc.

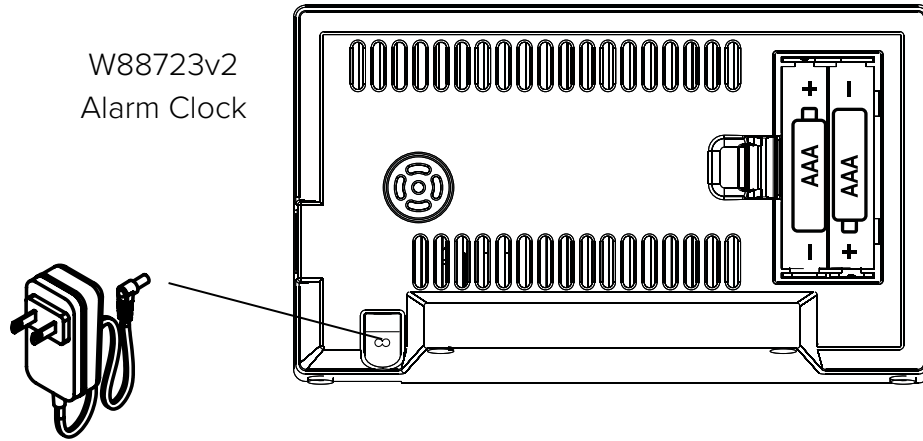


FEATURES

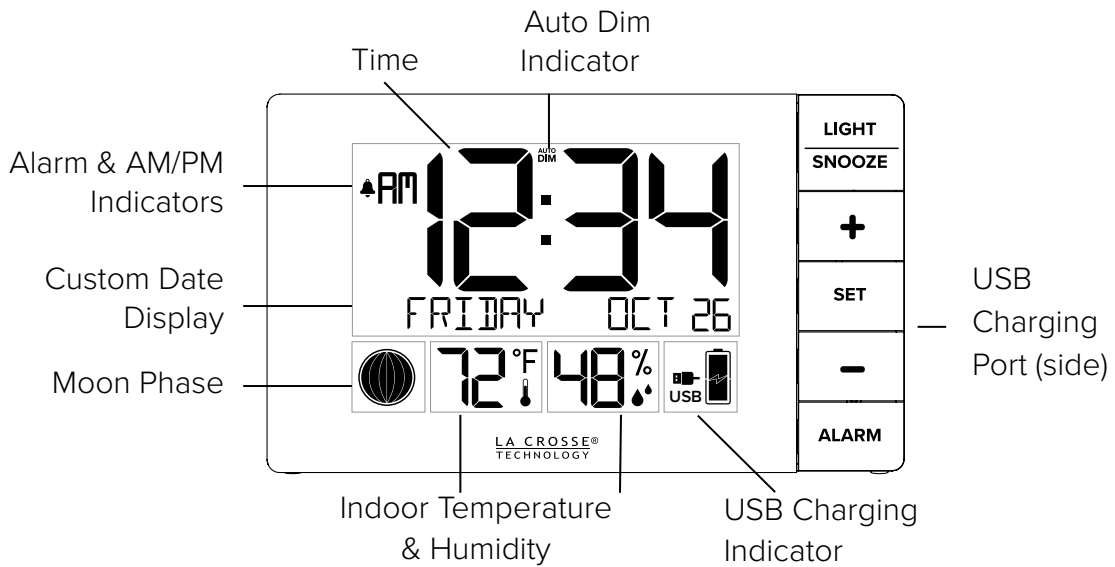 

CUSTOM DATE DISPLAY

 Press and release the SET button to change your Date Display.

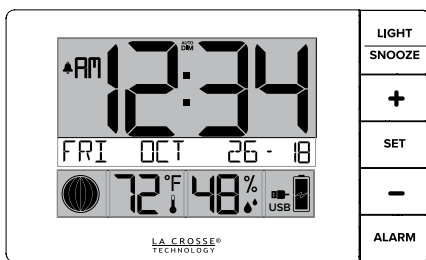

SETTINGS MENU

1. Hold the SET button 3 seconds to enter settings mode.
2. Press the + or - button to adjust the flashing values.
3. Hold the + or - buttons to adjust quickly.
4. Press the SET button to confirm adjustments and move to the next item.
5. Press LIGHT/SNOOZE button at any time to exit

Settings order:

- Language (English, Español, Français)
- Beep ON/OFF
- 12/24 Hour Time
- Hour
- Minutes
- Year
- Month
- Date
- Temperature Fahrenheit/Celsius

Note: Whichever language is selected, the instructions will be in that language.

Note: Weekday sets as Year, Month and Date are set.

LANGUAGE



BEEP ON/OFF



 
12/24 HOUR FORMAT




HOUR



MINUTES

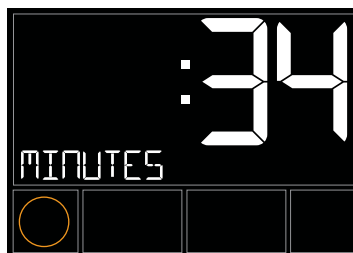

YEAR

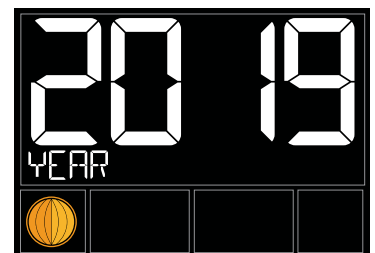 


MONTH



DATE



 
FAHRENHEIT/CELSIUS

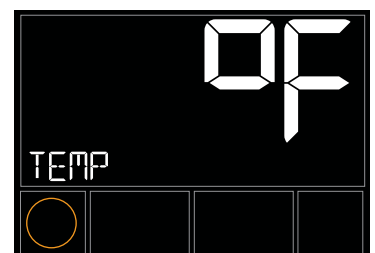

TIME ALARM

1. Hold the ALARM button for 3 seconds to enter alarm time set mode. The alarm hour will flash. Press the + or - buttons to set alarm hour
2. Press the ALARM button to confirm and move to the minutes. The alarm minutes will flash. Press the + or - buttons to set the minutes.
3. Press the ALARM button to confirm and move to snooze duration. The snooze time will flash and start at the pre-set of 10 minutes. The date area will read "SNOOZE". Press + or - buttons to set snooze duration. Increase or decrease in 5 min intervals up to 120 min.
4. Press and release the ALARM button to confirm and exit.

 Note: The alarm is crescendo sound. When the alarm sounds, it continues for 2 minutes and then shuts off completely.

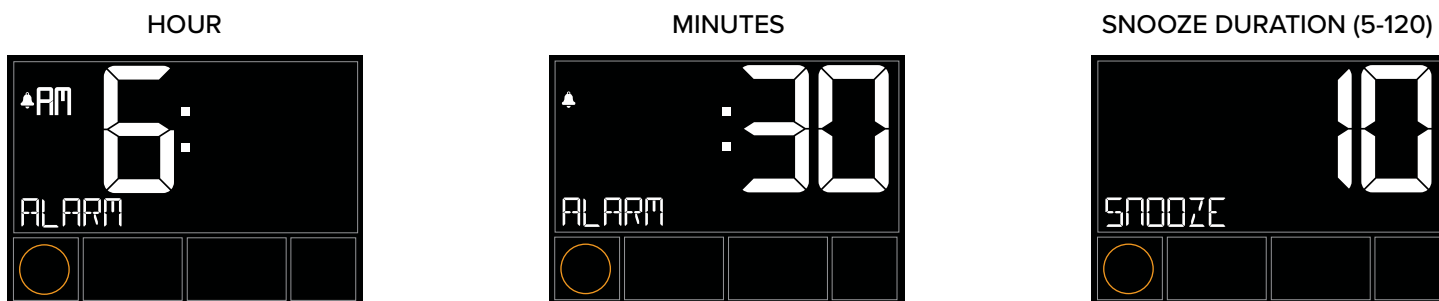

Deactivate/Activate Alarm:

1. From normal time display, press and release the ALARM button to activate or deactivate alarm.
2. Alarm time will show for 3 seconds (with or without bell icon). Everything else disappears on screen.
3. Alarm icon will show when active and disappear when deactivated.
 - Alarm icon will flash when alarm sounds.
 - When alarm sounds, press any button except for LIGHT/SNOOZE to stop ringing for one day




Snooze

- When alarm sounds, press LIGHT/SNOOZE button to stop the alarm and activate SNOOZE function. SNOOZE - duration will show in date area. Alarm icon will flash.
- During snooze count down, press any button except for LIGHT/SNOOZE to exit snooze count down
- When snooze alarm sounds, SNOOZE – duration “00 m 00” will flash. Clock will beep for 2 minutes then return to normal display or press any button to stop ringing and return to normal display. Press any button except for LIGHT/SNOOZE to stop alarm and exit snooze function.
- Repeat: When snooze alarm sounds, SNOOZE – duration “00 m 00” will flash, for up to 2 minutes with alarm sounding. Press LIGHT/SNOOZE button to stop the sound and activate the snooze function again.



ADJUSTABLE BACKLIGHT


- Press and release the LIGHT/SNOOZE button to adjust the backlight 5 levels of intensity. Intensity Levels: OFF | 1.5% | 20% | 50% | 100%.
- The word BACKLIGHT and the intensity level will show.

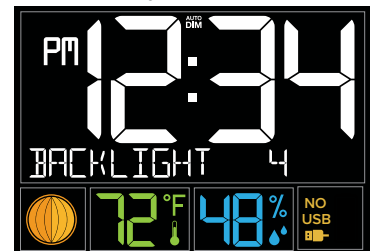 

AUTO DIM BACKLIGHT

The AUTO DIM setting allows you to select a time when your backlight will dim to level 1 and a time it will return to level 4.

 1. Hold the LIGHT/SNOOZE button to enter the Auto Dim settings.
2. Use the + or - button to turn the Auto Dim feature ON or OFF. Press the LIGHT/SNOOZE button to confirm.
3. If ON was selected, START TIME will flash on screen. Use the + or - buttons to adjust your Auto Dimmer's starting hour. Press the LIGHT/SNOOZE button to confirm.
4. STOP TIME will flash. Use the + or - buttons to adjust your Auto Dimmer's ending hour. Press the LIGHT/SNOOZE button to confirm and exit.

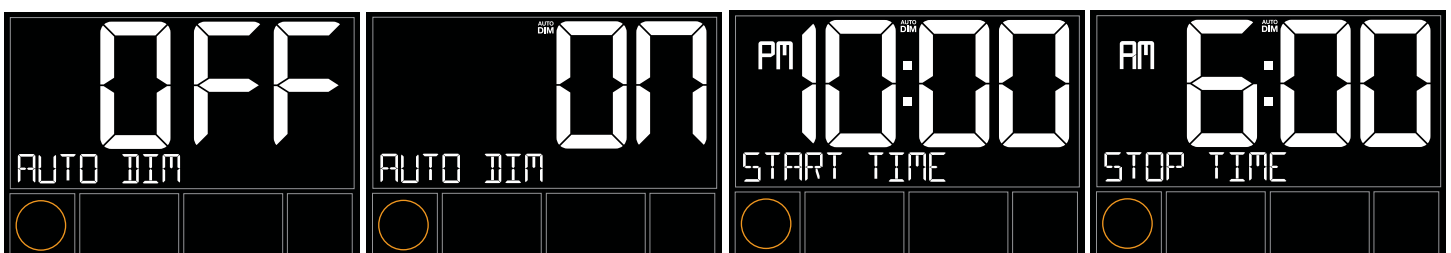

MOON PHASE

The 12 Moon Phase icons are based on the lunar calendar and will adjust according to the year, month, and date you have set.



New Moon



Small Waxing Crescent



Large Waxing Crescent



First Quarter



Small Waxing Gibbous



Large Waxing Gibbous



Full Moon



Large Waning Gibbous



Small Waning Gibbous



Last Quarter



Large Waning Crescent

 


Small Waning Crescent

USB CHARGING PORT

There is a 1 Amp USB charging port on the side of your clock.

- Connect your external device's USB charging cable (not included) to the USB charging port. CHARGING will show for 3 seconds. The USB Charging Indicator will show.
- Charging times will vary.
- USB Power Output: 1A maximum current.
- Charge 1A devices or devices that are self-regulating.

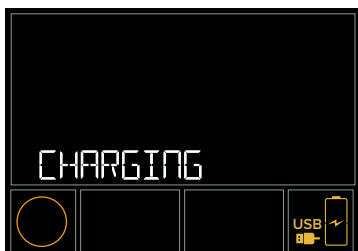

No USB Connected



USB Connected Charging



Fully Charged



LOW BATTERY INDICATOR

The Low Battery Indicator will show below the colon when the batteries need to be replaced in the clock.

SPECIFICATIONS

Indoor:

Temperature Range: +32°F to +99°F (0°C to 37°C)

USB Output: 1 Amp maximum

Power: 5-volt power adapter, included AC 6: HX075-0501200-AU-001

2-AAA, IEC, LR3 batteries (not included)

Battery Life: Battery life is over 24 months

Dimensions: 5.9" L x 1.9" W x 3.5" H (15.0cm L x 4.8cm W x 8.9cm H)

WE'RE HERE TO HELP

If you require additional support, call our friendly customer support team based out of La Crosse, Wisconsin.

 
Phone: 1.608.782.1610

Or fill out our online support request form here: bit.ly/contact_techsupport

Our knowledgeable customer support team is available: Monday-Friday, 8am-6pm CST.

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!

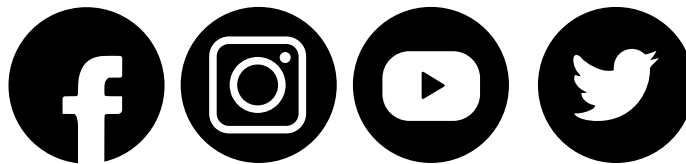

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

For Full Warranty Details, Visit: bit.ly/contact_techsupport

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

CANADA STATEMENT

This device complies with CNR Industry Canada license -exempt devices. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.



WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov