


Replacement Wind Cups

Replace Wind Cups: WCTX141W


1. Loosen the screw on side of cups
2. Remove cups
3. Install new cups
4. Tighten screw on flat side of stem



Insert and Attach
Flat End up

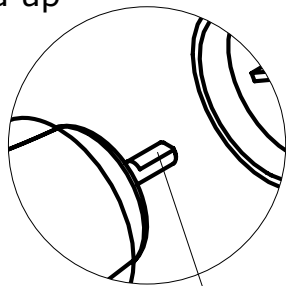

Flat Side Of
Stem Up

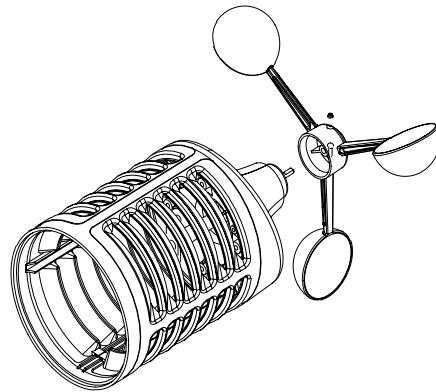

Caution

- Do not oil or use lubricants on sensors as this causes dirt to collect.
- Do not use insect repellents on sensors as this may damage the sensor.