


Replacement Wind Cups | Wind Directional Vane


Replace Wind Cups: WCTX231RW

1. Loosen the screw on side of cups
2. Remove cups
3. Install new cups
4. Tighten screw on flat side of stem

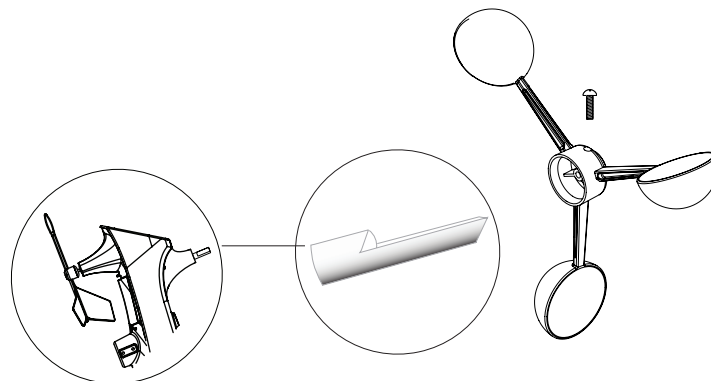

Replace Directional Vane: WVTX231RW

1. Loosen the screw on side of vane
2. Remove direction vane
3. Install new vane
4. Tighten screw on flat side of stem

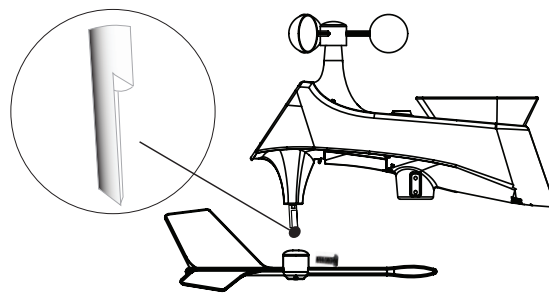

Caution

- Do not oil or use lubricants on sensors as this causes dirt to collect.
- Do not use insect repellents on sensors as this may damage the sensor.

DC: 111116