

# Replacement Wind Cups



## Replace Wind Cups: WCTX231W

1. Grasp cups firmly and pull up to remove.
2. Place new wind cups over sensor and press down firmly until seated.
3. That's it!



### Caution

- Do not oil or use lubricants on sensors as this causes dirt to collect.
- Do not use insect repellents on sensors as this may damage the sensor.