


## Window position and function buttons

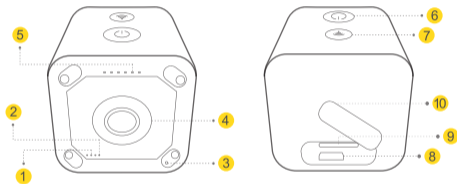

- 1 Charging indicator light (red)
- 2 Wifi indicator light(yellow)
- 3 Video resolution color display
- 4 Camera lens

- 5 Camera dual microphone recording hole position
- 6 ON/OFF and resolution selection button
- 7 WIFI, record and stop Button
- 8 USB charging and communication interface
- 9 TF card slot
- 10 USB, TF card protection cover

## Functional operation instructions

### 1.charging indicator light

(Red light flashing when charging, Full charge the indicator lights go out automatically)

### 2.Wifi indicator light

(Yellow light flashing when WIFI turn on, light off when WIFI turns off.)

### 3.Video resolution color display

The resolution button switch has four modes as follows :

- > 1. Red light: 4K30 frames, recording red light flashing
  - > 2. Green light: 1080P120 frames, recording green light flashing
  - > 3. Blue light: 1080P60 frames, recording Blue light flashing
  - > 4. Yellow light: 720P120 frames, recording Yellow light flashing
- \* Other resolutions should be selected in the APP recording resolution


### 4.Buttons Function

#### ON/OFF and resolution button :

short press to switch the resolution, long press for 5 seconds to ON/OFF the camera (note: resolution switching is not supported when recording, please stop the recording and then switch the resolution)

#### WIFI, Video and Stop button :

Short press to start and end recording, long press 5 seconds to open or close WiFi (In the course of video recording, WiFi and other operations are not supported Stop recording before other functions can be operated)

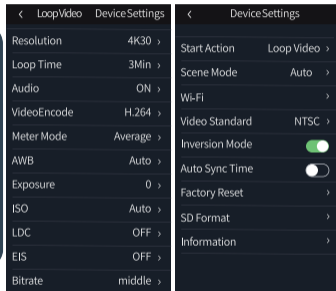

## APP instructions

- 01** Please download the APP first. Searching the APP name “CaddxFPV” on Google Play (Android) or APPstore (IOS) to download.
- 02** Connect the camera to power. Long press the power button(position 6) for 5 seconds to turn on the camera.
- 03** Connect the camera WIFI. Long press the WIFI button(position 7) for 5 seconds, the yellow light (position 2) will flash, then into app, click “connecting immediately”, find the WIFI “CADDX\_\*\*\*\*\*”, input password(default password is 12345678),

WIFI connected successful, then return to the APP.

- 04** Formatting the TF card in app. Inset the TF card into slot(position 9), then format the TF Card in device Settings menu of APP.
  - 05** User can enter settings menu and device settings menu of the APP to switch the settings.
- >PS** Power on the camera starts recording automatically, if want to turn off the automatic recording, pls enter Device settings—start action, select last mode.

## Troubleshooting

- Orca only support 2.4G WIFI, not support 5G WIFI.
- TF card up to 256G.
- If can not record, no card recognition, no card display, Please connect to the mobile phone, format the TF card in APP or fat32 64kb on the computer with TF reader.
- If an exception occurs after the setting of APP, do not know how to restore it, please select "Restore Factory Settings" in APP and test again to see if the problem is eliminated.
- USB interface power: 5V2A.