


# Access Display Group, Inc.

TEL: 800-289-1539 FAX: 877-842-5126

E-MAIL: [customerservice@accessdisplaygroup.com](mailto:customerservice@accessdisplaygroup.com)

## Instruction Sheet

### Outdoor Magnetic Menu Case

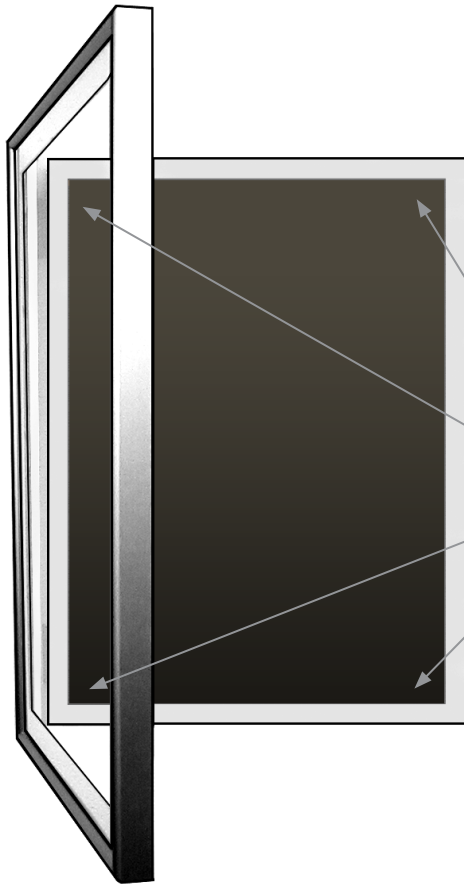

#### Step 1

Drill holes in each of the four corners of the magnetic backing (make sure drain holes are on the bottom of the unit when drilling into wall).

#### Step 2

Drill screws into the wall (use washers to protect the magnetic backing from the screw pressure).

#### Step 3

Outdoor rated clear sealant can then be used to close up any holes to protect the display.



**Simple hand tools required:** Level, Drill, Screwdriver