Access Display Group, Inc.

TEL: 800-289-1539 FAX: 877-842-5126

E-MAIL: customerservice@accessdisplaygroup.com

Instruction Sheet

Hilltop Retractable X **Banner Stands**



•Open the legs in plus (+) position.



•Open the top clamp profile and place in the poster. Place in the other end of poster to bottom clamp.



 Complete the assembly of 3 part pipe.



• Hang the banner by sliding the plastic connectors over the pipe.



•Screw the top and bottom plastic



• Fit in the pipe on the bar of the base.



