Access Display Group, Inc.

TEL: 800-289-1539 FAX: 877-842-5126 E-MAIL: customerservice@accessdisplaygroup.com

Instruction Sheet

Outdoor Enclosed Dry Erase Sign Stand







STEP 1.

Position frame over base, so the screw in the frame lines up with the hole in the base.

STEP 2.

Screw frame into base. (Do not spin the frame top), turn it slowly, otherwise the screw and hole may be damaged.

If your SwingStand has a Side Plunge Lock, simply align the door with lock fitting and press lock stem with finger to lock.