



Displays4Sale


Board Insertion Instructions

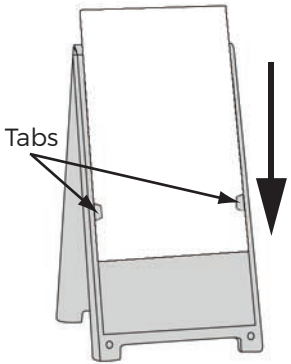


1. Slide board down through the tabs

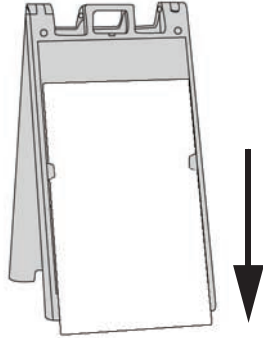

2. Slide through, pulling board in front of bottom slot until board hits the ground

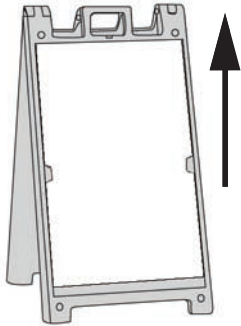

3. Push board up into top slot

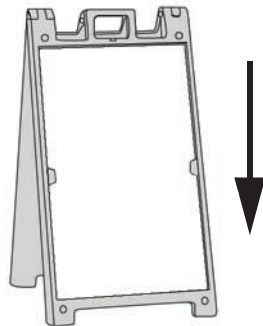

4. Slide board down into bottom slot

Sand Filling Instructions (Optional)



Each sign frame has four fill holes, two on each side of the frame.

Remove plug from fill hole and fill each hole with sand. 2.5 lbs. of sand per hole for a total of 10 lbs. per sign frame is recommended.

Play sand or dry sand is suggested for ease of filling.