

KEY PROGRAMMER & SUPER CHIP WITH UNIVERISAL REMOTE KEYS*4 SET



 
For key chip reading /identification/generation /frequency testing





UNIVERSAL REMOTE KEYS*4

USAGE SCENARIO





- 1.Wireless programming
- 2. Equipped with anti-theft chip
- 3. Uses the button cell 2032
- 4. Circuit board with a 2-year warranty
- 5. Repeatable writing
- 6. Batteries need to be installed while generating
- 7. Supports vehicles with 46, 47, MQB48, MQB49, 4A chips

LN3-PUGOT-01

USAGE SCENARIO




Certain chips in LN remote can't generate all vehicle models, it's needed to check whether the type of chip can support the vehicle model, the chip is integrated

FUNCTION

- 1. Wireless programming
- 2. Equipped with anti-theft chip 3. Uses the button cell 2032
- 4. Circuit board with a 2-year warranty
- 5. Repeatable writing6. Batteries need to be installed while generating
- 7. Supports vehicles with 11, 12, 13, 7936, 7937,7947, 7946 chips

LE3-VOLWG-01

 USAGE SCENARIO



- 1. Wireless programming
- 2. Equipped with a multimode chip
- 3. Uses a button cell 2032
- 4. Circuit board with a 2-year warranty
- 5. Repeatable writing
- 6. Batteries need to be installed while generating

LE4-FRD-01

USAGE SCENARIO



LE remote contains chip and remote, the multimode chip can generate most of the vehicle models and cover the majority of them.

- 1. Wireless programming
- 2. Equipped with a multimode chip
- 3. Uses a button cell 2032
- 4. Circuit board with a 2-year warranty
- 5. Repeatable writing
- 6. Batteries need to be installed while generating

SUPER CHIP



USAGE SCENARIO

Compatible with chips of most car models for conversion It can also be matched for vehicle starting.

FUNCTION

Supports 8A, 8C, 8E, 4C, 4D, 4E, 48, 7935, 7936, 7938, 7939, 11/12/13













THE METHOD OF KEY GENERATION

The LE Volkswagen and LE Ford Super Remotes as an Example

Enter the [Vehicle Remote] menu and select the corresponding available super remote to generate.




After the remote control is successfully generated, enter the [Set type of super chip] menu to generate the corresponding key chip.

2 Select the corresponding key and place the super remote key in the key programmer to generate.



HOW TO USE SUPER CHIP

Enter the menu [Set type of super chip] to generate.

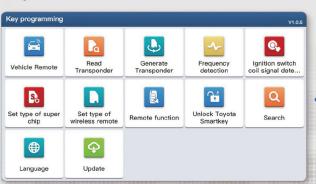

2 Select the corresponding key chip type and insert the super chip into the anti-theft induction coil.



Once successfully generated, it can be used.

