

Core All Grind User Manual

**ENJOY
BETTER
COFFEE
GRIND
FRESH**

BARISTA & CO



BARISTA & CO

Contents

Important Safeguards	2
Know Your Core All Grind Plus	4
Before First Use	4
Hopper Assembly	5
Before First Use	5
Tips	6
Burr Cleaning	6
Grind Size Setting	7
Control Panel	8
Grind Modes	8
Troubleshooting	10
Maintenance	10
Important Notes	11
Disposal	11
My Grind Settings	12



GB - Important Safeguards

1. Read all instructions.
2. Before use check that the voltage of the wall outlet corresponds with the one shown on the rating plate. Do not operate the grinder if it has been dropped or damaged.
3. If the cord or plug is damaged it must be replaced by an authorised service agent or a qualified technician. Please contact hello@baristaandco.com for further instructions.
4. Unplug from the power outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Please take care when handling the grinder burrs and during cleaning.
6. Do not let the cord hang from a table or bench and avoid hot surfaces such as cookers.
7. Do not immerse the grinder in liquid or place in the dishwasher. All components should be wiped clean only.
8. The Core All Grind Plus should never be used by children and ensure close supervision if it is in use near children.
9. Ensure fingers are kept away from moving parts and do not attempt to remove parts unless the power is disconnected.
10. Do not remove any components until the burr grinder has stopped completely.
11. Do not attempt to operate without the hopper being in place.
12. Do not turn on the grinder until the hopper has been loaded. Running with an empty load can damage the burr grinder and reduce the lifetime of your grinder.
13. Immediately turn off the grinder if you hear an abnormal sound during grinding, the grinder seems hot to touch or there is smoke during use. Contact hello@baristaandco.com so guidance from an authorised service agent can be provided.
14. Ensure the grinder is cleaned regularly and there are no foreign objects in the burr grind mechanism. Never clean when the power is connected.
15. Do not disassemble, repair or rebuild the burr grinder head unit. If damaged or worn a replacement should be purchased.
16. Do not plug and unplug the grinder with wet hands or any other wet material such as a cloth.
17. Do not drag, bend or twist the power cord.
18. Do not shake or knock the grinder at any point including cleaning.
19. Check the grinding chamber and burrs for the presence of foreign objects before use.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.
21. The grinder should only be used to grind coffee at home and is not for commercial use.
22. Avoid contacting moving parts. Do not attempt to defeat any safety interlock mechanisms.
23. This product has been designed for household use only. Any commercial use, inappropriate use, or failure to comply with the instructions will void the manufacturer's Warranty.
24. This appliance is only used for roasted coffee beans grinding. Do not use the appliance for other intended use (such as hard seeds, spice, nuts, etc.)
25. Every appliance is inspected strictly during mass production, and tested with coffee beans for grinding, which may cause slight traces of use or residual coffee grounds;
26. All machines are subject to stringent quality control. Practical tests using machines taken at random are conducted and this may explain any slight marks or coffee residue showing prior to use.
27. Do not use outdoors.
28. Misuse and failure to follow the grinder safeguards can cause injury.



GB - Know Your Core All Grind Plus



- A. Grind Size Adjustment
- B. LED Display
- C. Function Buttons
- D. Dose Cup Lid
- E. Dose Cup
- F. Upper Conical Burr
- G. Lower Conical Burr
- H. 53mm Portafilter Attachment
- I. 58mm Portafilter Attachment
- J. Bean Hopper Lid
- K. Bean Hopper
- L. Portafilter Attachment Switch
- M. Hopper Bellow
- N. Cleaning Brush



 

GB - Before First Use

1. Please recycle all the relevant packaging materials.
2. Remove any dust that may have accumulated during storage and packaging.
3. Rinse the bean hopper and dose cup with water and then dry thoroughly.

Power saving mode:



If without operation over 3 minutes, the unit enters Power saving mode automatically, press any button it restarts.

GB - Hopper Assembly

1. Make sure the top part of the conical burr is clear. If not, use the brush provided to clean the top part of the burr.
2. Align the unlock icon  on the base of the hopper with the arrow  on the Core All Grind Plus.
3. Turn the hopper clockwise until the lock icon  aligns with the arrow  and locks into position.



How to remove coffee hopper:

1. Make sure the grinder is unplugged. Press the hopper release lever located opposite the grind size markings.
2. Turn the Coffee bean box counter-clockwise until the unlock icon  aligns with the arrow  and lift it up.



NOTE: If the coffee bean box is not assembled properly, the coffee grinder won't work.

GB - Before First Use

1. Please recycle all the relevant packaging materials.
2. Remove any dust that may have accumulated during storage and packaging.
3. Rinse the bean hopper and dose cup with water and then dry thoroughly. **5**

GB - Tips

Tips for Grind On/Off button

- TIP 1.** After time mode or cup mode is set, press the on/off button to start grinding. Press again to stop grinding.
- TIP 2.** Under time mode, keep holding the on/off button, the display timer will count up to a maximum of 60 seconds from 10 seconds. When you release the button, the grinder stops grinding.
- TIP 3.** Under espresso mode, keep holding the on/off button, the display timer will count up to a maximum of 20 seconds from 8 seconds. When you release the button, the grinder will stop grinding.
- TIP 4.** Keep holding down the "SET" and "on/off" buttons together for approximately 2 seconds, the display shows "L.OF" indicating the outlet light is off. To turn the light on again, hold down the same buttons together, the display shows "L.ON". This setting will be retained even after unplugging.

Button sound on/off

Keep holding down the adjustment buttons "+" and "-" together approximately for 2 seconds. The display shows "OFF" indicating the press sound has been turned off. To turn the sound back on, hold down the same buttons together. Your sound setting preference will be retained even after unplugging.

GB - Burr Cleaning

Regular cleaning helps the burrs achieve consistent grinding results which is especially important for great, fresh coffee.



- 1.** Press hopper bellow five/six times then unlock and remove the hopper.



- 2.** Turn on the grinder in any mode and grind until empty.



- 3.** Remove the upper burr and brush clean with your cleaning brush.



- 4.** Clean the exposed lower burr with your cleaning brush.



- 5.** Push the upper burr firmly back into position and lock turning clockwise.



- 6.** Align and attach the bean hopper back into the locked position.

GB - Grind Size Setting

- Place your dosing cup in the correct position and with the lid off.
- Fill the hopper with your favorite coffee beans. Attach the bellow and lid.
- To adjust the grind size, rotate the coffee adjust from fine to cold brew to espresso and everything inbetween



Our Grind Size Setting Recommendations

	Cold Brew	French Press	Filter	Moka	Espresso
Coffee Type					
Grind Size	Coarse	Medium Coarse	Medium	Medium Fine	Fine
Grind Setting	50 - 44	44 - 34	34 - 15	15 - 7	7 - 1

GB - Control Panel

Button Operations:

The Core All Grind Plus has 4 buttons as shown below:



SET Button
Cup size & time



- Button
Reduce cup size and time



+ Button
Increase cup size & time



GRIND ON/OFF Button
Stop & pause

GB - Grind Modes

The amount of ground coffee is determined by the grind time. The grinder will stop automatically when the set total grind time has elapsed, adapt the grind time to your preference. The grinder has three operation modes for grind time; cup mode, time mode, and espresso mode.

Cup Mode

1. Without a portafilter attachment installed, the cup mode is active and the cup icon illuminates, four buttons are on a light. Use this mode for grinding into the dosing cup. Default: 1 cup is set at 4 seconds.
2. The cup number (1 to 12) can be increased or decreased by pressing the adjusting buttons "+" or "-".
3. The cup grind size can be adapted from between 3 and 5 seconds in 0.1 increments. Hold the SET button for approximately 1 second. The current cup time will flash on the display. This can be increased or decreased by pressing the adjusting buttons "+" or "-".
4. Then select the desired time on the adjusting button "+" or "-". By short pressing the "+" or "-" adjustment button, the time changes can be changed by 0.1 seconds with each press. Holding down the adjustments buttons will allow for a continuous change in time with one press.
5. Press "grind on/off" to start and grinding and again to stop mid-grind if required.

Note: In cup mode, the total grind time will be determined by the time selected per cup and then the number of cups selected (1-12). and the time selected per cup.

For example:

- Case 1: 1 cup time set at 4 seconds, when setting 2 cups, the total grinding time will be 8 seconds.
- Case 2: 1 cup time set at 4.5 seconds, 2 cups selected, the total grind time will be 9 seconds.

The cup time change will be memorized by the last setting set, even after being unplugged.

Time Mode

1. Without a portafilter attachment installed, to switch from cup mode to time mode, double-click the "SET" button. Time mode will be activated with the default time of "10.0s" showing on the LED display. Use this mode for grinding into the dose cup by time.
2. The time mode function ranges from 1 to 60 seconds. Time mode can be increased or decreased by pressing the "+" or "-" buttons. By short pressing the "+" or "-" adjustment button, the time changes can be changed by 0.1 seconds with each press. Holding down the adjustments buttons will allow for a continuous change in time with one press.
3. Time selection between 1 and 15 seconds has increments of 0.1 seconds. Time selection between 16 and 60 seconds has increments of 1 second.
4. Press "grind on/off" button to start and grinding and again to stop mid-grind if required.
5. Double-click on the SET button to return back to cup mode.

Note: Time mode will always reset to 10 seconds after each time of use.



Espresso Mode

Espresso mode allows you to grind directly into your portafilter.

1. Attach the correct portafilter attachment onto the grinder. The chosen portafilter attachment should attach horizontally and be stable in the correct position.
2. With the attachment installed, the espresso mode will be activated automatically and the espresso icon will be shown on the LED display. The SET button will turn off. The "-", "+" and grind-on buttons will still be on.
3. The default grind time in espresso mode is 8 seconds. Select total grind time from 5 - 20 seconds by pressing the adjusting buttons "+" or "-" to select the desired amount. By short pressing the "+" or "-" adjustment button, the time changes can be changed by 0.1 seconds with each press. Holding down the adjustments buttons will allow for a continuous change in time with one press.
4. To start grinding, push your portafilter into position to activate the grinding process. Push the portafilter in again to stop grinding. No need to use the "grind on/off" button on the display.



GB - Troubleshooting

Code Display	Trouble Description	Trouble Solution
 E1	The coffee bean hopper isn't assembled correctly.	Reassemble the bean hopper or tighten the bean hopper until the microswitch is closed, once correctly assembled the error code E1 on the display disappears.
	The motor is overheating.	Unplug the power cord, wait 10 minutes for the unit to cool down, then restart.
 E2	Total operating is 4 cycles, it power off automatically to protect the unit.	Unplug the power cord, wait 10 minutes for the unit to cool down, then restart.

GB - Maintenance

- To keep all your coffee as fresh as possible, we would recommend weighing out your beans each time you grind. Keep your coffee stored in the original bag, in a dry dark place.
- Always unplug the Core All Grind Plus for the power outlet before cleaning.
- Never place the grinder, power supply cord, or plug in water or under running water.
- Do not use strong detergents or abrasive pads to clean the appliance.
- Clean your dosing cup in warm, soapy water.
- To remove the upper burr, lift the wire handle and turn counterclockwise, then raise and remove the burr. Clean with your cleaning brush.
- With your cleaning brush also clean lower burrs while they are exposed.
- Carefully give the whole grinder a clean with a damp cloth.
- To replace the upper burr, insert the burr and turn it once in the clockwise direction. For proper alignment, residual coffee and coffee grounds in the lower burr will need to be cleared.

GB - Important Notes

For your Core All Grind Plus to run correctly, make certain that:

- The lid of the dosing cup has been removed before grinding.
- The dosing cup is correctly placed in the body of the grinder and the lid has been removed.
- This grinder is equipped with an overheat protective device. If the appliance overheats, it will switch off automatically. In this case, let it cool down for 30 minutes then restart.
- Use your bellow after every use to reduce residual coffee in the grinder.

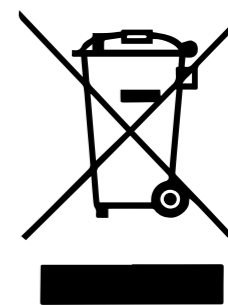
WARNINGS:

- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
- Children should not play with the appliance.

GB - Disposal

This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

You can help protect the environment! They can take this product for environmentally safe recycling. Please remember to respect the local regulations and hand in any broken electrical equipment to an appropriate waste disposal center.



GB - My Grind Settings

Coffee	Grind Setting	Date	Notes
		.../.../...	
		.../.../...	
		.../.../...	
		.../.../...	
		.../.../...	

Coffee	Grind Setting	Date	Notes
		.../.../...	
		.../.../...	
		.../.../...	
		.../.../...	
		.../.../...	