



## Alignment Bar RE

For aligning the paving stones before they are permanently set.

- With two handles, a foot bar and a hammering surface to drive it into the paver joints using a hammer.
- With exchangeable, robust, sharp-edged hardened spring steel blade for driving into the hinge joints.
- Durable galvanized surfaces.

RE

Type	Dead Weight kg (lbs)	Order-Number
RE	2.7 (5.95)	51800011

### Spare Parts:

Type	Description	Dead Weight kg (lbs)	Order-Number
Spare blade for RE/MRE	(95 mm / 3.74 inch) per piece, loose	0.14 (0.31)	41800002
Spare blade for RE/MRE	(95 mm / 3.74 inch) 1 piece in blister pack	0.16 (0.35)	41800241



## Multiple Alignment Bar MRE

The „Turbo Accelerator“ for alignment work: Instead of moving only one row of pavers, the MRE can move 4 or up to 5 rows at the same time.

- Especially suitable for alignment work on mainly rectangular shaped pavers.
- With 4 exchangeable, adjustable, sturdy, sharp edged hardened spring steel blades.
- With 2 handles and one hammering surface to drive it into the paver joints.
- Durable galvanized surfaces.

MRE

Type	Working Width mm (in)	Dead Weight kg (lbs)	Order-Number
MRE	650 (25.59)	6 (13)	51800045

### Spare Parts:

Type	Description	Dead Weight kg (lbs)	Order-Number
Spare blade for RE/MRE	(95 mm / 3.74 inch) per piece, loose	0.14 (0.31)	41800002
Spare blade for RE/MRE	(95 mm / 3.74 inch) 1 piece in blister pack	0.16 (0.35)	41800241