

## Directions for use

- CreteBeater **must not be diluted with water**. Mix 1 to 1 with air in a foamer for best results. CreteBeater works by attacking and separating the lime bondings in anything cementitious. As water contains lime - diluting CreteBeater with water uses up some of the active ingredients and weakens the formula.
- Only fill the foamer half way with CreteBeater, this leaves enough room for air to mix with the product.
- Pressurise foamer until pump handle has resistance.
- Half depress or feather the trigger until foam comes out at the desired consistency. This should be roughly as thick as shaving foam. This ensures that CreteBeater will adhere to vertical or inverted surfaces.
- Apply a thick layer of CreteBeater and allow to soak in. **CreteBeater needs to be active for 30-40 mins. CreteBeater is only active while wet – In summer conditions or warm weather CreteBeater may have to be re-applied 2-3 times to ensure that it remains wet and therefore active for the full 30=40 mins.**
- For very thick or strong encrusted concrete - apply a layer of CreteBeater, allow to soak in for 5 mins then agitate with a stiff nylon brush. If you then apply a second coat and allow to soak in for 30 mins you will have sped up the process.
- When CreteBeater has finished working its way through the layers it will have turned the concrete to a flaky paste. A visible sign of this will be the surface cracking, flaking and peeling.
- For best results use a pressure washer to remove CreteBeater and the concrete.
- If there are any white dusty marks left after the clean down, just rinse off again. These white marks will not reform as cement.
- If after the first clean there is any concrete remaining CreteBeater will remove the rest during subsequent cleans. CreteBeater is intended to be used little and often as part of a regular cleaning / maintenance schedule. If you are removing thick layers of old concrete or returning a vehicle or piece of equipment back to its original concrete-free state then multiple applications may be necessary. **Once you have removed all the existing or old concrete, a regular light dusting of CreteBeater should be all that is necessary to keep your vehicle or equipment concrete-free.**
- After using CreteBeater use the release valve on the foamer to release pressure and rinse filters under a tap.