

COSORI®

 


User Manual

Dual Blaze™ 6.4-Litre Smart Air Fryer

Model: CAF-P583S-AEUR

CAF-P583S-KEUR

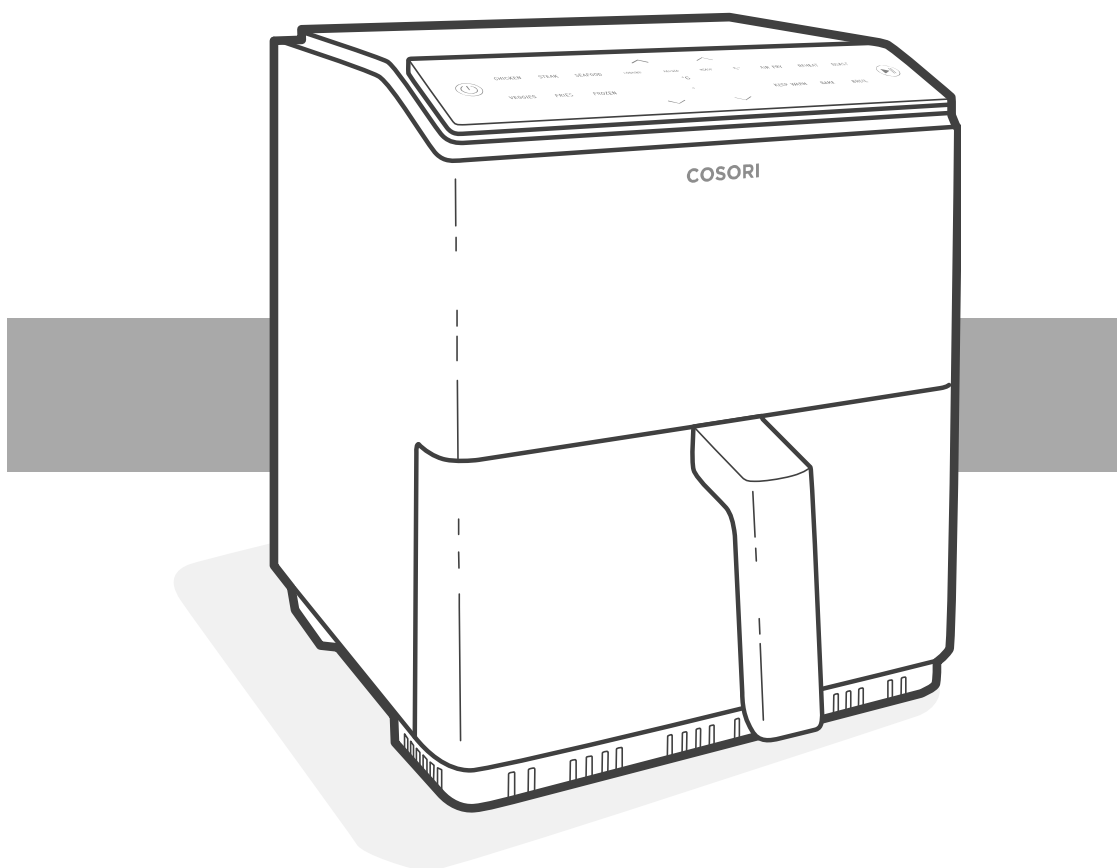

Questions or Concerns?

support.eu@cosori.com

EN • ENGLISH

Table of Contents

Package Contents	4
Specifications	4
Important Safeguards	5
VeSync App Setup	8
VeSync App Features	8
Getting To Know Your Smart Air Fryer Before First Use	9
Using Your Smart Air Fryer	11
Care & Maintenance	12
Accessories	16
Troubleshooting	16
Warranty Information	17
Customer Support	19

DE • DEUTSCH

Inhaltsverzeichnis

Lieferumfang	22
Technische Daten	22
Wichtige Sicherheitshinweise	23
Einrichten der VeSync-App	27
VeSync-App Funktionen	27
Ihre Smart-Heißluftfritteuse	28
Vor dem ersten Gebrauch	30
Der Gebrauch Ihrer Smart-Heißluftfritteuse	31
Pflege & Wartung	35
Zubehör	35
Problemlösung	36
Informationen zur Garantie	38
Kundendienst	38

ES • ESPAÑOL

Índice

Contenido de la caja	41
Especificaciones	41
Precauciones importantes	42
Configuración de la aplicación VeSync	45
Funciones de la aplicación VeSync	45
Componentes de la freidora por aire inteligente	46
Antes del primer uso	48
Usar la freidora por aire inteligente	49
Cuidado y mantenimiento	53
Accesorios	53
Solución de problemas	54
Información sobre la garantía	56
Atención al Cliente	56

FR • FRANÇAIS

Table des matières

Contenu de l'emballage	59
Caractéristiques techniques	59
Consignes de sécurité importantes	60
Configuration de l'application VeSync	63
Caractéristiques de l'application VeSync	63
Prise en main de votre friteuse sans huile intelligente	64
Avant la première utilisation	66
Utilisation de votre friteuse sans huile intelligente	67
Nettoyage et maintenance	71
Accessoires	71
Dépannage	72
Informations relatives à la garantie	74
Service client	74

IT • ITALIANO

Indice

Contenuto della confezione	77
Specifiche	77
Importanti misure di sicurezza	78
Configurazione dell'app VeSync	81
Caratteristiche dell'app VeSync	81
Componenti della friggitrice ad aria smart	82
Prima del primo utilizzo	84
Uso della friggitrice ad aria smart	85
Cura e manutenzione	89
Accessori	89
Risoluzione dei problemi	90
Informazioni sulla garanzia	92
Assistenza Clienti	92

NO • NORWAY

Innholdsfortegnelse

Pakkeinnhold	94
Spesifikasjoner	94
Viktige sikkerhetstiltak	95
Oppsett av VeSync-appen	98
Vesync-appens funksjoner	98
Bli kjent med din Airfryer	99
Før første gangs bruk	
Bruk av din Airfryer	101
Stell og vedlikehold	102
Tilbehør	106
Feilsøking	107
Garantiinformasjon	109
Kundeservice	109

 
 *Thank you for your purchase!* 

(We hope you love your new air fryer as much as we do)



join

the Cosori Cooks Community on Facebook
facebook.com/groups/cosoricooks

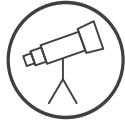

explore

our recipe gallery
www.cosori.com/recipes



enjoy

weekly, featured recipes
made exclusively by our in-house chefs



CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

Email: recipes@cosori.com

On behalf of all of us at Cosori,

Happy cooking!

Package Contents

- 1 x Dual Blaze™ 6.4-Litre Smart Air Fryer
- 1 x Crisper Plate
- 1 x User Manual
- 1 x Recipe Book
- 1 x Skewer Rack
- 5 x Skewers

Specifications

Power Supply	AC 220–240V, 50/60Hz
Rated Power	1700W
Capacity	6.4 L / 6.8 qt (serves 4–6 people)
Temperature Range	80°–205°C / 175°–400°F
Time Range	1–60 min
Dimensions	29.7 x 32.7 x 35.2 cm / 11.7 x 12.9 x 13.8 in
Weight	6.22 kg / 13.7 lb
Wi-Fi® Frequency Range	2412–2472MHz <20dBm (E.I.R.P.)
Bluetooth® Frequency Range	2402–2480MHz <10dBm (E.I.R.P.)

Download the free VeSync app to access smart functions, original recipes from the Cosori chefs, and more!



READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

Follow basic safety precautions when using your air fryer. Read all instructions.

Key Safety Points



- **Do not** touch hot surfaces. Use handle.
- Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.
- **Do not** block any ventilation openings. Hot steam is released through openings. Keep your hands and face clear of openings.

General Safety

- **Do not** immerse the air fryer housing, cord, or plug in water or liquid.
- Closely supervise children near your air fryer.
- Unplug when not in use, and before cleaning. Allow to cool before putting on or taking off parts.
- **Do not** use your air fryer if it is damaged, not working, or if the cord or plug is damaged. Contact **Customer Support** (see page 19).
- **Do not** use third-party replacement parts or accessories, as this may cause injuries.
- **Do not** use outdoors.
- **Do not** place the air fryer or any of its parts on a stove, near gas or electric burners, or in a heated oven.
- Be extremely cautious when moving your air fryer (or removing the basket) if it contains hot oil or other hot liquids.

- **Always** place the crisper plate on a heat-resistant surface after removing it from the basket.
- **Do not** clean with metal scouring pads. Metal fragments can break off the pad and touch electrical parts, creating a risk of electric shock.
- **Do not** place anything on top of your air fryer. **Do not** store anything inside your air fryer.
- This air fryer can be used by children 8 years and older as well as persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the air fryer in a safe way and understand the hazards involved.
- **Do not** allow children to clean or perform maintenance on the air fryer unless they are older than 8 and supervised.
- Children should be supervised to ensure that they do not play with the air fryer.
- This air fryer is not intended to be operated by means of an external timer or separate remote-control system.
- **Only** use your air fryer as directed in this manual.
- Not for commercial use. Household use **only**.

While Air Frying

- An air fryer works with hot air **only**. **Never** fill the basket with oil or fat.
- **Never** use your air fryer without the basket in place.
- **Do not** place oversized foods or metal utensils into your air fryer.
- **Do not** overfill the air fryer basket. Heaping amounts of food may touch the heating coils and cause a fire hazard.
- **Do not** touch accessories (including the crisper plate) during or immediately after air frying.
- **Do not** place paper, cardboard, non-heat-resistant plastic, or similar materials, into your air fryer.
- **Never** put baking or parchment paper into the air fryer without food on top. Air circulation can cause paper to lift and touch heating coils.
- **Always** use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- Keep your air fryer away from flammable materials (curtains, tablecloths, etc.). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- Immediately turn off and unplug your air fryer if you see dark smoke coming out. White smoke is normal, caused by heating fat or food splashing, but dark smoke means that food is burning or there is a circuit problem. Wait for the smoke to clear before pulling the basket out. If the cause was not burnt food, contact **Customer Support** (page 19).
- To turn the air fryer off, press  once. The air fryer will beep, and all buttons will shut off except the  button, which will turn orange.
- **Do not** leave your air fryer unattended while in use.

Power & Cord

- Always attach the plug to the air fryer before plugging the cord into the outlet.
- Turn off the air fryer before removing the plug from the outlet.
- **Do not** let the power cord (or any extension cord) hang over the edge of a table or counter, or touch hot surfaces.
- Remove and discard the protective cover fitted over the power plug of the air fryer to prevent a choking hazard.
- Keep the air fryer and its cord out of reach of children less than 8 years old.
- **Never** use an outlet below the counter when plugging in your air fryer.
- Your air fryer should **only** be used with **220–240V, 50/60Hz** electrical systems and a grounded outlet. **Do not** plug into another type of outlet.
- If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.
- If the power supply cord is damaged, it must be replaced by Arovast or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (page 19).

Electromagnetic Fields (EMF)

The Cosori Smart Air Fryer complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

This product is RoHS compliant.

This product is in compliance with Directive 2011/65/EU, and its amendments, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Note: Items marked with the following symbol may reach high temperatures and should be handled carefully.



CAUTION: Hot surface.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

SAVE THESE INSTRUCTIONS

VeSync App Setup

Note: The VeSync app is continually being improved and may change over time. If there are any differences, follow the in-app instructions.

1. To download the VeSync app, scan the QR code or search "VeSync" in the Apple App Store® or Google Play Store.

Note: For Android™ users, choose "Allow" to use VeSync.




2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.


Note: You must create your own VeSync account to use third-party services and products. These will not work with a guest account. With a VeSync account, you can also allow your family and friends to control your smart air fryer.

3. Tap **+** and select your smart air fryer.
4. Follow the in-app instructions to set up your smart air fryer.

Note:

- You can change the name and icon at any time by going to the smart air fryer screen and tapping .

Disconnecting From Wi-Fi®:

- To disconnect Wi-Fi®, press and hold the  for 15 seconds until the Wi-Fi indicator turns off. This will restore the smart air fryer's default settings and disconnect it from the VeSync app.
- To reconnect, please follow the instructions in the VeSync app for adding a device.

VeSync App Features

The VeSync app allows you to access additional smart air fryer functions, including those listed below.

Remote Control

- All smart air fryer functions can be controlled remotely, except for starting cooking (to comply with UL safety regulations).
- Cooking progress can be monitored from a distance.

In-App Recipes

- Pre-programmed recipes made by Cosori's in-house chefs are available on the app. These recipes automatically set the recommended time and temperature.
- Create and save custom recipes.

 
GETTING TO KNOW YOUR SMART AIR FRYER

Your Cosori Smart Air Fryer uses rapid 360 Thermo IQ™ Technology to cook with little to no oil for quick, crispy, delicious food with up to 85% fewer calories than deep fryers. With user-friendly one-touch controls, a nonstick basket, and an intuitive, safe design, the Cosori Smart Air Fryer is the star of your kitchen.

Note:

- **Do not** try to open the top of the air fryer. This is not a lid.
- The basket and crisper plate are made of aluminium metal with nonstick coating.

Air Fryer Diagram

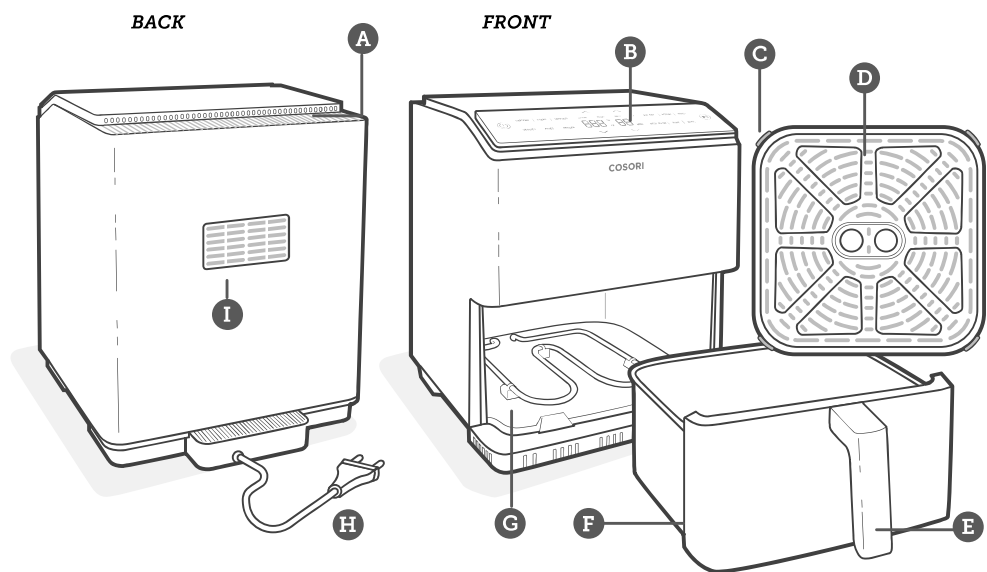


- | | | |
|-----------------------------|-------------------------|----------------------------|
| A. Air Inlet | D. Crisper Plate | G. Heating Elements |
| B. Control Screen | E. Basket Handle | H. Power Cord |
| C. Silicone Stoppers | F. Basket | I. Air Outlet |

Display Diagram

Note: When you press a button to use a function or program, it will turn white to show that it's active.

 Control Panel

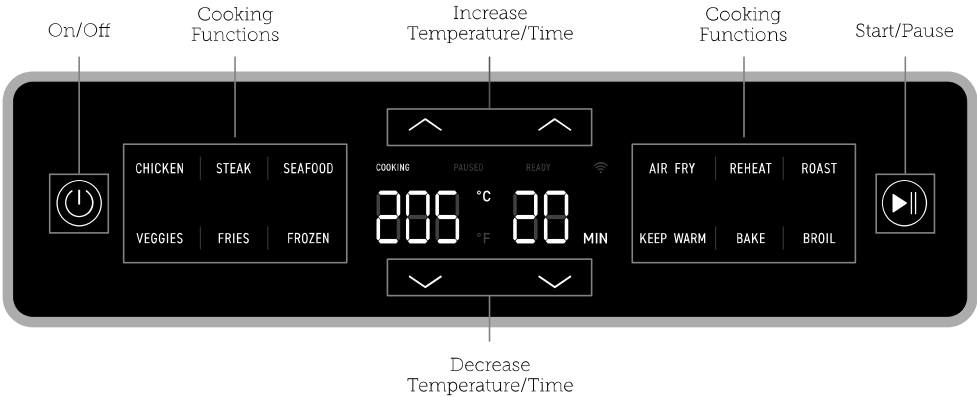

Note:

- To save or reset presets, see **Cooking Functions** (see page 13).
- Press and hold for 5 seconds to configure your air fryer. See the VeSync in-app instructions for more information.



Note: The Wi-Fi indicator tells you your VeSync configuration status. See the VeSync in-app instructions for more information.

Display Messages



BEFORE FIRST USE

Setting Up

1. Remove and discard all packaging from the air fryer, including any temporary stickers and the protective cover fitted over the power plug.
2. Place the air fryer on a stable, level, heat-resistant surface. Keep away from areas that can be damaged by steam (such as walls or cupboards).

Note: Leave 13 cm / 5 inches of space behind and above the air fryer. [Figure 1.1] Leave enough room to remove the basket.

3. Wash both the basket and crisper plate thoroughly, using either a dishwasher or a non-abrasive sponge.
4. Wipe the inside and outside of the air fryer with a slightly moist cloth. Dry with a towel.
5. Insert the crisper plate back into the basket, and place the basket inside the air fryer.

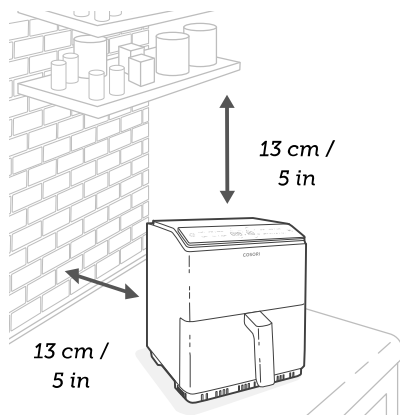 


Figure 1.1

Test Run

A test run will help you become familiar with your air fryer, make sure it's working correctly, and clean it of possible residues in the process.

1. Make sure the air fryer basket is empty and plug in the air fryer.
2. Press **AIR FRY**. The display will show "205°C" and "20 MIN".
3. Press and hold the \sphericalangle button under the time to change the time to 10 minutes.
4. Press **▶||** to begin. When finished, the air fryer will beep.
5. Remove the basket. Let the basket cool completely for 10–30 minutes.

Note:

- Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.
- **Do not** unscrew the basket handle from the basket.

Silicone Stoppers

- The crisper plate contains 4 silicone stoppers made of food-safe material. These stoppers keep the plate fitted to the bottom of the basket.
- If the silicone stoppers are removed, the crisper plate may damage the nonstick coating on the basket.
- Make sure children do not play with the silicone stoppers or swallow them.

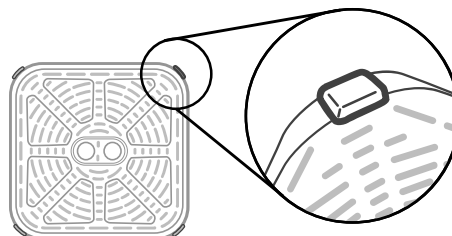 


Figure 1.2

USING YOUR SMART AIR FRYER

You can use the VeSync app to monitor cooking, follow in-app recipes, and access additional features. For a list of smart features, see **VeSync App Features** (see page 8).

Note:

- **Do not** place anything on top of your air fryer. This will disrupt airflow and cause poor air frying results. [Figure 2.1]
- An air fryer is not a deep fryer. **Do not** fill the baskets with oil, frying fat, or any liquid.
- When taking the basket out of the air fryer, be careful of hot steam.

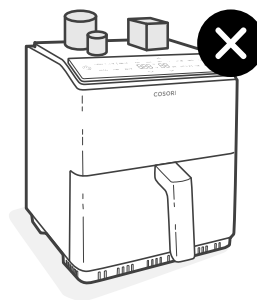 





Figure 2.1

Cooking Functions

Using a cooking function is the easiest way to air fry. Cooking functions are programmed with an ideal time and temperature for cooking certain foods.

1. Press the function's button to select the function. The air fryer will automatically change to the function's default settings.
2. You can customise a cooking function's time (1–60 minutes) and temperature (80°–205°C). To go back to a function's default settings right after changing them, press the function's icon again.

- To save a cooking function:
 1. Choose a preset and adjust the time and temperature.

Note: Press and hold the  or  buttons to rapidly increase or decrease the time or temperature.
 2. Press and hold the cooking function icon for 3 seconds.
- To reset all cooking functions:
 1. Press and hold  for 15 seconds.
 2. Optionally, open the VeSync app and reset all cooking functions in the air fryer's settings.

Note: Results may vary. Check out the VeSync app and Recipe Book for a guide to using cooking functions for perfect results.

Function	Default Temperature	Default Time (Minutes)
Chicken	200°C / 390°F	20
Steak	205°C / 400°F	8
Seafood	190°C / 375°F	8
Veggies	195°C / 385°F	6
Fries*	195°C / 385°F	20
Frozen*	200°C / 395°F	12
Air Fry	180°C / 360°F	10
Reheat	175°C / 350°F	5
Roast	205°C / 400°F	10
Keep Warm	80°C / 175°F	30
Bake	160°C / 320°F	20
Broil	205°C / 400°F	10


* See **Cooking Tips** (page 14) for more information.

Air Frying

1. Plug in. When your air fryer displays **READY**, add food to the basket.
 - Optionally, add the crisper plate into the basket to allow excess oil to drip down to the bottom of the basket.
2. Select a cooking function (see page 13).

Note: *Cooking functions are programmed with an ideal time and temperature for cooking certain foods. The air fryer will default to the Air Fry function if no other cooking function is selected.*
3. Optionally, change the temperature and time. You can do this anytime during cooking.
 - Press the ∇ or \triangle buttons to change the temperature (80°–205°C / 175°–400°F) or time (1–60 minutes).

4. Press **▶||** to begin air frying.
5. The air fryer will beep 3 times when finished. The display will show

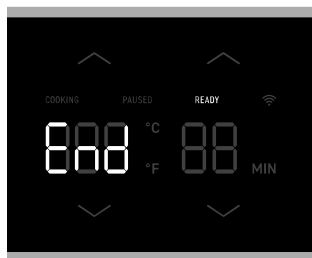 

- Optionally, press **Keep Warm**. Press the ∇ or \triangle buttons to change the time (1–60 minutes).
6. Remove the contents from the basket using silicone-tipped tongs or other utensils.
 7. Allow to cool before cleaning.

Cooking Tips

Overfilling

- If the basket is overfilled, food will cook unevenly.

Using Oil

- Adding a small amount of oil to your food will make it crispier. Use no more than 30 mL / 2 US tbsp of oil.
- Oil sprays are excellent for applying small amounts of oil evenly to all food items.

Food Tips

- You can air fry any frozen foods or goods that can be baked in an oven.
- The Frozen function is ideal for small or breaded items, such as nuggets, meatballs, and pot stickers.
- To make cakes, hand pies, or any food with filling or batter, place food in a heat-safe container before placing in the basket.
- Air frying high-fat foods will cause fat to collect underneath the crisper plate. To avoid excess smoke while cooking, pour out fat drippings after cooking.
- Liquid-marinated foods create splatter and excess smoke. Pat these foods dry before air frying.

French Fries

- Add 8–15 mL / ½–1 US tbsp oil for crispiness.
- When making fries from raw potatoes, soak uncooked fries in water for 15 minutes to remove starch prior to frying. Pat dry with a towel before adding oil.
- Cut uncooked fries smaller for crispier results. Try cutting fries into 0.6- by 7.6-cm / ¼- by 3-inch strips.

Note: *For more tips and recipes, check out the VeSync app and Cosori website.*

More Functions

Pausing

- Press **▶||** to pause cooking. The air fryer will stop heating, and **▶||** will blink until you press **▶||** again to resume cooking.
- After 30 minutes of inactivity, the air fryer will turn off.
- This function allows you to pause the cooking program without removing the basket from the air fryer.

Automatically Resume Cooking

- If you pull out the basket, the air fryer will pause cooking automatically. The display will turn off temporarily as a safety feature.
- When you return the basket, the air fryer will automatically resume cooking based on your previous settings.

Automatic Shutoff

- If the air fryer has no active cooking programs, the air fryer will clear all settings and turn off after 3 minutes of inactivity.

Overheat Protection

- If the air fryer overheats, it will automatically shut down as a safety feature.
- Let the air fryer cool down completely before using it again.

Switching Temperature Units

- Press and hold **Temp** **∧** and **∨** for 3 seconds.
- The temperature unit will change from Celsius to Fahrenheit.
- Repeat to switch back to Celsius.

CARE & MAINTENANCE

Note:

- **Always** clean the air fryer basket and crisper plate after every use.
 - Lining the basket with foil (except the crisper plate) may make cleanup easier.
1. Turn off and unplug the air fryer. Allow it to cool completely before cleaning. Pull out the basket for faster cooling.
 2. Wipe the outside of the air fryer with a moist cloth, if necessary.
 3. The basket and crisper plate are dishwasher safe. You can also wash the basket and crisper plate with hot, soapy water and a non-abrasive sponge. Soak if necessary.

Note: The basket and crisper plate have a nonstick coating. Avoid using metal utensils and abrasive cleaning materials.

4. For stubborn grease:
 - a. In a small bowl, mix 30 mL / 2 US tbsp of baking soda and 15 mL / 1 US tbsp of water to form a spreadable paste.

- b. Use a sponge to spread the paste on the basket and crisper plate and scrub. Let the basket and crisper plate sit for 15 minutes before rinsing.
 - c. Wash basket with soap and water before using.
5. Clean the inside of the air fryer with a slightly moist, non-abrasive sponge or cloth. **Do not** immerse in water. If needed, clean the heating coil to remove food debris. [Figure 3.1]
 6. Dry before using.

Note: Make sure the heating coil is completely dry before turning on the air fryer.

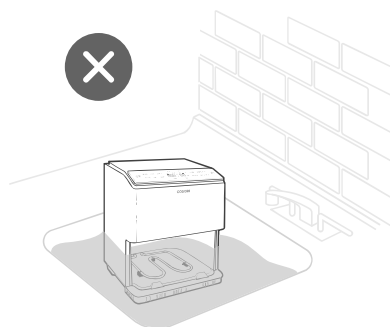 


Figure 3.1

ACCESSORIES

Additional and replacement accessories are available for your air fryer. For more information, contact **Customer Support** (see page 19).

TROUBLESHOOTING

Problem	Possible Solution
The air fryer will not turn on.	Make sure the air fryer is plugged in.
	Push the basket securely into the air fryer.
Food is not completely cooked.	Place smaller batches of food items into the basket. If the basket is overstuffed, then foods will be undercooked.
	Increase cooking temperature or time.
Food is not crispy after air frying.	Spraying or brushing a small amount of oil on foods can increase crispiness (see Cooking Tips , page 14)
French fries are not cooked correctly.	See French Fries , page 14.
Basket will not slide into the air fryer securely.	Make sure the basket is not overfilled with food.
White smoke or steam is coming out of the air fryer.	The air fryer may produce some white smoke or steam when you use it for the first time or during cooking. This is normal.
	Make sure the basket and the inside of the air fryer are cleaned properly and not greasy.
	Cooking greasy foods will cause oil to collect beneath the crisper plate. This oil will produce white smoke, and the basket may be hotter than usual. This is normal and should not affect cooking. Handle the basket with care.
Dark smoke is coming out of the air fryer.	Immediately unplug your air fryer. Dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact Customer Support (see page 19).
The air fryer has a plastic smell.	Any air fryer may have a plastic smell from the manufacturing process. This is normal. Follow the instructions for a Test Run (page 11) to get rid of the plastic smell. If a plastic smell is still present, please contact Customer Support (see page 19).
Display shows Error Code "E1\E21".	There is an open circuit in the temperature monitor. Contact Customer Support (see page 19).
Display shows Error Code "E2\E22".	There is a short circuit in the temperature monitor. Contact Customer Support (see page 19).

If your problem is not listed, please contact **Customer Support** (see page 19).

DECLARATION OF CONFORMITY

Arovast Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU, UK Radio Equipment Regulations 2017 and all other applicable EU and UK directive requirements. The complete declaration of conformity can be found at: <https://cosori.com/euro/compliance>

Attributions

Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Google, Android, and Google Play are trademarks of Google LLC.

Apple App Store is a trademark of Apple Inc.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

iOS is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Arovast Corporation is under license.

Other trademarks and trade names are those of their respective owners.

WARRANTY INFORMATION

Product Name	Dual Blaze™ 6.4-Litre Smart Air Fryer
Model	CAF-P583S-AEUR CAF-P583S-KEUR
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Date of Purchase	
Order ID	

TERMS & POLICY

Arovast Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the 2-year warranty period.

This warranty does not limit your rights under the applicable local consumer protection laws. If the applicable local consumer protection laws require the manufacturer to provide a longer warranty period, the warranty period shall be extended to the shortest period required by the laws.

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Arovast Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806
USA

Email: support.eu@cosori.com

**Please have your invoice and order ID ready before contacting Customer Support.*

All paper can be sorted and recycled, including the user manual.

SHOW US WHAT YOU'RE MAKING

We hope this has been helpful to you. We can't wait to see your beautiful results, and we think you'll want to share glam shots! Our community awaits your uploads—just pick your platform of choice below. Snap, tag, and hashtag away, Cosori chef!

#LiveLifeTastefully #iCookCosori

@CosoriCooks



@Cosori



MORE COSORI RECIPES

Considering *what* to cook? Many recipe ideas are available, both from us, the Cosori community, and through the VeSync app.



Scan the QR code to get the app.