
The friendly user guide for

The Play Kitchen

A WARNING: TOY MUST BE ASSEMBLED BY AN ADULT BEFORE USE Recommended Age: 3yr+

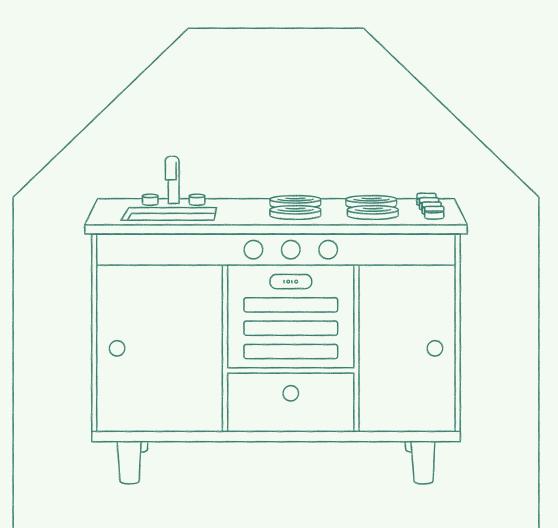

Scan to shop little chef accessories. meetlalo.com




What's included...

The Play Kitchen


- A. Play Kitchen
- B. Feet (x4)

C. Faucet D. Fluted Nut



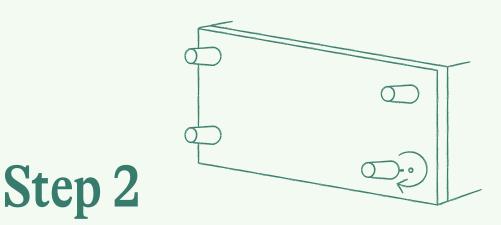


To install the feet, lay the play kitchen on its back so that you can access the bottom. Insert the screws attached to the feet into the threaded holes in the bottom panel. Turn clockwise until tight.

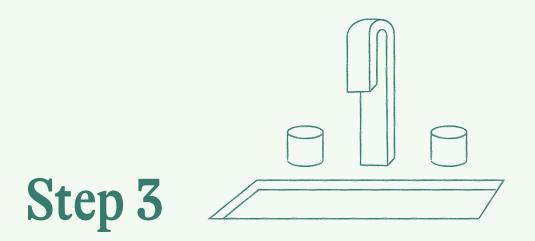

To attach the faucet, stand the play kitchen back up on its feet. Insert the screw attached to the faucet into the hole on the countertop. Open the cabinet drawer and place the fluted nut on the screw. Turn until tight.



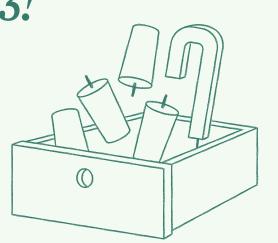

Step 1

Remove the play kitchen from the box and open the drawer. Inside you'll find a box with the feet and faucet which you'll need to complete assembly.