


The friendly user guide for

The Play Tent

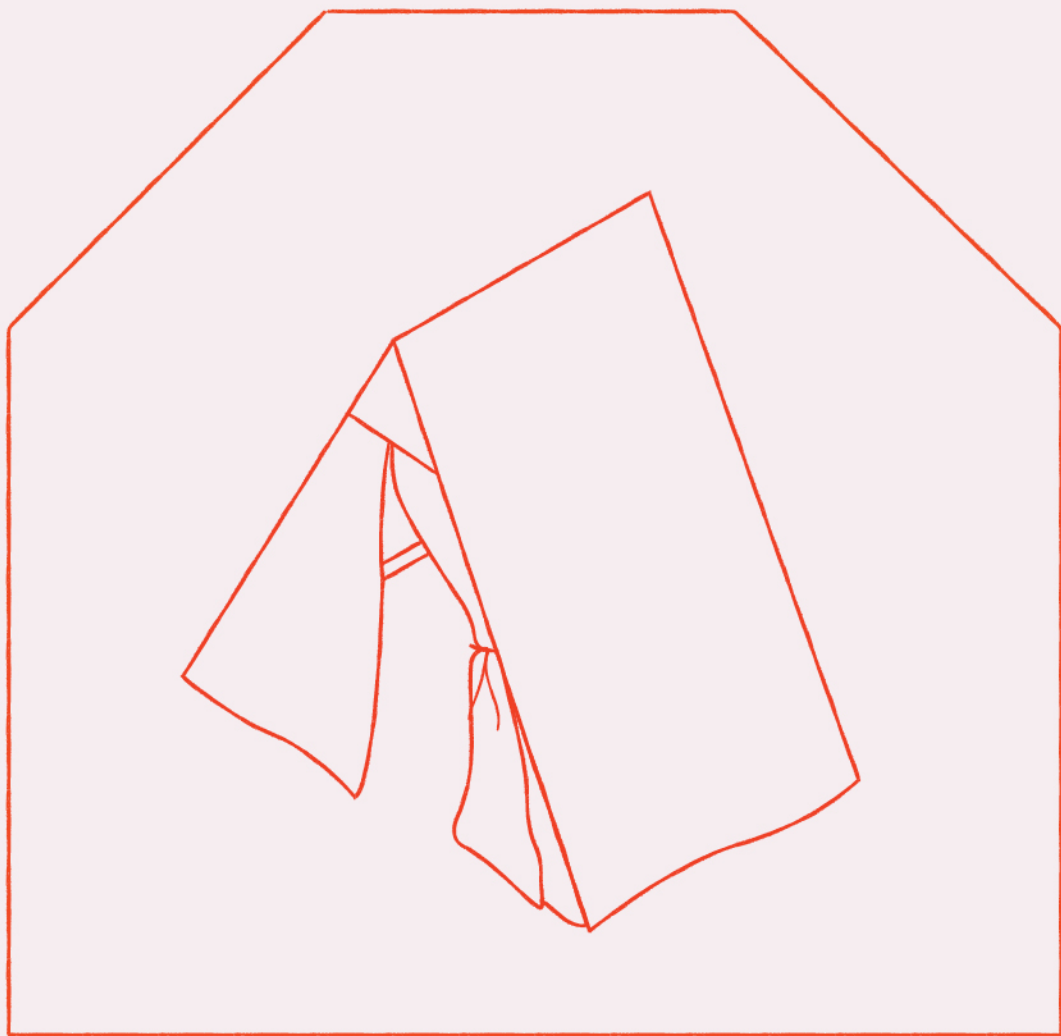

What's included

The Play Tent

- | | | | |
|----|-------------------|----|------------------|
| A. | Top Bar | E. | Tent Fabric |
| B. | Top Leg (x4) | F. | Short Bolts (x4) |
| C. | Bottom Leg (x4) | G. | Long Bolts (x4) |
| D. | Support Bars (x2) | H. | Allen Key |

Important! Read carefully and keep for future reference.

⚠ WARNING:


KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source.

- Choking Hazard- Assembly hardware contains small parts. Keep away from children. Adult assembly required.
- **NEVER** leave your child unattended in their play tent
- This product is only suitable for indoor use
- Use this product only on the floor
- **NEVER** use with accessories or replacement parts not approved by Lalo for use with this product
- Do not use the Play Tent or Mat if any part is loose, broken, torn, or missing
- This product is not intended for unattended sleep
- Ages: 1 yr+


Cleaning & Care:

- Frame: Spot clean with water, add mild soap as needed
- Tent: Machine wash cold, lay flat to dry, do not tumble dry

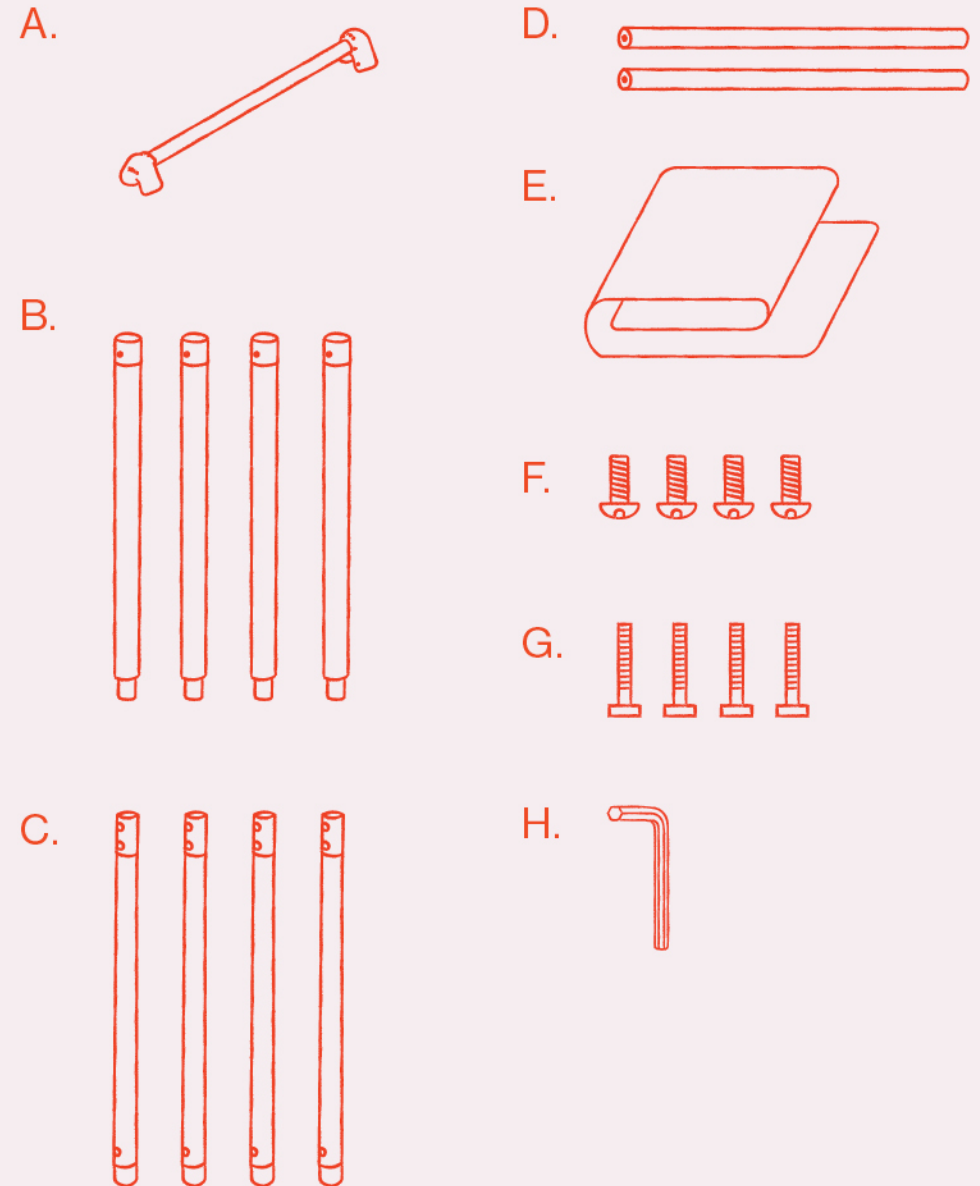


Step 1

Insert the top legs into the top bar until you hear a click.

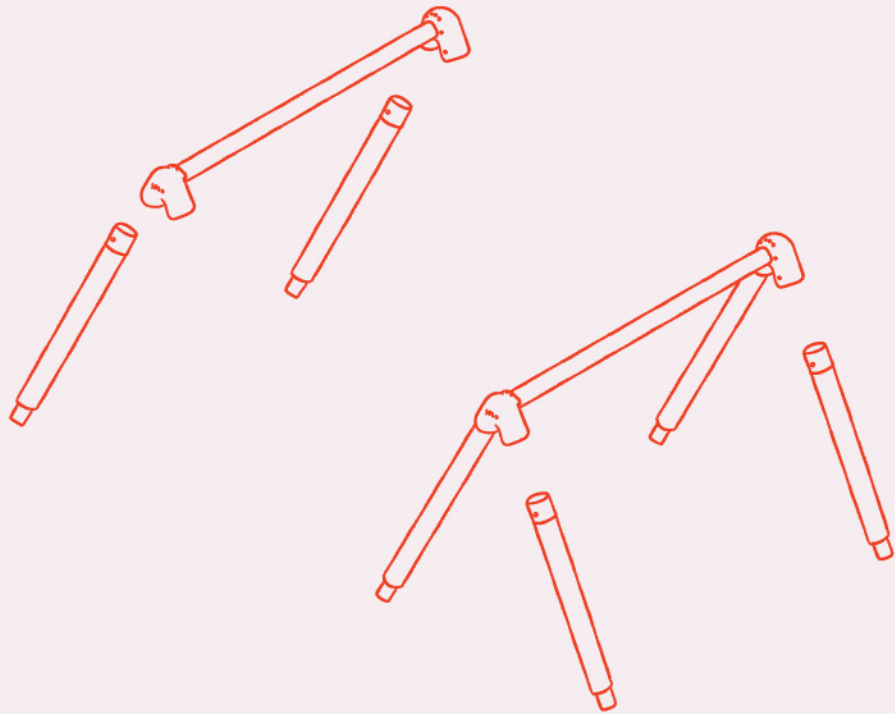


Step 2

Insert the bottom leg into the top leg. And secure using a short bolt on each leg.

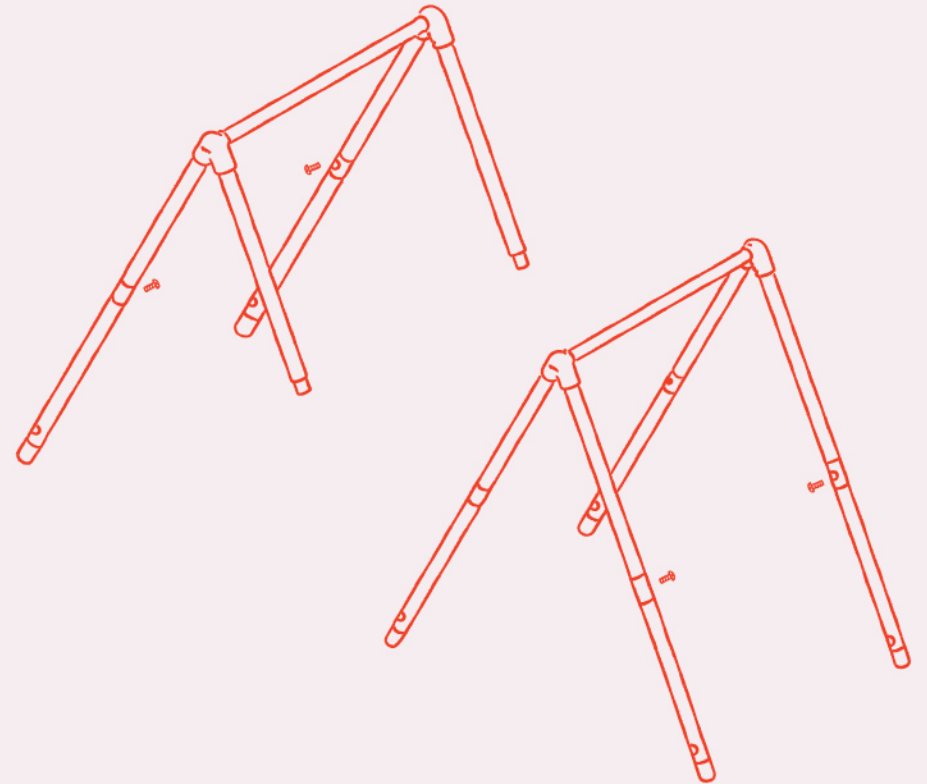


Step 3

Turn the tent frame right side up with all four legs touching the ground. Place the support bars in the corresponding holes on the base of the bottom legs and secure each side with a long bolt.

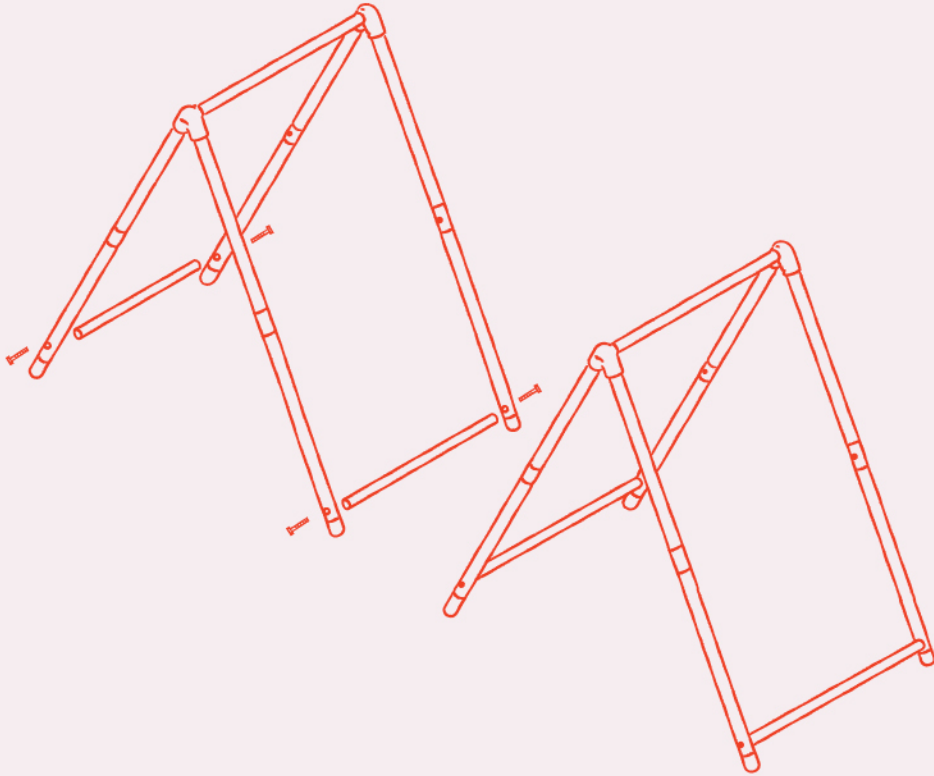

Step 4

Now that your tent frame is complete. Place the tent fabric over the frame. Secure the fabric to the frame using the elastic loop located at each corner.

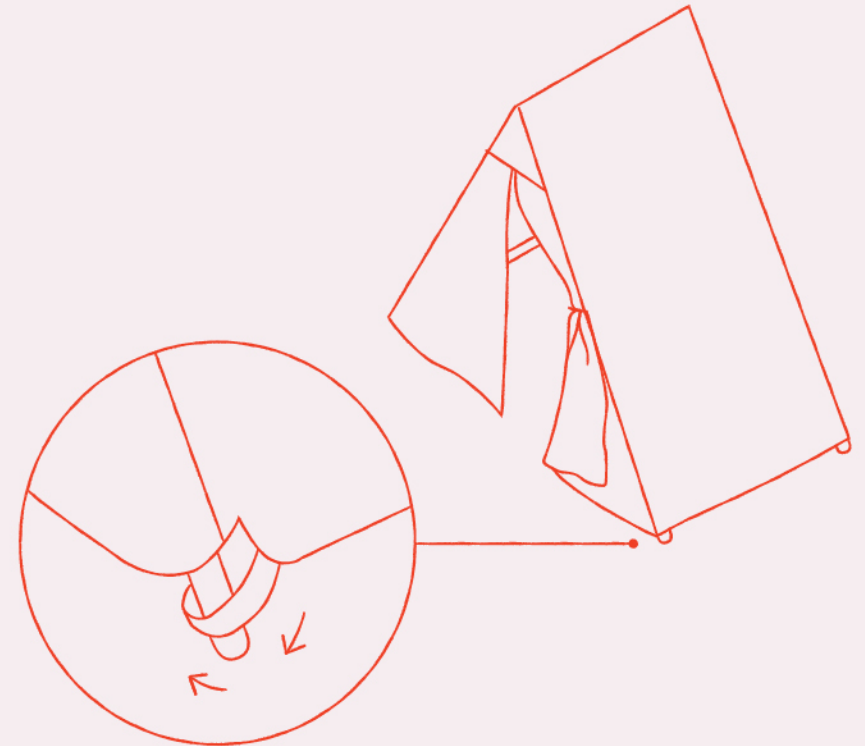



Need assistance? Watch the quick setup video.