

HARNES BUCKLE REPLACEMENT

NOTE: Please read these instructions thoroughly before beginning, as the harness buckle of this restraint is an important safety feature, please make sure that the buckle is replaced as per these instructions and securely attached.

Please do not hesitate to contact our service department if you have any difficulties or have any questions regarding the replacement procedure.

REMOVAL INSTRUCTIONS

1. Remove restraint from vehicle, remove seat base cover. Place seat into the full recline position and turn restraint upside down on a flat surface.
2. On the underside of the seat you will find two metal plates together (See Fig.1) these are the attachment plates for the Harness Crotch Buckle.
3. Using a small Phillips head screw driver, remove the two small screws (if fitted) from the top right corner of both of the metal plates. Place these in a safe place. (See Fig1 & Fig.2)
4. Turn the metal plates sideways and push back through the slots in the seat shell. (See Fig.3) This will release the buckle from the seat for washing or replacement.
5. Turn the seat upright.
6. Take the washed or new harness buckle and pass the metal plates through the slots provided in the seat shell. (See Fig.4 and Fig.6 for buckle orientation)
7. Turn the seat upside down.
8. Lie the metal plates flat in their sunken position and using your small Phillips head screw driver replace the two small screws into the upper right corner of the metal plates.
9. Turn the seat upright and replace the seat base cover. (See Fig.5)

Your restraint is now ready to be reinstalled as per the manufacturers instruction manual.



Fig.1



Fig.2



Fig.3



Fig.4



Fig.5

HARNESS BUCKLE REPLACEMENT

Buckle orientation should be as seen below.



Fig.6