

## HARNES BUCKLE REPLACEMENT

NOTE: Please read these instructions thoroughly before beginning, as the harness buckle of this restraint is an important safety feature, please make sure that the buckle is replaced as per these instructions and securely attached.

Please do not hesitate to contact our service department if you have any difficulties or have any questions regarding the replacement procedure.

### REMOVAL INSTRUCTIONS

1. Remove seat from car. Disconnect harness tongues from harness buckle. (See Fig.1)
2. There will be two 3-bar metal plates close together near the front of the seat, using a Phillips head screwdriver remove the screws holding the 3-bar metal plates onto the restraint then pull these towards each other to release them from the locks in the plastic shell. (See Fig.1 & 2)
3. Turn the 3-bar metal plates sideways and pass back through the slots in the plastic shell (See Fig.3)

This will release the buckle from the seat.

4. Remove covers from seat base.
5. Thread the 3-bar metal plate, on replacement buckle back through the slots in the seat shell. Ensuring that the 3-bar metal plate with the adjustable strap is inserted in the hole on the right (See Fig.3).
6. Lock and screw the 3-bar metal plates back into place, and replace the covers on the seat base (See Fig.4).

Your restraint is now ready to be installed back in your vehicle as per the manufacturers instructions.

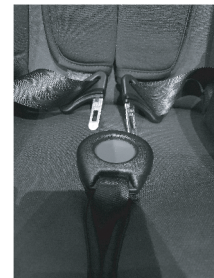


Fig.1

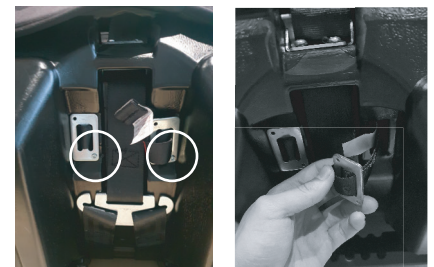


Fig.2



Fig.3



Fig.4



Fig.6

Buckle orientation should be as seen in Fig.6.



Fig.5