

HARNES BUCKLE REPLACEMENT

NOTE: Please read these instructions thoroughly before beginning, as the harness buckle of this restraint is an important safety feature, please make sure that the buckle is replaced as per these instructions and securely attached.

Please do not hesitate to contact our service department if you have any difficulties or have any questions regarding the replacement procedure.

REMOVAL INSTRUCTIONS

1. Remove seat from car. Disconnect harness tongues from harness buckle. Open the recline panel on the base of seat (See Fig.1) (Applicable for CS7213 only)
2. There will be two 3-bar metal plates close together near the front of the seat, slide these towards each other to release them from the locks in the plastic shell. (See Fig.1 & 2)
3. Turn the 3-bar metal plates sideways and pass back through the slots in the plastic shell (See Fig.3)

This will release the buckle from the seat.

4. Remove covers from seat base. (See Fig.4)
5. Thread the 3-bar metal plate, on replacement buckle back through the slots in the seat shell (See Fig.5)

Lock 3-bar metal plates back into place, and replace covers on seat base.

Your restraint is now ready to be installed back in your vehicle as per the manufacturers instructions.



Fig.1

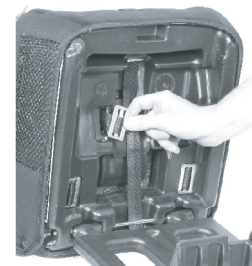


Fig.2



Fig.3



Fig.4



Fig.5



Fig.6

Buckle orientation should be as seen in Fig 6.