

air fryer HURRICANE



Free
recipe book

OVER
50
RECIPES



fat free
family meals



Distributed by Milex
E-mail: info@milex.co.za
www.milex.co.za
Tel: +27 11 444 8000
Model number: MAF001

Instruction Manual

Safeguards	2
Safety Instructions	4
Product Parameters	5
Product Description	6
Operating Instructions	7
General Cleaning and Care Instructions	9
Using the accessories	10

IMPORTANT SAFEGUARDS

(READ ALL INSTRUCTIONS BEFORE USING THE MILEX CORDLESS IRON)

1. Make sure the electricity voltage is consistent with the voltage shown on the label.
2. Ensure to place the Air fryer on a stable surface and do not allow children near the cooker while it is in operation.
3. Always switch the power off before removing plug from wall outlet.
4. Never pull on the cord. Remove the plug from the outlet.
5. Do not touch hot surfaces. Handle or adjust your Air fryer by the provided handles and knobs. Wear oven gloves when necessary.
6. To protect against electrical shock, do not immerse cord, plug or motor assembly in water or any other liquid.
7. Close supervision is required when this appliance is used by or near any children.
8. Be sure to unplug the unit from the electrical outlet when not in use and before cleaning.
9. Allow unit to cool down before putting on or removing any parts.
10. Do not operate any appliance with a damaged cord or plug, after a malfunction, or if it has been damaged in any way.
11. Return appliance to the nearest authorized service facility for professional examination, repairs or adjustment.
12. Using accessories not approved by the manufacturer may result in injury or damage to the unit.

Safeguards









13. Do not use outdoors.
14. Do not place the unit on or near electrical equipment (e.g. hot plate), over a hot gas flame or in a heated oven.
15. Do not let the cord hang over the edge of tables or counters.
16. Ensure that the mains cord (P) is kept away from heat or sharp edges that could possibly cause damage
16. Extreme caution must be taken when the unit contains hot oil or other hot liquids. Take great care when carrying.
17. Do not use appliance for anything other than intended use.
18. This appliance is intended for domestic use only. It should not be used for any commercial purposes.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or a lack of experience or knowledge. Close supervision is recommended for safety.
20. This appliance does not contain user-serviceable parts. All repairs should only be performed by a qualified engineer. Failing to do so may place the user's safety at risk.

Safety instructions


- Do not move or lift the Air fryer while the power cord is connected to the wall outlet. Remove the plug from the wall outlet then, using both hands, move carefully.
- **Before opening the lid:**
 - Clear all programs by pressing the clear button
 - Disconnect the power cord
 - Lift the arm to open the oven.
- Keep the bowl sides at least 10 centimetres away from other hot surfaces or appliances.
- Do not clean the unit with metal scouring pads or brushes, it may introduce metal particles into the unit which increases the risk of electrical shock.
- Always close the top lid before plugging in the power cord and switching the unit on.

Parameters

Product description

PRODUCT PARAMETERS		
	Description:	Air fryer
	Model No:	TS-13415
	Capacity:	11L
	Voltage:	220-240V
	Rated power:	1300W
	Rated frequency:	50Hz
	Thermostat:	0-250°C
	Timer:	0-59 minutes

CONTROL PANEL DIAGRAM

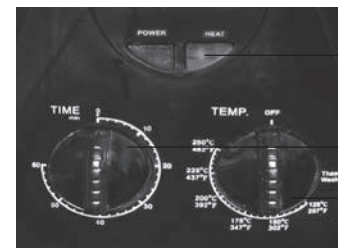


Indicator lights **A**

Timer setting **B**

Temperature setting **C**

 PRODUCT DIAGRAM

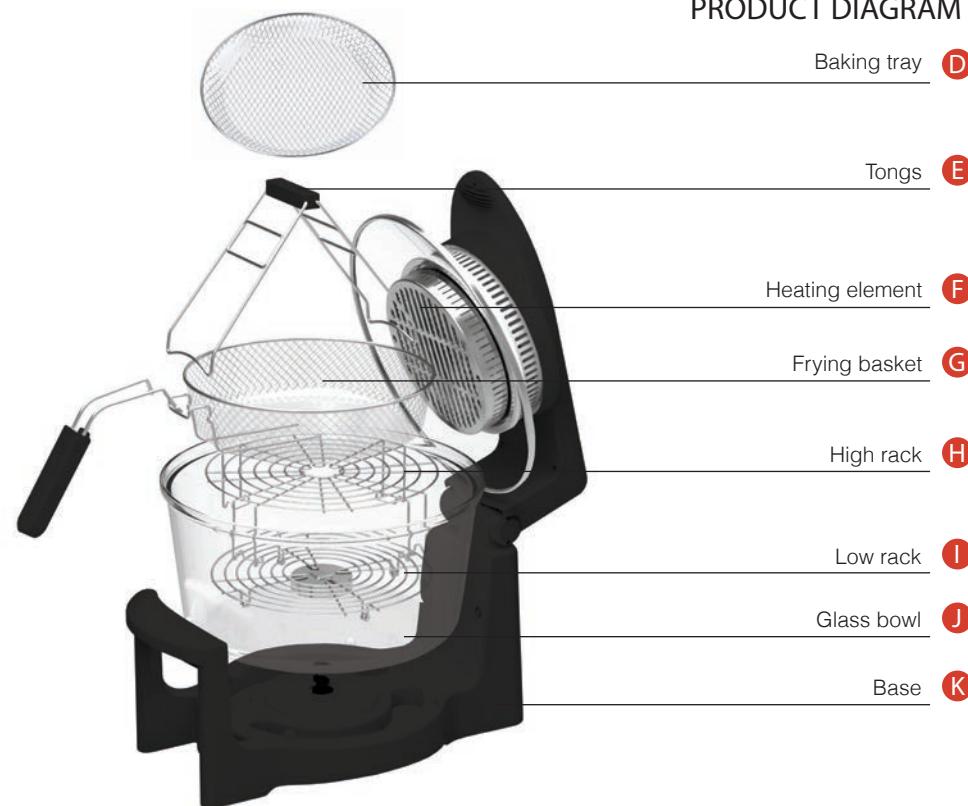

Baking tray **D**

Tongs **E**

Heating element **F**

Frying basket **G**

High rack **H**

Low rack **I**

Glass bowl **J**

 
Base **K**

Operating instructions

OPERATION

1. Open the lid and place food in the rack or baking pan.
2. Close the lid and set the time and temperature.
3. When the timer goes off, the food will be ready.

PAUSE COOKING FUNCTION

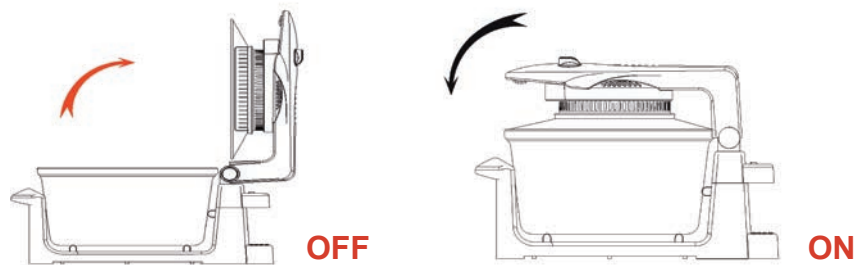

COOKING INSTRUCTIONS

Only lift the lid by its handle. Be extremely careful when handling the glass lid while it is hot. Always use oven gloves. For guidance refer to the time and power instructions provided in the recipe book.

Operating instructions

Avoid touching any surface of the Air Fryer during operation. The air inside the cooking dome can reach temperatures of up to 250°C and may cause severe burns. Please note the Air Fryer will require time to cool down even after being switched off.

THAW SETTING

The Air fryer has a “Thaw setting” that should be used to defrost foods. This is clearly indicated on the temperature dial.

Please Note:

Always ensure food is adequately defrosted before cooking. The cooking duration depends on the size and weight and nature of the food to be cooked. Most meat, for example, comes with a recommended cooking time which should be used as a guide only. As the Air fryer cooks quicker than conventional ovens you may need to allow less time to achieve the desired outcome. To determine if the food is cooked, use a cooking thermometer. Alternatively, pierce the food with a fork or skewer. You can check tenderness of vegetables by piercing with a knife. Ensure food is hot inside before serving.

CAUTION

1. Do not attempt to wash any of the glass components until it cools down to room temperature.
2. If you pour cold water on the glass while it is still hot, it could cause the glass to crack and/or break.
3. Do not place the lid on or close to any flammable or combustible items. It may cause fire or explosion.

IMPORTANT TIPS

- Don't operate the unit with other major appliances in the same power socket. You risk tripping your distribution board or fusing the circuit.
- Ensure that the electrical plug is properly plugged into the outlet.
- Always unplug the unit and allow it to cool before washing.
- Moisture may build up inside the Air fryer when cooked food is not removed immediately after the cooking time has finished.

WARNING:

Use the Air fryer in a household or similar environment such as:






- Staff kitchen areas in shops, offices and other working environments.
- Farm / Guest houses.
- By clients in hotels, motels and other residential environments.

General Cleaning and Care Instructions

Self-wash function:

1. Pour 1cm of water into the bottom of the bowl. Set temperature to 'WASH' position and set timer for 20 minutes. Allow cycle to complete.
2. Ensure the unit is off.
3. Unplug from the electrical outlet and allow it to cool before cleaning.
4. All parts, except the lid and plastic base, are dishwasher safe.
To protect the metal and plastic surfaces from damage do not use abrasive cleaners or scouring pads.
5. The outer surface of the heater/control assembly can be cleaned by wiping with a clean, damp cloth.

HOW TO USE THE ACCESSORIES

ACCESSORIES	IMAGE	FUNCTION
HIGH RACK		To do the baking, grilling, roasting, BBQ etc.
RACK		To do the baking, grilling, roasting, BBQ etc.
TONGS		Used to remove rack or tray or other accessories from the bowl.
FRYING BASKET		Used for frying - french fries.
BAKING TRAY		For baking.