18 inch 2K Portable Monitor User Manual



Email: help@uperfectmonitor.com



In order to ensure your safe use of this product, please read this manual carefully before using this product and keep it properly.



Table of contents

Chapter 01 Preparations

Welcome!

Checking the package contents

Monitor introduction

Product Appearance & Interface Function Introduction

The functions of the bracket & keyboard

Chapter 02 Specifications

Chapter 03 Connecting

TYPE-C signal transfer

Supported Devices & Models (Type-C)

HDMI signal transfer

Chapter 04 Setting Up(Windows10)

1. Extend Mode / Duplicate Mode/ Display Mode

1-1. Way1: Set on the device's Display Settings

1-2. Way2: Set via Windows key + P keyboard shortcut

2. Rotate the Screen

Chapter 05 Screen Adjustment

On-Screen Display Menu Introduction

OSD SETTING

Save settings

Chapter 06 Q&A

Chapter 07 Service Support

Chapter 01 Preparations

Checking the Package Contents







Ø







User Guide


Note:

 
•If any of the above items is damaged or missing, please contact us immediately. (help@uperfectmonitor.com)

•The appearance of the components may differ from the images shown.

Monitor Introduction



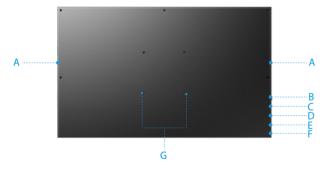



Product Appearance & Interface Function Introduction

A. Speaker

B. Pulley Button

Scroll the Pulley button up on the main interface to open the volume menu, then scroll up and down to adjust the volume.

Press the Pulley button to enter the OSD (On Screen Display) menu. Scroll the Pulley button up and down in the menu to controlthe cursor, and press the Pulley button to Confirm. Long press the Pulley button to go back.

C. Mini HDMI Port

For Audio and Video Signal Transmission.

D&E. Type C 3.1 Port

Full featured type c port. For signal and power transmission.

F. Audio Port

Headphone/ Sound Box Extension Port.

G. VESA

4 M4*4mm holes.

Installing the stand case











Step2: Place the monitor as shown above, part"1" can be sticky.







Step3: Fold the Leather cases part "5" to part "4" as shown.





Step4: Stand up the monitor and adjust the angle



If you want an additional VESA stand, as shown below, please contact us via help@uperfectmonitor.com com and we can ship it to you for free.


Chapter 02 **Specifications**

Color	Black
Model	M180K01
Resolution	2560*1600
Color Gamut	86% NTSC,100%DCI-P3
Display Color	16.7M(8 Bit)
VESA	M4*4mm
	Mini HDMI Port
Interfaces	Type C 3.1 Port * 2
	3.5mm Audio Port
Panel Type	IPS

Chapter 03 Connecting

TYPE-C signal transfer

Note: For a more stable power supply, it is recommended to use our original power adapter to power.

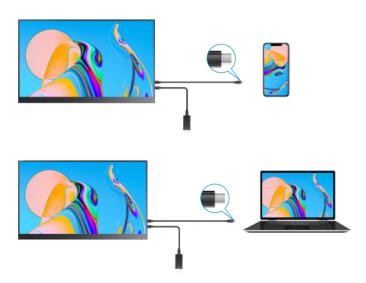

Supported Devices & Models (Type-C)

Laptop Model	
Brand	Model
Apple	Macbook 12"、 Macbook 13" 2017、 MacbookPro 2016/2017/2018、 New Macbook Air 2018、 iPad Pro 2018
Google	ChromeBook Pixels、 PielBook Pen、 MagicBook
Lenovo	YogaC930、Yoga 5 Pro、Yoga 6 Pro、ThinkPad XI Carbon2017、Miix 720、 Legion Y7000/Y7000P/Y7000K
Dell	XPS13、XPS15、G3/G5/G7、Inspiron 5000/7000
HP	Pavilion X2、EliteBook Folio G1、 EliteBook 1050 G1 Microsoft Surface Book2
ASUS	U306、U321 series、U4100、ROG series
Huawei	Matebook D、 Matebook X、 Matebook X Pro、 Matebook E、 Matebook 13
Razer	Blade Stealth
More Brands	Continuous update

Note: Please check the Type C port of your PC/Laptop whether supports audio and video signal transmission(Thunderbolt3). If it is just a Type C for charging, you need connecting HDMI to transmit signal.

Mobile Phone Model	
Brand	Model
Samsung	S8、S8+、S9、S9+、S10、S10+、S10e、Note8、Note9
Huawei	Mate 10 · Mate 10 Pro · Mate 20 · Mate 20 Pro · Mate 20 X · Mate P20 · Mate P20 Pro · HonorNot10 · Mate P30 · Mate P30 Pro
More Brands	Continuous update

Note: Please check the Type C port of your phone whether supports audio and video signal transmission (USB 3.1).

HDMI signal transfer

Note: For a more stable power supply, it is recommended to use our original power adapter to power.





Note: If the Type-C port of your phone is not a full-featured Type-C port, or your phone is micro USB port, Lightning port, for example: Google Pixel 3, you need to buy the adapter as below. In order to enhance our customer experience, you can contact us, we will recommend it to you.



Email: help@uperfectmonitor.com

Email: help@uperfectmonitor.com

Chapter 04 Setting Up(Windows10)

Extend Mode / Duplicate Mode/ Display Mode

Way1: Set on the device's Display Settings

A: Verify that your cables are connected properly to the new monitors.

- B: Right-click anywhere on your desktop and select Display settings to open the Display page.
- C: Scroll down to Multiple displays, then select an option from the drop-down list to
- determine how your desktop will display across your screens. For the largest work area, select Extend desktop.




Note: If you cannot see the additional monitor(s) listed, click Detect. If does not work, try restarting your computer and do steps again.

Way2: Set via Windows key + P keyboard shortcut

A: Verify that your cables are connected properly to the new monitors.

B: Enter the "Windows" key and "P" keyboard at the same time.


C: select an option from the drop-down list to determine how your desktop will display across your screens. For the largest work area, select Extend desktop.

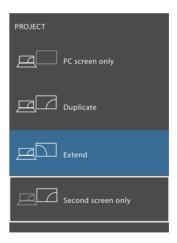

Note: If you cannot see the additional monitor(s) listed, click Detect. If does not work, try restarting your computer and do steps again.

Rotate the Screen

- 1: Verify that your cables are connected properly to the new monitors.
- 2: Right-click anywhere on your desktop and select Display settings to open the Display page.
- 3: Under the "Select and rearrange displays" section, select the monitor that you want to adjust.
- 4: Under the "Scale and layout" section, use the Orientation drop-down menu to select Landscape or Portrait screen.

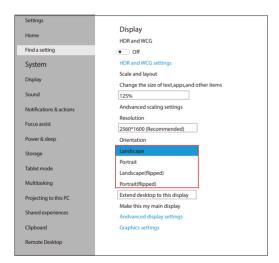

Chapter 05 Screen Adjustment

On-Screen Display Menu Introduction

PICTURE



COLOR



 
OTHER



AUDIO



ADVANCE



If your power outlet is on the right side of the display, and you don't want to have to wrap the cables from the left to the right, then you can set the display to rotate 180 degrees in the menu, so that the port of the display will switch to the right. As shown below.



After rotating 180°



Chapter 06

Q&A

Q: Abnormal conditions occurred - like the splash screen or spots when using the monitor.

- A: 1. It is caused by an insufficient power supply. Monitor required large power support. Please use the attached genuine cable provided to power the monitor.
- 2. If use the mobile power bank to power the monitor, please confirm whether the mobile power bank is a PD power bank that has reached 30W or more. Please contact us if you need a power bank.
- 3. If the resolutions above do not work, please try another computer device. If it failed, please contact us for the replacement of the cable.

Q: The monitor fails to start and the screen is blank.

A: 1. Please TURN ON the power supply.

2. Please check whether the connection is correct. Please unplug the cable and reconnect. Please use the genuine cable and the power adapter.

Note: Most Samsung mobile phones can not power for the monitor, please power the monitor with an additional power adapter.

3 . Please contact us if the troubleshooting above does not help.

Q:The display is TURN-ON, shows "NO SIGNAL" or "POWER SAVING".

- A: 1. Please check if the mobile phone supports USB3.1./Thunderbolt 3. When you are using Type-C to Type-C to connect the monitor and the mobile phone. An HDMI adapter is required to transfer the signal if your mobile phone does not support USB3.1./Thunderbolt 3.
- 2. Please check whether the connection is correct. Please use the genuine cable provided.
- 3. Please try another computer . If it failed, please contact us for the replacement of the cable.

Q: The monitor is constantly restarting.

- A: 1. It is caused by an insufficient power supply. Monitor required large power support. Please use the attached genuine cable provided to power the monitor.
- 2. If use the mobile power bank to power the monitor, please confirm whether the mobile power bank is a PD power bank that has reached 30W or more. Please contact us if you need a power bank.
- 3. If the resolutions above do not work, please try another computer device. If it failed, please contact us for the replacement of the cable.

Chapter 07 Service Support

Dear Customer.

Thank you for purchasing the Portable USB Monitor!

We offer 100% money back guarantee in 30 days and 90 days replacement, 12 month warranty for any issue, professional tech support to ensure no-worry service.

Any query or problem, please contact us via help@uperfectmonitor.com

