

pTron

Basspods 681

Gaming True Wireless Earbuds



User Manual

Button Description:

Caution: pTron Basspods 681 are set at 60% default volume, and the earbuds do not support volume adjustment. Please control the volume through the phone.



Touch Sensitive Area (TSA)

Smart Power On & Pairing:

1. Open the charging case cap, earbuds will switch ON.
2. Wait for 2-3 seconds until L & R earbuds pair to each other.
3. Turn on the Bluetooth on your phone & search for "pTron TWS" to connect with the device.

Mode Change:

Touch Right earbud for 3-4 seconds to change the mode - Game and Music mode.

Note: Music mode will be on by default.

Smart Power Off:

Touch TSA on both the earbuds for 5 seconds Or Keep both the earbuds into the charging case and close the charging case cap.

Note: TSA stands for Touch Sensitive Area

Connectivity Bluetooth - Automatic:

Just open the charging case, earbuds will switch ON. They will automatically connect to the last connected device (Instant wake & pair technology).

Note: The last connected device must be in 10meters wireless range and Bluetooth function must be On.

Calling or Music through Mono & Dual Buds:

Mono Bud Use - Just place the right or left earbud back into the charging case and close the charging case cap.

Dual Buds Use - Use left & right earbuds together.

Voice Assistant Activation:

Touch TSA on the left earbud for 3 seconds, didi sound will indicate that your phone's voice assistant is active.

Call & Music Functions:

Answer/Hangup a Phone Call - Touch TSA on either earbud once.

Reject a Phone Call - Long Touch TSA on either earbud.

Music Play/Pause - Touch TSA on either earbud once.

Next Song - Touch TSA on right earbud twice

Previous Song - Touch TSA on left earbud twice

Note: TSA stands for Touch Sensitive Area

Charging the Earbuds:

1. Place both the earbuds into the charging case properly and close the cap. The earbuds will power off automatically when placed into the charging case and earbuds will start charging.

2. The Green LED indicator of the charging case is permanently ON during charge by charging case.

3. During the charging of earbuds, Red light will glow in the buds. And in the charging case digital display will show battery % decreasing.

4. After the complete charging of buds, the battery percentage will stop decreasing which is displayed in the charging case.

Charging the Case:

1. Connect the Type-C USB cable to the charging case and the USB end to a 5V power source.
2. The Red indicator will blink when you connect the charger with the charging case and the digital display of the charging case will also display the charging status. The charging percentage will increase until it reaches up to 100%.
3. The charging case will blink multiple lights during charging.
4. Disconnect the power supply once the case reaches 100%.

Note: Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.

Troubleshooting

Scenario 1: One Earbud is Not Working

1. Place both the earbuds in the charging case and close the charging case cap.
2. Now just open the cap of the charging case.
3. Wait until L & R earbud pair to each other. After successful matching, only 1 earbud will flash Blue & Red light.
4. Turn ON the Bluetooth of your phone and start searching for "pTron TWS" & then connect.

Troubleshooting

Scenario 2: Earbuds Not Connecting/Scanning

1. Place both the earbuds in the charging case and close the lid properly.
2. Unpair the Bluetooth device with the connected device.
3. Take out both the earbuds together from the charging case.
4. Restart your Bluetooth device.
5. Now, search for "pTron TWS" on your device & pair it with the Bluetooth device & then connect it.

Troubleshooting

Scenario 3: Earbuds Disconnecting During a Phone Call

1. Charge earbuds 100% before use.
2. Restart the earbuds and reconnect with your device.

Safety Precautions:

1. Please keep this device away from extreme heat, liquids, humidity or corrosive environment.
2. Please don't over-charge the product as it will decrease the service life of battery.
3. Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.
4. This product or the Bluetooth function should not be used during charging.
5. Don't jam the ports such as charger port, LED port, etc.
6. It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

7. Please don't open/temper the product or product's battery.
8. Please keep the product out of children's reach.
9. Dispose the product responsibly and adhere to your local authority guidelines.

Disclaimer:

The colors and specifications shown/mentioned in the user manual may differ from the actual product. The images shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.