

pTron



Basspods P481 Pro ANC

True Wireless Earbuds

User Manual

Modes

- 1. Transparency Mode:** Touch L earbud for 3 seconds.
- 2. ANC On:** Touch L earbud for 3 seconds.
- 3. ANC Off:** Touch L earbud for 3 seconds.
- 4. Game Mode:** Touch R earbud for 3 seconds.

Note: Music mode will be On by default.
To swap between Game mode and Music mode, Touch R earbud for 3 seconds.



Multi-function Control (MFC)
Touch Sensitive

Smart Power On & Pairing

1. Take out both the earbuds from the charging case Or Touch MFC on both the earbuds for 3 seconds.
2. Wait for 3- 5 seconds until L & R earbud pair to each other.
3. Turn on the Bluetooth on your phone & search "pTron TWS" to connect with the device.

Smart Power Off

Touch MFC on both the earbuds for 3 seconds
Or Keep both the earbuds into the charging case.

Connectivity Bluetooth - Automatic

Just turn on the Bluetooth earbuds. They will automatically connect to the last connected device (Instant wake & pair technology).

Calling/Music through Mono & Dual Buds

Mono Bud Use - Just place the right or left earbud back into the charging case.

Dual Buds Use - Use left & right earbuds together.

Voice Assistant Activation

Tap MFC on either earbud 4 times.

Call & Music Functions

Answer/Hangup a Phone Call: Tap MFC once on either earbud.

Reject a Phone Call: Touch MFC on either earbud for 2 seconds.

Music Play/Pause: Tap MFC once on either earbud.

Next Song: Tap MFC twice on left earbud.

Previous Song: Tap MFC twice on right earbud.

Volume Up: Tap MFC thrice on left earbud.

Volume Down: Tap MFC thrice on right earbud.

Charging the Earbuds

1. Place both the earbuds into the charging case properly. The earbuds will power off automatically when placed into the case.
2. The Red LED indicator is permanently ON during charging.
3. When earbuds are fully charged, the Blue LED indicator will turn ON & it will turn OFF in few seconds.

Charging the Case

1. Connect the Type-C end to the charging case and the USB end to a 5V power source.
2. The digital display will show the battery % charged.
3. When earbuds are fully charged, the Blue LED indicator will turn ON & it will turn OFF in few seconds.

Caution

Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty.

We strongly recommend using DC5V-1A chargers & the USB cable included in the package.

Troubleshooting Scenario 1: One Earbud is Not Working

1. Place both the earbuds into the charging case.
2. Take out both the earbuds together from the charging case.
3. Wait for 3-5 seconds, both the earbuds will pair to each other.
4. Turn ON the Bluetooth function on your phone, search for "pTron TWS" & connect.

Troubleshooting Scenario 2: Earbuds Not Connecting/Scanning

1. Place both the earbuds into the charging case.
2. Take out both the earbuds together from the charging case.
3. Unpair "pTron TWS" from your phone's Bluetooth settings.

4. Restart your Bluetooth device or phone.
5. Now, search for "pTron TWS" on your Bluetooth device & connect.

Troubleshooting Scenario 3: Earbuds Disconnecting During a Phone Call

1. Charge earbuds 100% before use.
2. Restart the earbuds and reconnect with your device.

Disclaimer

The colors and specifications shown or mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or on trade names of their respective owners.