

BagBoy®


Compact 3 Instructions

If any items are missing please contact us 1-800-955-2269
Warranty information is available at www.bagboy.com



English


We congratulate you on your purchase of a Bag Boy Compact 3 golf cart and appreciate your confidence in our products. Please read the following important information before the first use. The Compact 3 golf cart will come partially assembled.

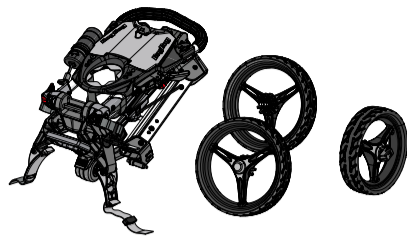

Remove the cart from the carton and check that the following items are included:


- Compact 3 frame
- 2 Rear wheels
- 1 front wheel
- 1 Umbrella holder (optional equipment)
- 1 Allen key

TO ASSEMBLE THE Compact 3

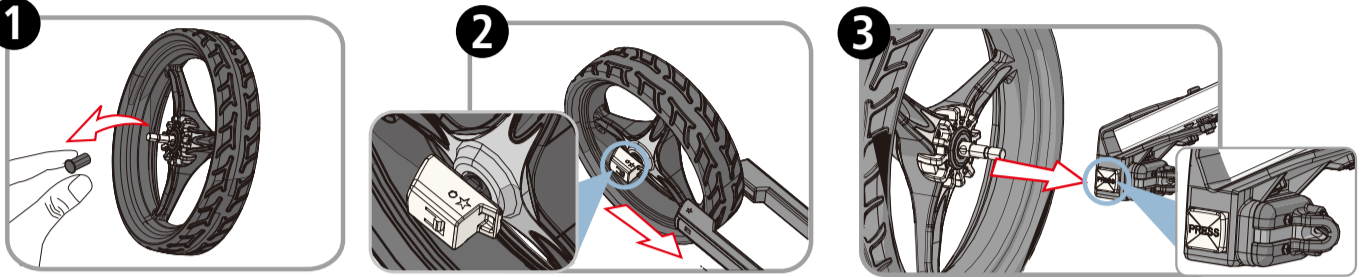


- 1 Remove the black plastic cap from the rear wheel axles.
- 2 Install the front wheel - Look for a STAR on the wheel axle and on the fork. Align these STARS and slide the front wheel into the fork blades. The fork blades may need to be spread apart - the fit will be snug. Slide the front wheel until you hear "Click" that locks the front wheel into place.
- 3 Attach the 2 side/rear wheels by pressing the "PRESS" button and inserting the axle of the wheels into the cart until the wheel "Clicks" into place. To remove the rear wheels: Locate and press the "PRESS" button and the wheel can be removed.

TO UNFOLD THE Compact 3: Simple 3 step process.

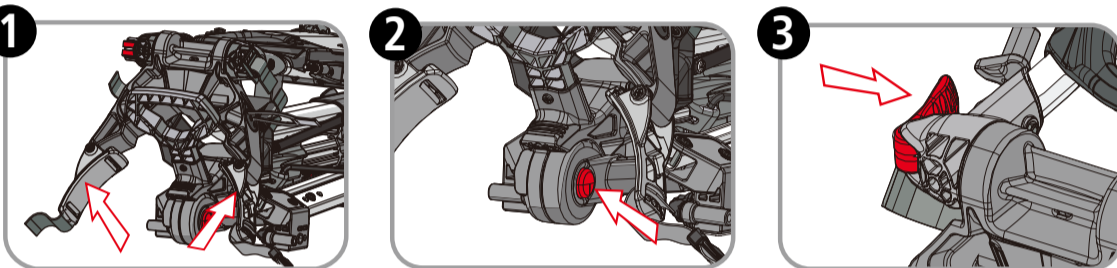


1. While the cart is resting on the ground hold both sides of the upper bag brackets and lift the Compact 3 until the cart "Clicks" open.
2. Press the RED front wheel release button and rotate the front wheel until it "Clicks" into open position.
3. Flip the red Handle Lock release lever. Adjust the handle to the desired and comfortable height. Close the "LOCK" lever to lock the handle into position.

TO FOLD THE Compact 3: The wheels can remain on the cart, OR the rear wheels can be removed to create an ultra compact package.

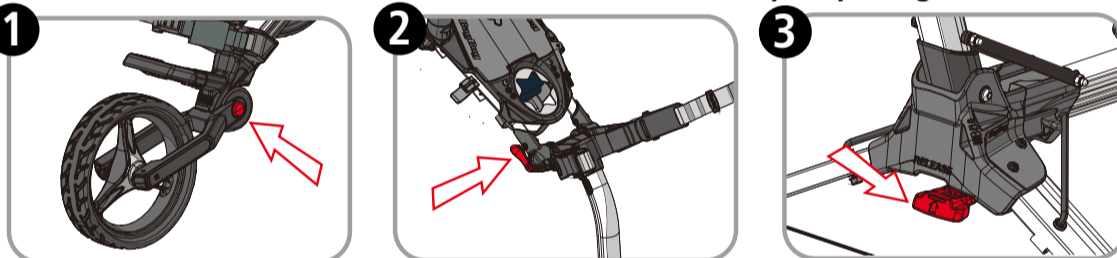

1. Press the RED front wheel release button and rotate the front wheel. Rotate the front wheel assembly until "Clicks" into a closed position.
2. Unlock the handle release lever and lower the handle into a closed position.
3. Lift RED "Release" lever located below the main pivot point of the cart, rotate the upper frame at the same time to initiate the fold.

OTHER KEY FEATURE TO THE Compact 3

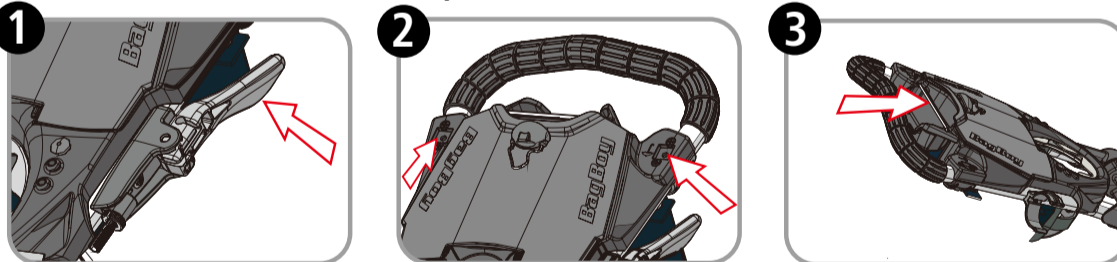


1. Brake: Located on the side of the handlebar is a Brake Lever. This will lock a rear wheel. DO NOT PUSH THE CART WHILE THE BRAKE IS ENGAGED.
2. Optional Equipment: Umbrella holder. Can be installed in either left side or right side location marked with an umbrella symbol.
3. Located in the back of the scorecard holder is a tray for Smartphones or GPS units. The bungee is in place to hold the device in place. CAUTION: this bungee does not LOCK the device in place. Oversized devices should not be placed in this holder. NOTE: REMOVE device before folding the cart


Front wheel alignment

If your cart does not track straight, you can easily align the wheels by following these steps:

Stand in front of the cart, locate the 1 allen head screw in the fork tips. Use the provided allen wrench. If your cart pulls to the left, tighten the screw by turning clockwise. If it pulls to the right, turn the screw counterclockwise.

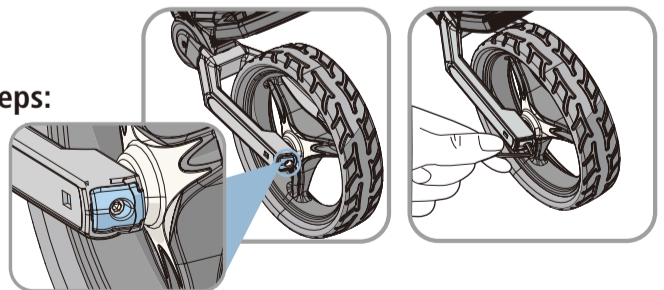

To remove the front wheel, tool needed-medium size screw driver

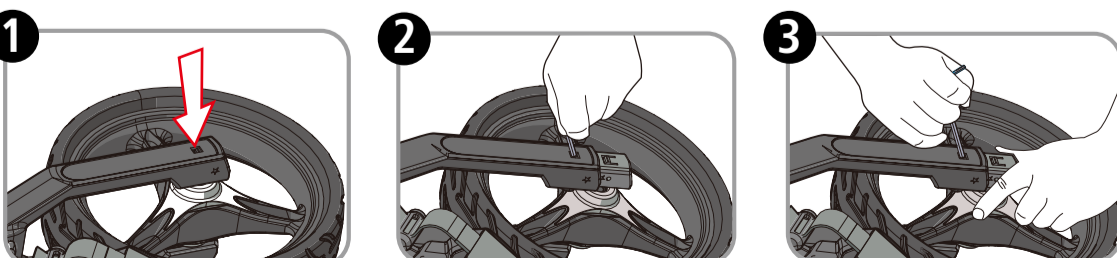

1. Place blade of the screw driver into slot.
2. Place a light pressure to push the front wheel out of the fork legs, repeat on the left and right sides, this UNLOCKS the front wheel for easy removal.
3. Pull the front wheel out of the fork.