

ENGLISH

We congratulate you on your purchase of a Bag Boy QUAD JUNIOR golf cart and appreciate your confidence in our products.

Please read the following important information before the first use.




Remove the cart from the carton and check that the following items are included:

- OUAD JUNIOR frame
- 1 Beverage holder
- 1 Allen key
- 2 Rear wheels 2 Front wheels


TO ASSEMBLE THE QUAD JUNIOR




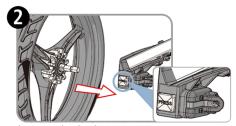

- 1. Remove the black plastic cap from the rear wheel axles.
 2. Attach all 4 wheels by pressing the "PRESS" button and inserting the axle of the wheels into the cart until the wheel clicks into place. To remove the wheels, locate and push the "PRESS" button and pull the wheel away from the cart.

 
TO UNFOLD THE QUAD JUNIOR: Simple 2 step process.

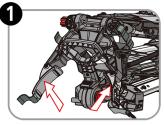




- 1. While the cart is resting on the ground, hold both sides of the upper bag bracket and lift the QUAD JUNIOR until the cart is fully open.
- 2. Flip the red Handle Release lever. Adjust the handle to the desired position and close the lever to lock the handle into position.


TO FOLD THE QUAD JUNIOR: The wheels can remain on the cart, OR the wheels can be removed to create an ultra compact package.

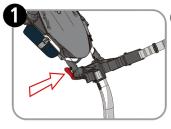

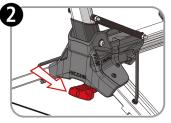


- 1. Unlock the handle release lever and lower the handle into a closed position.
- 2. Lift the RED "Release" lever located below the main pivot point of the cart, rotate the uper frame at the same time to initiate the fold.

 OTHER KEY FEATURES TO THE QUAD JUNIOR





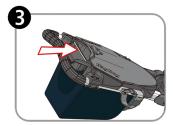

- 1. Brake: Located near the right wheel. Press down to engage and lift up to disengage. DO NOT PUSH THE CART WHILE THE BRAKE IS ENGAGED.
- 2. **Beverage Holder:** Attach to the left side of the cart by inserting the swivel pin and twisting to lock into place.
- 3. **Mobile Device Holder:** Located on the back of the scorecard holder. Place device in tray behind bungee cord.

CAUTION: Remove the device before folding the cart. NOTE: The bungee does not lock the device in place.

GOLF BAG FIT

Shorter junior golf bags may not reach the upper bag bracket. If you are experiencing this, unscrew the knobs from below the lower bag bracket and install on top of the lower bag bracket foot to raise the bag.

