




## TRISWIVEL 2 Instructions


1.800.955.2269 • customerservice@bagboy.com  
Assembly video, information about warranty and registration  
online at [www.bagboy.com](http://www.bagboy.com)

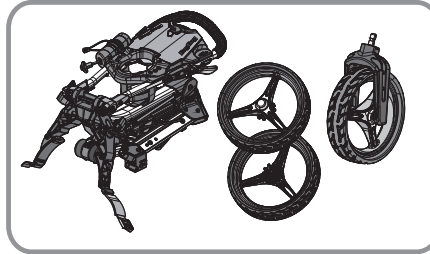


**The TriSwivel 2 golf cart will come partially assembled.**

Remove the cart from the carton and check that the following items are included: TriSwivel frame, 2 Rear wheels, 1 front wheel and fork assembly. Umbrella holder is an optional accessory.


### To Assemble the TriSwivel:

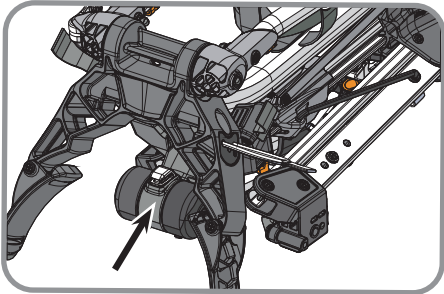

1. Press the RED front wheel release button and rotate the front wheel housing. Turn to the 2nd "Click" setting.

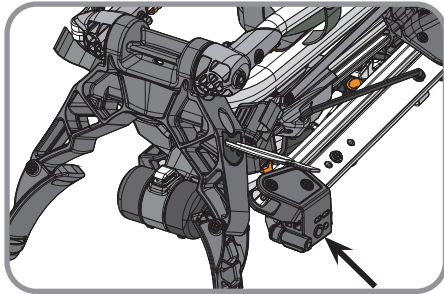


2. Remove the black plastic covers from the axles. Attach the 2 side/rear wheels by pressing the SILVER "PRESS" button and inserting the axle of the wheels into the cart until the wheel "Clicks" into place.

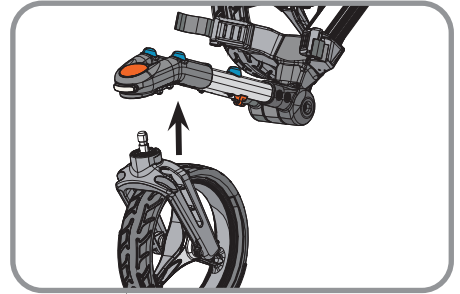


3. Install the front wheel assembly. Insert the spindle into front wheel base until the fork "Clicks" into place. To remove the front wheel, press the Silver release button located at the front of the front wheel housing.


### To Unfold the TriSwivel:

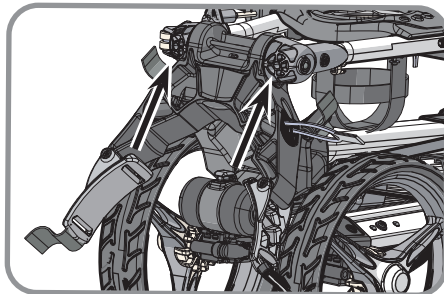

4. While the cart is resting on the ground, hold both sides of the upper bag brackets and lift the TriSwivel until the cart "Clicks" open.

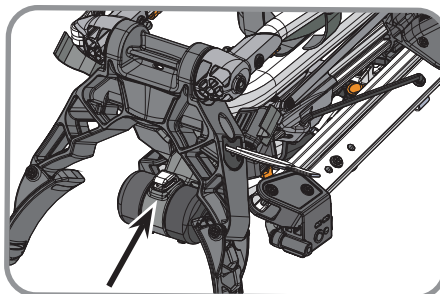


5. Press the front wheel release button and rotate the front wheel and housing until it "Clicks" into open position.

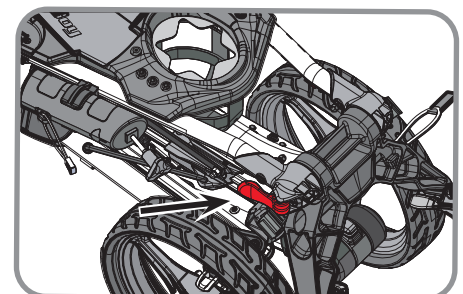


6. Flip the Handle Lock release lever. Adjust the handle to the desired and comfortable height. Close the "LOCK" lever to lock the handle into position.


### To Fold the TriSwivel: The wheels can remain on the cart, OR the wheels can be removed to create an ultra compact package.

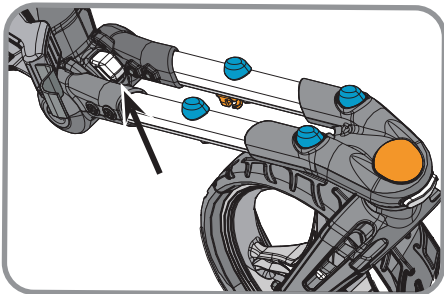

7. Press the RED front wheel release button and rotate the front wheel and the housing together. Rotate the front wheel assembly until "Clicks" into a closed position. It is best to prevent the front wheel from rotating press the "Swivel lock" button to lock the front swivel.

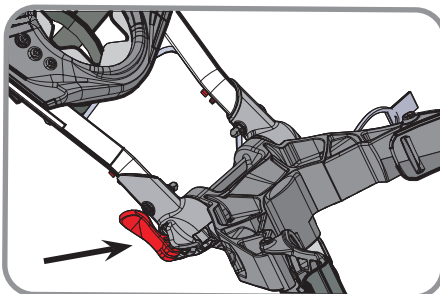


8. Unlock the RED handle release lever and lower the handle into a closed position.

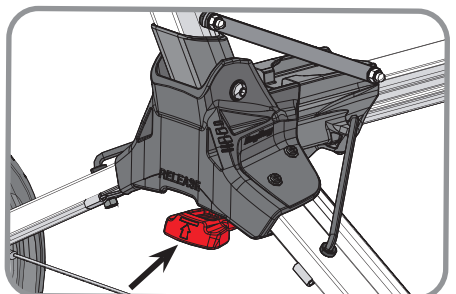

9. Locate the RED lower Main Frame Release lever, lift the lever and begin folding the frame forward with right hand.

### Other Key Features to the TriSwivel:

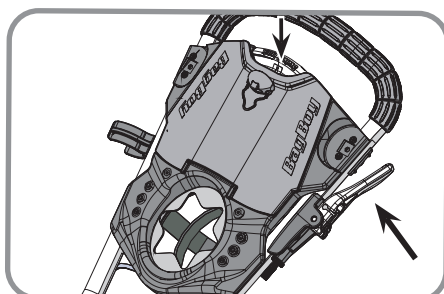

10. Swivel Lock OUT: There is a lever labeled "SWIVEL LOCK" located at the top of the scorecard holder. This feature will remotely lock out the front swivel when pushing on a side-hill terrain to give better control of the golf cart.

Brake: Located on the side of the handlebar is a Brake Lever. This will lock both rear wheels. DO NOT PUSH THE CART WHILE THE BRAKE IS ENGAGED.