

GolfBuddy[®] LR7



Quick Start Guide
www.golfbuddyglobal.com

INTRODUCTION

Thank you for choosing the GolfBuddy LR7.

The GolfBuddy LR7 is a laser rangefinder that calculates distance by measuring the time it takes for the laser to reflect off the target and back. This laser rangefinder's performance can be affected by the weather conditions as well as the size, shape, surface finish, and the color of the target. The LR7 is a compact, quick, and easy-to-use laser rangefinder.

The GolfBuddy LR7 can be used in various sports such as golfing and hunting. It can also be used for measuring architectural and other outdoor surveys.

 
Please read the following instructions carefully to increase longevity of the product and avoid any problems. Again, we thank you for choosing GolfBuddy and hope you enjoy your GolfBuddy LR7.

Overview



LCD Description


- 1 PIN Finder Mode
- 2 SCAN Mode
- 1&2 PIN Mode
- 3 Distance to the Target
- 4 Unit of Measurement (Yard/Meter)
- 5 Reticle/Focus Point
- 6 Battery Indicator

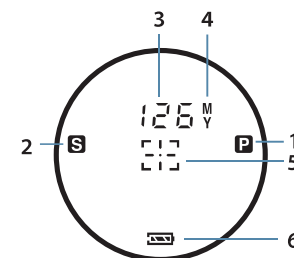

GETTING STARTED

INSERTING THE BATTERY

 Remove the battery cover by lifting and rotating the battery cap and turn counter-clockwise. Insert a CR2 3V battery into the compartment with the negative end facing in.

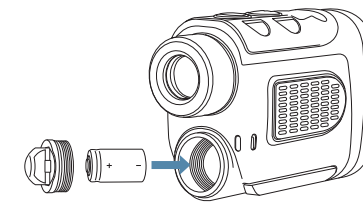

DIOPTRIC ADJUSTMENT (EYEPIECE)

The GolfBuddy LR7 is constructed with an adjustable eyepiece that allows you to focus on a targeted point. To focus your GolfBuddy LR7, simply turn the eyepiece to the left or the right until the object is in focus.

GETTING STARTED

HOW IT WORKS

1. Power On (Press the Power/Scan button)
2. Choose the targeting mode
3. Align the reticle with the target
4. Press the Power/Scan button
5. View the distance

CHANGING THE UNIT OF MEASUREMENT

 
To change the unit of measurement, hold down the MODE button for 3 seconds to alternate from METER to YARD and vice versa.

GETTING STARTED

SELECTING TARGETING MODES

The various modes allow you to adjust the performance parameters of the laser rangefinder to suit your specific situation and environment. To move from one mode to another, press the MODE button. You may choose from 4 different targeting modes (see below).

- Standard Mode** : Provides distance to the target.
- Scan Mode** : With one click, continuously scans for 10 seconds to show distances to varying targets.
- Pin Mode** : With one click, continuously scans for 10 seconds to show distances to varying distances; distances displayed are to the closest target.
- Pin Finder Mode** : Press and hold the scan button to show distances to varying targets; distances displayed are to the closest target and will be confirmed with a vibration.



Standard Mode Scan Mode Pin Mode Pin Finder Mode

IMPORTANT NOTE: For mode changes or when using the Power/Scan button, the action required is to press and release the button. It is not required to hold the button to obtain the required function except in Pin Finder Mode.

PACKAGE INCLUDES:



GolfBuddy LR7



Carrying Case



CR2 Battery



Strap



Microfiber Cloth



Quick Start Guide



Product Label

FEATURES and SPECIFICATIONS

FEATURES

- Pin Finder with vibration
- 4 targeting modes (Standard, Scan, Pin, Pin Finder)
- Legal for tournament play
- Accuracy +/- 1 yard
- Water resistant
- Ergonomic body design
- Automatic shut-off after 10 seconds when not in use
- Default to "last used" settings
- Diopter adjustment (Eyepiece adjustment)
- Battery life: 2,000 ~ 4,000 actuations
- Distance mode (Meters/Yards)

SPECIFICATIONS

Magnification	6x
Range	5-880Y/5-800M
Objective Lens	23mm
Eye Relief	13mm
Display	LCD
Lens	Multi-Coated

Wavelength	905 nm
Pulse width	15-20ns
Accuracy	+/-1 yard
Battery life	2,000-4,000 actuations
Battery type	CR2 3V Lithium
Weight	7.69 oz. (218 g)

 
SAFETY PRECAUTIONS

Read this instruction manual in its entirety before using this laser rangefinder. Please adhere to the following guidelines in order to use the equipment properly and avoid any injuries.

Please keep this manual within reach for reference.

WARNING

- DO NOT aim directly at the sun.
- DO NOT power on while looking into the laser aperture.
- DO NOT disassemble the laser rangefinder as this will void the warranty.
- DO NOT aim at the eye of other people or animals.
- DO NOT operate if damaged.
- DO NOT leave the laser rangefinder in a car on a hot or sunny day, or near heat-generating equipment. This may damage or negatively affect it.
- DO NOT leave the eyepiece in direct sunlight. The condenser effect of the lens may damage the internal display surface.



SAFETY PRECAUTIONS

CAUTION

- Keep the laser rangefinder away from children's reach.
- If sand, mud, and any type of liquids gets on the device, we recommend to have it removed immediately using the microfiber cloth included in the package.
- Although the laser rangefinder is water and dust resistant, it is not waterproof and should not be used under water.
- Do not place the laser rangefinder on any unstable places as it may fall and be damaged.

CARE and MAINTENANCE

- Remove dust or dirt on the lens surface using the microfiber cloth included in the package.
- Remove smudges or fingerprints by gently rubbing with a soft and clean cotton cloth or quality oil-free tissue. You may use photographic-type lens cleaner or isopropyl alcohol to wipe the lens. Always apply the fluid to the cleaning cloth(DO NOT pour on the lens).

TROUBLESHOOTING

IF THE DISPLAY MALFUNCTIONS :

1. Reinsert the battery.
2. Be sure the polarity (+/-) of the battery is correct.
3. Make sure the battery is not drained.
4. Press the power button firmly.

IF TARGET RANGE CANNOT BE OBTAINED :

1. Be sure the device is powered on.
2. Check if anything is blocking either of the lenses.
3. Make sure you are not trying to measure beyond the maximum measuring distance.

* If the laser rangefinder still does not work properly, please contact GolfBuddy. (www.golfbuddyglobal.com)

WARRANTY :

Your GolfBuddy LR7 is warranted to be free of defects in materials and workmanship for 1 year since the date of purchase (based on the date of receipt/invoice). In the event of a defect under this warranty, we will, at our option, repair or replace the product at no cost. This warranty does not cover damages caused by misuse and improper handling. The warranty is voided if modified or service is attempted by anyone other than a GolfBuddy technician.