

Golf Buddy WTX+



Quick Start Guide
www.golfbuddyglobal.com

BASIC OPERATION

Target / Hazard Information

- From the Play Golf Mode, tap the **Dynamic Green View** image or swipe the screen from right to left continuously to view the Hole Layout and Hazard Information.
- Tap the **Hole Layout** image or swipe the screen from left to right to return to the previous screen.
- From Hole Layout screen, Tap the **Hazard Information** image or swipe the screen from right to left to view Hazard Information.
- If more than 3 hazards are available, swipe the screen up or down to see more.



Quick Watch Mode (Sunrise/Sunset Time)

- In Play Golf Mode, tap the indication area at the top of the screen (outlined in red on the image) to switch the Quick Watch Mode for the current, sunrise and sunset time.
- The Quick Watch Mode will be displayed for 5 seconds and will automatically return to Play Golf Mode. Or, instead of waiting, tap the screen and it will return to Play Golf Mode immediately.

 


DEVICE OVERVIEW

Overview of WTX



Screen Description

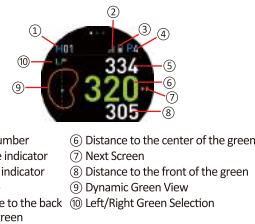

Main Menu



- GolfBuddy**
This feature runs "GolfBuddy GPS Golf Application" (Please refer to Play Golf for the detailed information).

- Find Phone**
This feature will be used to find the phone connected with WTX via Bluetooth, and needs to install the GolfBuddy application for use in mobile phone.

Setting

BT settings	Bluetooth On/Off, Visibility
Display	Main Menu style, Brightness, Screen time out
Clock	Clock type, Date, Time, Time format, DST
Sport	Lap Len (Distance per lap)
Language	Multilingual
Motion	Wake-up gestures
Style	3 theme styles
Calendar	Calendar
Reset	Erase all user data from WTX
About	Information (Device, S/N etc)

GETTING STARTED

Power On/Off

- Press and hold the power button for 4 seconds to turn the WTX ON/OFF.
- If you experience incorrect yardages or unusual behaviour on the WTX, we recommend to do a RESET. To RESET: turn the WTX off and then back on.

Charging

- Place the WTX on the charging cradle with the charging terminals facing each other.
- Connect the charging cradle with the USB power adapter by using the USB cable.
- Plug the USB power adapter into an electric socket.
- After fully charging the WTX, disconnect it from the charging cradle. Unplug the USB power adapter from the electric socket.

*Important: Do not use a quick charger or adapter to charge the WTX watch. Doing so may cause damage and void the warranty. AC adapters should not exceed 5.0v. Check your AC adapter prior to using.

 
Battery charging tips and precautions

- The "Data Sync" button may appear when using a power source other than the USB power adapter, such as a computer, which will be only used to update the firmware and courses via the GB Manager. Ignore this button when charging. Pressing the button may result in a slower charge or stopping the charge completely.
- Sweat or liquid on the charging terminals, may cause corrosion. Clean the terminals before charging the battery.
- If the battery is completely depleted, the WTX will not turn on immediately when the charging cradle is connected. Allow a depleted battery to charge for a few minutes before turning the WTX on.
- When the battery is charged in a high temperature environment such as inside a car during the summer, the WTX may overheat and can cause serious damages to the battery.
- Connecting the charger improperly may cause serious damage to the WTX.
- Any damage caused by misuse is not covered by the warranty.

BASIC OPERATION

Play Golf

- Once you are at the course, swipe the screen to the left to view the Main Menu.
- From the Main Menu screen, tap the "GolfBuddy" icon to enter Golf Mode. The WTX unit will automatically search for the golf course.



Distance to the Green

- By tapping the distance number on the screen (see images below), you will be able to switch Golf screens.



BASIC OPERATION

BASIC OPERATION

Automatic Hole Recognition

- The WTX will automatically advance to the next hole as you play through the course.
- Please note, in rare instances, it may be necessary to manually advance to the next hole.

Manual Hole Selection

- To change from the current hole to the next hole in Play Golf Mode, swipe the screen twice from top to bottom.
- To change from the current hole to the previous hole in play Golf Mode, swipe the screen twice from bottom to top.

Exit Golf Mode

- From Play Golf Mode, press and hold anywhere on the screen for 4 seconds to exit the game. Tap the "Yes" button to end the round.
- Once abnormal hole information, press "GPS Reset" or press power button 3 times, then GPS will reset.

How to use the Demo Mode

- To view the function of GOLF mode while away from the golf course, you can put the WTX into "Demo mode". To enter the "Demo mode", tap the red area in numerical order continuously at the screen of searching the satellite.



ADVANCED OPERATION

Pin Placement

- You can access the Dynamic Green View and Pin Placement Mode by tapping on the green **H07**. After the pin placement, you can return to the golf screen by tapping the screen.
- From Dynamic Green View screen, you may also change the placement of the pin on the green image by dragging the pin.

Measuring Shot Distance

- In Play Golf Mode, press and hold anywhere on the screen for 2 seconds to enter the Shot Distance screen.
- To start measuring your shot distance, tap the play button **H**. The Shot Distance Mode will return to the Play Golf screen by tapping the screen or pressing the "Power/ESC" key and will measure the distances in the background.
- Once you have reached your ball, press and hold anywhere on the screen for 2 seconds and tap the pause button **I** to finish measuring and view the shot distance.

Settings

- In the Shot Distance screen, you can enter "SETTINGS" by tapping the **Dynamic Green View** image or swiping the screen from right to left.
- From the Settings Menu, you can change the unit of measurement between Yards and Meters as well as switch the screen to Always ON/OFF.
- **Note: If "Screen Always On" is set to ON, the screen will always be on in Golf Mode, but the battery life will decrease faster (Max. 6 hours).

FCC Statement (USA)

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 3. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) this device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.

Warranty

GolfBuddy products come with a limited warranty against defects in materials and workmanship when used under normal consumer use for a period of one (1) year ("Limited Warranty"). The Limited Warranty begins to run from the date of original retail purchase. GolfBuddy, as its sole and absolute discretion, shall either (i) replace or repair the defective part(s) or the unit with a new or reconditioned part(s), or (ii) issue a credit for the parts or products that are covered under the Limited Warranty. To obtain warranty repair service, visit <http://help.golfbuddyglobal.com> or email support@golfbuddyglobal.com to obtain a Return Authorization Number. All returned products must be accompanied by an original purchase receipt and the Return Authorization Number. Any products that are returned without the requisite information shall be returned at the purchaser's cost and expense.

Golf Buddy WTX+



 
Guide de démarrage rapide
www.golfbuddyglobal.com

Détails de l'appareil

Vue de la WTX



description de l'écran

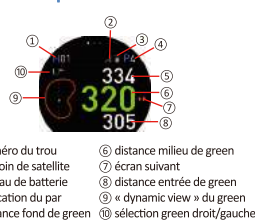

MENU PRINCIPAL



- GolfBuddy**
Cette fonction lance l'application « Golf Buddy Golf » (voir Play Golf pour plus de détails).

- Connecter le téléphone**
Cette fonction sert à localiser le téléphone à connecter, et nécessite l'installation de l'application Golf Buddy pour téléphone mobile.

Paramètres

Régler BT	Bluetooth on/off, détectable
affichage	style d'écran, luminosité, format horaire
Horloge	type de montre, date, heure, format
Sport	distance par tour
Langage	multilingue
Mouvement	mouvements de sortie de veille
Styles	3 thèmes
Calendrier	calendrier
Réinitialiser	efface toutes les données utilisateur de la WTX
A propos de +	Information (appareil, numéro de série etc...)

OPERATIONS DE BASE

INFORMATIONS SUR LES OBSTACLES

- A partir du mode Golf, appuyez sur **Dynamic Green View** ou balayez l'écran vers de gauche à droite pour voir le plan du trou et les informations des obstacles.
- Appuyez sur **Hole Layout** ou balayez l'écran de gauche à droite pour revenir à l'écran précédent.
- A partir de l'écran de plan du trou, appuyez sur **Hazard Information** ou balayez l'écran de droite à gauche pour voir l'écran des obstacles.
- S'il y a plus de 3 obstacles répertoriés, balayez l'écran de haut en bas pour voir les autres obstacles.



MODE « QUICK WATCH »

- En mode Golf, appuyez sur la barre d'indication encadrée en rouge sur le schéma ci-dessous pour lire les heures de lever et de coucher du soleil.
- Le mode QUICK WATCH restera affiché 5 secondes puis l'écran reviendra automatiquement en mode Golf. Si vous appuyez sur l'écran le retour au mode Golf sera immédiat.



OPERATIONS DE BASE

Reconnaissance automatique du trou

- La WTX avancera automatiquement au trou suivant au fur et à mesure de votre progression sur le parcours.
- Notez qu'en de rares circonstances vous pourrez être amené à passer manuellement au trou suivant.

Sélection manuelle du trou

- Pour passer du trou en cours au trou suivant lorsque l'on est en mode Golf, balayez l'écran de haut en bas.
- Pour revenir au trou précédent, balayez l'écran de bas en haut.

Quitter le mode Golf (réinitialisation GPS)

- À partir de Play Golf Mode, maintenez votre doigt appuyé n'importe où sur l'écran pendant 4 secondes pour quitter le jeu. Appuyez sur le bouton "Yes" pour terminer la partie.
- Si des informations sur le trou sont anormales, appuyez sur "GPS Reset" ou appuyez sur le bouton d'alimentation 3 fois, le GPS sera alors réinitialisé.

Comment utiliser le MODE DEMO

- Pour voir les fonctionnalités sans être sur un parcours, vous pouvez mettre la WTX en MODE DEMO
- Tapez les trois points indiqués par les carrés rouges dans l'ordre 1/2/3
- Demo doit s'afficher après quelques secondes à droite de l'écran comme indiqué sur le deuxième écran.
- Une fois la DEMO lancée vous pouvez naviguer entre les écrans.



Golf Buddy WTX+



 
快速入门指南
www.golfbuddyglobal.com

设备简介

WTX+ 概观



屏幕简介

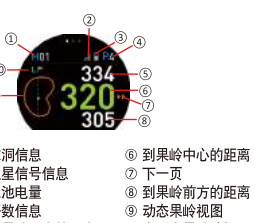

主菜单



- GolfBuddy**
此图标为 Golf Buddy 下场打球应用程序* (*详细请参看 打高尔夫 小册)

- 搜索手机**
此功能可连接到已搜索到的手机, 手机上需要安装 Golf Buddy 移动应用。

设置

蓝牙设置	蓝牙开关, 可见性
显示	主题样式, 亮度, 熄屏时间
时钟	时钟样式, 日期, 时间, 时间格式
运动	周长 (每圈的长度)
语言	多种语言
动作	唤醒手势
样式	3种主题样式
日历	日历
重置	清除 WTX 中所有的用户数据
关于	相关信息 (设备, 版本号)

基本操作

目标/障碍信息

- 在打高尔夫模式下, 点击 **Dynamic Green View** 图标或者从右至左连续滑动屏幕, 可以看到球洞布局 和障碍信息。
- 点击 **Hole Layout** 图标或者从左至右连续滑动屏幕可以回到之前的屏幕。
- 在球洞布局屏, 点击 **Hazard Information** 图标或者从右至左连续滑动屏幕可以查看障碍信息。
- 如果多于3个障碍, 可以上下滑动屏幕查看



快速查看模式 (日出/日落时间)

- 在打高尔夫模式下, 点击屏幕顶部的指示区 (图红框标出的区域) 可切换快速查看模式, 显示当前时间, 日出和日落时间。
- 快速查看模式会显示5秒然后自动返回至打高尔夫模式, 或者如果不想等待, 直接点击屏幕即可回到打高尔夫模式。



基本操作

自动球洞识别

- 当在球场打球时, WTX 会自动移至下一洞。少数情况下可能需 要手动选择移至下一洞。

手动选择洞

- 在打高尔夫模式中要从当前洞移至下一洞, 可以从上向下滑动两次屏幕。
- 在打高尔夫模式中要从当前洞移至前一洞, 可以从下向上滑动两次屏幕。

退出 Golf 模式

- 在打高尔夫模式, 按住屏幕任意位置4秒或者电源键连续按3次以上时可以退出退出出局。点击"YES"按钮结束此局。

如何使用演示模式

- 远离高尔夫球场或找不到卫星信号的室内可以查看高尔夫模式的功能。你可以把WTX在"演示模式"进入"演示模式在搜索卫星的屏幕上按数字顺序连续点击红色区域。



产品保证

GolfBuddy WTX自购买之日起1年以内(以发行收据的日期为准)可得到免费保证。保证期间内根据本公司的判断免费予以替换或维修。如果是因消费者的失误而发生的问题, 即使在保证期间内也收取相应的费用。如果除GolfBuddy技术人员以外的其他人擅自改造或变更仪器时, 则无法得到赔偿。

开始使用

电源开/关

- 按住电源按钮4秒来开/关 WTX 手表
- 如果码数不正确或 WTX 工作不正常, 建议您重置一下设备。要重置设备只需关 机后重启即可。

充电

- 将 USB 充电板对准手表背面的触点进行连接充电。充电信息会在屏幕上显示, 充满时显示 100%。
- 移除充电板以断开它于 WTX 的连接

- *注意: 请不要用快速充电器对 WTX 充电, 否则可能造成设备 损坏以及响 响保停。充电器电压不可超过5V。请在充电前检查您的充电器参数。

基本操作

Play Golf

- 当您在球场, 向左滑动屏幕可以查看主菜单。
- 在主菜单中点击 "GolfBuddy" 图标可以进入 Golf 模式。WTX 设备会自动搜索高 尔夫球场。



果岭距离

- 点击屏幕上的距离数字 (见下图), 可以切换打球界面。



高级操作

放置旗杆

- 点击果岭 **H** 可访问动态果岭视图及旗杆定位模式。放置旗杆后, 点击屏幕可回到 Golf 界面。
- 在动态果岭视图界面, 可以拖动旗杆改变旗杆在果岭图上的位置。



测量击球距离

- 在打高尔夫模式下, 按住屏幕任意位置2秒可进入击球 距离屏幕。
- 点击 **H** 按钮开始测量击球距离。点击屏幕或按 "Power/ESC" 按钮回到打高尔夫屏, 会继续在后台测量距离。
- 当到达高尔夫球所在位置, 按住屏幕任意位置2秒并点击暂停按钮来结束测量, 可查看此次击球距离。

设置

- 在击球距离屏幕, 可以点击 **H** 图标或从右至左滑动屏幕来进入"设置"。
- 在设置菜单, 您可以切换测量单位码/米, 以及切换屏幕的开/关。
- *注意: 如果 "背光常亮" 设置为开启, 屏幕在 Golf 模式下常亮, 此时比较耗电电量。