
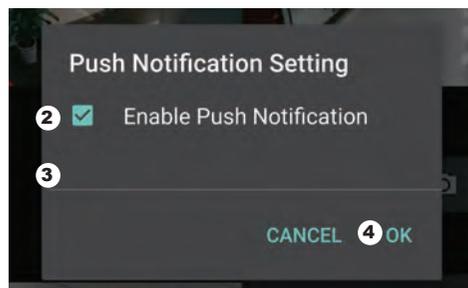


Push Notification

a. Enable/disable the push notification:



For Android

1. Go to more section to tap Push Notification.
2. Click/unclick to enable/disable the push notification.
3. Enter user name.
4. Tap "OK" when you done.

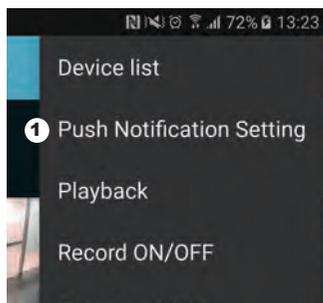

For iOS

1. Tap icon.
2. Enable/disable the push notification.
3. Enter user name.
4. Tap "Save" when you done.

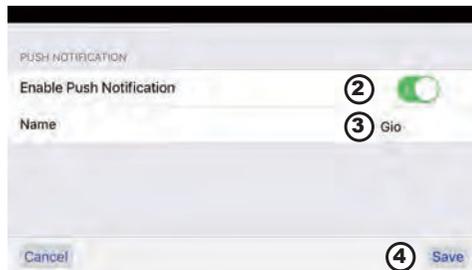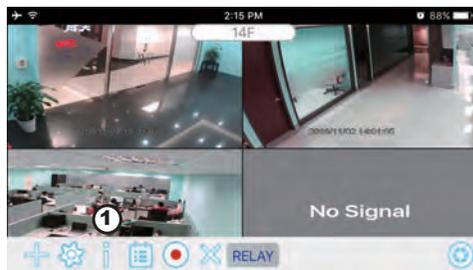

b. interval

Go to the push notification setting to setup interval time of the push. There are four options you can select how long you'll receive the push.

Note: Your smart phone will receive the push immediately after first triggered. After that the camera will send the push according to interval time you setup. This function allows you to receive less push of one serial event happened continuously in time.

For Android

1. Tap push notification setting
2. Setup interval time of the push

For iOS

1. Tap push setting
2. Setup interval time of the push

c. Time period:

This function allows you to setup "Do Not Disturb" time. You can setup when Push is to start and end. Only during the time, you will receive the push.

d. List:

From list section, you can see which smart devices currently receive push from the system. WDVR app allows max 8 devices to receive the push. You may remove all devices from the push list by resetting the language.

FACTORY DEFAULT SETTING

1. Go to the system setting.
2. Reset the language.
3. The system settings will restore to factory default.

Note: Please change default security code and apply push service from smart devices after you reset the language and system parameter to default.

SecuFirst Ericssonstraat 2, 5121 ML Rijen, Netherlands

W: www.secufirst.eu E: info@secufirst.eu



FCC Compliance Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Products with CE Marking comply with EMC Directive (2014/30/EU); Low Voltage Directive (2014/35/EU); RED (2014/53/EU); ROHS Directive (2011/65/EU) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms:
EMC: EN 301489
LVD: EN 60950
Radio: EN 300328



If the camera system no longer functions or can no longer be repaired, it must be disposed of according to the valid statutory regulations. Disposal of spent batteries/accumulators: You are required by law (Battery Ordinance) to return all spent batteries and accumulators. Disposing of spent batteries/accumulators with common household waste is prohibited! Batteries/accumulators that contain hazardous substances are marked with the symbols on the side. These symbols indicate that it is prohibited to dispose of these batteries/accumulators in the household waste. The abbreviations for the respective heavy metals are: Cd=cadmium, Hg=mercury, Pb=lead. You can return spent batteries and accumulators that can no longer be charged to the designated collection points in your community, outlets or wherever batteries and accumulators are sold. Following these instructions will allow you to fulfill the legal requirements and contribute to the protection of our environment!