

DC108 Hygrometer Operation Manual
Digital Thermo-Humidity Meter

1. Specification:

-Temperature Range:

Indoor: $-10^{\circ}\text{C} \sim +50^{\circ}\text{C}$ ($+14^{\circ}\text{F} \sim +122^{\circ}\text{F}$)

-Humidity Range: indoor 20% ~ 99% RH

(When the humidity < 20%RH, display 10%RH directly.)

-Power-supply: 1x 1.5V (AAA size battery) Not Included

2. Functions:

-Indoor temperature display

-Indoor humidity display

-Changeable temperature unit ($^{\circ}\text{C}/^{\circ}\text{F}$)

-Memory function - store MAX/MIN temperature values

-Level of comfort display

☺ appears @ indoor temperatures: $18^{\circ}\text{C} \sim 25^{\circ}\text{C}$ ($64^{\circ}\text{F} \sim 77^{\circ}\text{F}$) & Indoor Humidity: 40%RH ~ 65%RH

☹ appears @ other indoor Temperature & Humidity values

3. Operations:

3-1 Remove battery compartment cover, insert 1xAAA battery, replace the cover, then the meter starts to work.

3-2 BUTTON functions:

[MAX/MIN] press to display memorized MAX and MIN values of temperature.

[$^{\circ}\text{C}/^{\circ}\text{F}$] change temperature unit between Celsius ($^{\circ}\text{C}$) and Fahrenheit ($^{\circ}\text{F}$).

[RESET] (behind stand) resets all stored values (max/min values).

4. Attention:

4-1. If abnormal values display, remove the battery and replace after 2 seconds to reset the meter OR press the reset button behind the stand.

4-2. Please dispose of used batteries appropriately