

iGadgitz 'Disnix DS3' (U3615)

User Manual

	For more instructions in English please visit:	www.igadgitz.com/guides
	Eine Anleitung in Deutsch nden Sie unter:	
	Para obtener instrucciones en Español por favor visite:	
	Pour obtenir des instructions en français s'il vous plaît aller à:	
	Per istruzioni in italiano si prega di visitare il sito:	



Safety and General Information

Please read the following information before using this product.


- Do not** use the product while operating a motor vehicle.
- To avoid electronic interference and/or compatible conflicts, **turn off** the product in any facilities where posted notices instruct you to do so. For example: Aircraft, Military Base, Hospital or Health Care Facilities.
- To avoid impairing your hearing, keep the speaker volume at a moderate level. Do not listen at high volumes for prolonged periods. Check volume before turning on.
- For your safety, avoid distractions from music or phone calls while in public places or potentially dangerous environments.
- Keep away from fire, water, and high voltage equipment.
- Do not install, place or use the speaker near any source of heat such as a cooker, radiator, oven, toaster, coffee maker or other apparatus (including microwave ovens) that gives off heat. Do not use in direct sunlight.
- It is recommended to keep the environment temperature between 15°C & 25°C
- Follow the battery and charging procedure in this guide to charge the product.
- Do not use chemicals or detergents to clean the product.
- The speaker should not be submerged or exposed to water. Do not charge if damp or wet. Ensure fully dry before charging.
- Should the unit become hot to touch or emit smoke, switch off at the mains, disconnect and contact the manufacturer.

IMPORTANT WARNING: Do not connect to a PC or USB charger if speaker is damp or wet. Danger of electrocution.



Product Overview

Overview of Disnix DS3

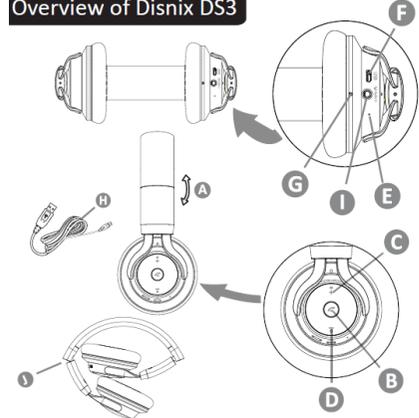

Box contents:
 Bluetooth Stereo Earphones
 iGadgitz 'Disnix DS3'
 USB Charging Cable
 3.5mm Audio Cable
 User Manual

Key Features:
 Bluetooth 4.0
 Supports NFC function
 Headphone battery display on iOS devices
 Supports up to two mobile phones
 Foldable headset
 Notification voice prompts
 Noise reduction

- Key:**
 A: Adjustable headband
 B: Multi-function button (MFB) – Power On/Off, Play/Pause, Answer/End/Reject calls/Last number redial
 C: Volume up/Next track
 D: Volume down/Last track
 E: LED indicator
 F: Micro USB charging port
 G: Microphone
 H: USB charging cable
 I: 3.5mm audio in port
 J: Folding mode



Charging:

iGadgitz 'Disnix DS3' comes with a built-in rechargeable battery. Prior to using it, it is recommended to charge the battery fully for the first time. When iGadgitz 'Disnix DS3' is low in power the red LED continually flashes. Please recharge the battery as soon as possible.

- Plug USB cable into a PC/Laptop USB port or suitable 5.0V USB power charger
 - Red light on: Charging
 - Red light off: Finished charging
- It takes around 3 hours to fully charge. Do not charge for longer than 3.5 hours or battery life will be damaged.

IMPORTANT WARNING: Do not connect to a PC or USB charger if damp or wet. Danger of electrocution.

If becomes very hot during charging or emits smoke/vapour; switch off at the plug socket, disconnect, do not use and contact your retailer.



Please Note: The battery is recyclable. Batteries (battery pack or batteries installed) should not be exposed to excessive heat, fire, water or high voltage equipment.



Pairing/Connecting:

The general pairing procedures are as follows, however, you may need to refer to your Bluetooth device's manual on how to pair with a Bluetooth device.

- Keep your Bluetooth enabled device within 1 metre when pairing;
- Make DS3 enter pairing mode as shown below:

Function	Operation
Entering pairing mode	Ensure DS3 is off. Press and hold Multi-Function Button for approximately 8 seconds until Red and Blue LED flash rapidly

- Using your Bluetooth device, scan/search for available Bluetooth devices. Select "Disnix DS3" from the list of devices shown;
- If prompted by your device to connect, select "Yes" (this will vary among devices)
- After successfully connecting, the Blue LED of the earphones will flash twice every 4 seconds

Please Note: If pairing fails, please turn off DS3 first and then re-pair according to steps 1~5 mentioned above.

After pairing is successful, DS3 and the Bluetooth device will remember each other and should not need to be re-paired next time.

Each time DS3 is turned on, it will connect automatically to last connected device. If you want to pair it with other devices, please turn off the Bluetooth function of the last connected device first and pair DS3 with the new device.



Pair with a Bluetooth Transmitter:

You can connect DS3 to a Bluetooth transmitter to enjoy music wirelessly. The pairing steps are as follows:

- Place DS3 and the Bluetooth transmitter where they are easily viewable by no more than 1 metre apart
- Switch DS3 to pairing mode
- Turn on the Bluetooth transmitter. It will search for Bluetooth devices automatically and send a pairing request
- When DS3 requests to enter a PIN, the transmitter will respond "0000" automatically
- After successfully pairing and connecting, the Blue LED of DS3 flashes twice every 4 seconds

Notes:

- The pairing password of DS3 is "0000". DS3 can only pair with a Bluetooth transmitter whose pairing password is "0000".
- If pairing still fails after several times, please refer to the Bluetooth transmitter's user manual for further information.

Multi-Pairing:

DS3 can connect with two Bluetooth cell phones at the same time. The general pairing procedures are as follows:

- Pair DS3 with device A
- Turn on DS3 and make it enter pairing mode again, and pair it with device B
- Operate device A to connect with headset. DS3 has now connected with two devices



Using iGadgitz 'Disnix' DS3:

Listen to music or make a call

Play/Pause

- Select an audio track or video clip.
- Tap (press less than one second) the Multi-function button to Play or Pause the audio track or video clip.
- Short press buttons C (Next) and D (Previous) to change tracks.
- Long press buttons C (Increase) and D (Decrease) to adjust the volume to your desired level.
- Power off the headphones, and plug in the provided 3.5mm audio cable to the headphones and a suitable device cable to listen without Bluetooth.

Answer an incoming call

Connect the headphone to a mobile phone. Short press (less than one second) the Multi-function button to answer an incoming call.

End a call

Short press (less than one second) the Multi-function button to end the call.

Reject an incoming call

Press the Multi-function button for two seconds.

NFC function

- Turn on the NFC function on your device.
- Put your device NFC induction zone close to DS3 NFC induction zone when DS3 is off. It will turn on the DS3.
- Your device may ask "Do you want to connect Disnix DS3?" (Note: Different brands of phone prompt differently). If it does, press "YES" and your device will automatically connect to DS3.
- Disnix DS3 will be disconnected when your device is too far from the induction area.

Note: The headphones and an NFC enabled device can connect even if Bluetooth function on the devices is switched off.

LED indications

Flashing Blue	A Bluetooth connection has been made. Headphones are ready to use.
Slow Flashing Red	Low battery; headset disconnected.
Short Flashing Red	Headphones turned off successfully.
Continuous Red	Charging. Light turns off when charging finishes.



Specifications and technical parameters:

Bluetooth version	Bluetooth V4.0, APT-X supported
Bluetooth profiles	Headset, Hands free, A2DP, AVRCP
Operating distance	10 metres
Headset music time	Approx. 16 hours
Headset talk time	Approx. 18 hours
Headset standby time	Approx. 300 hours
Charging input	DC5.0V ---60mA
Headset charging time	Approx. 3 hours
Dimension	40*24*32mm
Weight	Approx. 16.4g
Battery capacity	550mAH

Troubleshooting:

See below for solutions to common problems:

Problem	Solution
LED lights not on	Use the USB charging cable to charge the battery, referring to the section in this guide titled 'Charging'. Check your headphones are receiving power from your computer's USB port.
Bluetooth not connecting	Check the Bluetooth feature is enabled on your device. Power off headphones and then power back on. If this fails, remove the headphones from your device and pair again using the section in this guide titled 'Pairing Connecting'.
Sound is distorted / no sound / Microphone not working	Check distance between headphones and device is less than 10 metres and there are no obstructions. Physical barriers, such as walls or doors, can affect the signal. Also check for electrical devices that might be interfering. Adjust the volume to a suitable level. Use the USB charging cable to charge the battery, referring to the section in this guide titled 'Charging'.



Maintenance, Care & Safety

Users are not permitted to make changes or modify the product and accessories in any way

1. DO NOT use the product while operating a motor vehicle.
2. To avoid electronic interference and/or compatible conflicts, TURN OFF the product in any facilities where posted notices instruct you to do so. For example: Aircraft, Military Bases, Hospitals or Health Care Facilities.
3. To avoid impairing your hearing, keep the headset volume at a moderate level. Do not listen at high volumes for prolonged periods. Check volume before placing on ear.
4. For your safety, avoid distractions from music or phone calls while in public places or potentially dangerous environments.
5. Keep away from fire, water, and high voltage equipment.
6. Do not install, place or use the headset near any source of heat such as a cooker, radiator, oven, toaster, coffee maker or other apparatus (including microwave ovens) that gives off heat.
7. It is recommended to keep the environment temperature between 15°C & 25°C
8. Follow the charging procedure in this guide to charge the product.
9. Do not use chemicals or detergents to clean the product.
10. Do not submerge or expose to water. Do not charge if damp or wet. Ensure fully dry before charging.
11. If becomes very hot during charging or emits smoke/vapour; switch off at the plug socket, disconnect, do not use and contact your retailer.

