

iGadgitz 'Disnix' S1 Waterproof Bluetooth Speaker (U3614)

User Guide

	For more instructions in English please visit:	
	Eine Anleitung in Deutsch –nden Sie unter:	
	Para obtener instrucciones en Español por favor visite:	
	Pour obtenir des instructions en Français s'il vous plaît aller à:	
	Per istruzioni in Italiano si prega di visitare il sito:	

Safety and General Information

Please read the following information before using this product.

- Do not use the product while operating a motor vehicle.
- To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so. For example: Aircraft, Military Base, Hospital or Health Care Facilities.
- To avoid impairing your hearing, keep the speaker volume at a moderate level. Do not listen at high volumes for prolonged periods. Check volume before turning on.
- For your safety, avoid distractions from music or phone calls while in public places or potentially dangerous environments.
- Keep away from fire, and high voltage equipment.
- Do not install, place or use the speaker near any source of heat such as a cooker, radiator, oven, toaster, coffee maker or other apparatus (including microwave ovens) that gives off heat. Do not use in direct sunlight.
- It is recommended to keep the environment temperature between 15°C & 25°C
- Follow the battery and charging procedure in this guide to charge the product.
- Do not use chemicals or detergents to clean the product.
- The speaker is designed to withstand splashing water to IPX4 under the Ingress Protection Rating, as defined in international standard IEC 60529, when the charging/AUX port cover is in place. If the cover is not fully in position the speaker will not be waterproof to the advertised level.
- The speaker should not be submerged in water or exposed to jets of water.
- Do not charge if damp or wet. Ensure fully dry before charging.
- Should the unit become hot to touch during charging or emit smoke/vapour, switch off at the mains, disconnect and do not use. Then contact your retailer

IMPORTANT WARNING: Do not connect to a PC or USB charger if speaker is damp or wet. Danger of electrocution.



Product Overview

- With Bluetooth wireless technology, this iGadgitz 'Disnix' S1 Bluetooth speaker gives you the convenient wireless way to enjoy streaming stereo music transmitted from a Bluetooth A2DP*1-Source device such as MP3 players, Smartphones, PC/Laptop or Tablet in the available range.
- You can use S1 to remotely control the music playing functions of your Bluetooth device if it supports Bluetooth AVRCP*2.
- Switching between music and phone calls, S1 also allows you to answer or make calls with a Bluetooth-enabled phone*3 while you are listening to music.
- After you end the call, the music will continue to be streamed in seconds.*4
- Besides the wireless stereo and mobile hands-free applications, you can pair the S1 to a Bluetooth-enabled PC*5 to use with instant messaging applications such as Skype.

Notes:

- *1: The playback or its plug-in Bluetooth adapter/transmitter needs to support Bluetooth A2DP (Advanced Audio Distribution Profile).
 *2: The playback or its plug-in Bluetooth adapter/transmitter needs to support Bluetooth AVRCP (Audio Video Remote Control Profile).
 *3: The mobile phone needs to support Bluetooth HFP (Hands-Free Profile) and support Bluetooth A2DP (Advanced Audio Distribution Profile).
 *4: Some mobile phones do not release the connection switch function to the speaker, which will cause the speaker to fail to switch the Bluetooth connection between music and call.
 *5: The computer or its plug-in Bluetooth adapter needs to support Bluetooth HSP (Headset Profile).

Specification and technical parameters

Rated Power: 5W
 Frequency response: 90Hz-20KHz
 Sensitivity: 80dB +/-2dB
 SNR: >47dB
 Battery: Built-in Lithium Rechargeable (800mAh)
 Waterproof grade: IPX4 (Splashing water, as per Ingress Protection Rating as defined in international standard IEC 60529)
 Performance: Bluetooth Specification V4.0+EDR, up to 10 meters (in open space)
 Operating distance: 10m (33 ft)
 Music/Talk time: 6 hours*
 Charging time: 2 hours
 Bluetooth profiles supported:

 
- HSP Profile (Headset Profile)
- HFP Profile (Hands-Free Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)

Charging Input: DCS 0V
 Aux in: 3.5mm audio jack
 Dimensions: 65.5 x 78mm

*The maximum operating time depends on the usage frequency and environmental factors. A long distance wireless connection and use with a mobile phone will increase the power consumption.



Diagram



Ref	Function
1	During Music Playback: Play or Pause During incoming call: Answer call or End call All: Hold for 2½ seconds to disconnect Bluetooth
2	Up selection key: Short press (<1 second): Selects Previous track Long press (>2 seconds): Volume Up
3	Down selection key: Short press (<1 second): Selects Next track Long press (>2 seconds): Volume Down
4	Power button: Hold down for 3 seconds to switch the speaker on or off.
5	Under cover: 3.5mm audio jack
6	Under cover: USB charging port



Adjust volume

Volume Up: In call mode or music mode, long press (>2 secs) the Up Selection Key (Button 2 on the Diagram).
 Volume Down: In call mode or music mode, long press (>2 secs) the Down Selection Key (Button 3 on the Diagram).

Play/Pause music

In idle state, press Play/Pause/Answer call/End call button (Button 1 in the diagram) once to Play or Pause music.

Previous/Next Track

Previous Track: In music mode, short press (<1 sec) the Up Selection Key (Button 2 on the Diagram).
 Next Track: In music mode, short press (<1 sec) the Down Selection Key (Button 3 on the Diagram).

Line-in Mode

Insert a 3.5mm audio cable to the 3.5mm audio jack port. Then press Button 1 to Pause the music, then press Button 1 again for playback to occur. During this method of playback the speaker will NOT be waterproof.

Troubleshooting

If disconnection occurs, please check the following factors:

- Ensure that the speaker has enough power, it is turned on and has been successfully paired to the mobile.
- The Bluetooth function of the mobile is enabled.
- Check whether the range between the speaker and mobile is within 10 meters (about 30 feet.) Or if there are walls or other disturbance or electrical devices between speaker and mobile.



How to use iGadgitz 'Disnix' S1 Waterproof Bluetooth Speaker

Turn on the speaker

Press and hold the power button for around 3 seconds. The blue LED light will turn on.

Turn off the speaker

When the speaker is on, press and hold the Power button for around 3 seconds.

Pairing

Pairing is the process of establishing an encrypted link between S1 and Bluetooth devices.

- Step-1** Make sure the S1 is switched off, then turn on. The blue indicator will flash repeatedly to detect Bluetooth enabled devices near you.
Step-2 Follow the operating instruction of your Bluetooth device to start the pairing process. Typically, this is done by going to a "Connect" or "Setup" menu and then selecting the option to search for "Disnix S1" that is still in the pairing mode.
Step-3 The mobile will find "Disnix S1" and ask whether you are willing to connect your device with the speaker. Press "Yes" or "Confirm" to confirm this action.

If the connection is successful, you will hear a tone from the speaker and the LED will flash every 3 seconds. If the pairing is unsuccessful, please turn off the speaker and turn it on again. Then, return to Step-1 and do the pairing procedure again. The speaker will automatically turn off after 5 minutes if it cannot pair with a device.

Make a Call

Step-1 Use the mobile phone's keypad to dial the phone number.

Step-2 Press mobile phone's "Send" or "OK" key. The mobile phone initiates the call and transfers the call from the mobile phone to the speaker.

Answer a Call

Step-1 If there is an incoming call while you are listening to the streaming music, you will hear your ring tone through the speaker.

Step-2 Just press Button 1 (Play/Pause/Answer call/End call button) once.

End a Call

Use either of the following methods to end a call.

Method-1 From the speaker, press Button 1 (Play/Pause/Answer call/End call button) once.

Method-2 End a call from the mobile phone's keypad.

If you are listening to music when there is an incoming call the speaker will switch the connection from the music player (A2DP) to the mobile phone (HSP or HFP); the streaming music will be paused temporarily. After you end the call, the music will should be played and streamed to the speaker again.

Notes: When you press Button 1 to answer or end a call, please just press once. Do not press and hold.

Battery and Charging Procedure

- iGadgitz 'Disnix' S1 uses a rechargeable battery. A normal charging process takes about 2 hours. The red LED will turn on when charging and will turn off when charging is finished. Do not charge for longer than 3 hours. This will shorten the lifetime of the battery.
- Plug the USB cable into a PC/Laptop USB port or suitable 5.0V USB power charger. Using any incorrect power supply device will cause damage and void the warranty.
- Should the unit become hot to touch during charging or emit smoke/vapour, switch off at the mains, disconnect and do not use. Then contact your retailer.
- After charging has finished, please remove the cable from the speaker. Do not charge the speaker for long periods of time.
- When the battery is nearly used up, the blue LED will stop flashing. Please charge the speaker at this time.
- Please make sure the battery has been fully charged and fully discharged for the first three uses to ensure optimum battery performance.
- Do not use the speaker in too hot or too cold environments. It is recommended to keep the environment temperature between 15°C and 25°C.
- Do not connect, place or use the speaker near any source of heat such as a cooker, radiator, oven, toaster, coffee maker or other apparatus (including microwave ovens) that gives off heat. Do not use in direct sunlight.

IMPORTANT WARNING: Do not connect to a PC or USB charger if speaker is damp or wet. Danger of electrocution.



www.igadgitz.com

iGadgitz™ is a registered trademark of INNOV8 GB Ltd. All rights reserved.
 Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by the manufacturer is under license. Other trademarks and trade names are those of their respective owners.

