

NC-600 User Manual



	<p>For more instructions in English please visit:</p>	<p>www.igadgitz.com /guides</p> 
	<p>Eine Anleitung in Deutsch finden Sie unter:</p>	
	<p>Para obtener instrucciones en Español por favor visite:</p>	
	<p>Pour obtenir des instructions en français s'il vous plaît aller à:</p>	
	<p>Per istruzioni in italiano si prega di visitare il sito:</p>	


www.igadgitz.com



Product Overview & Illustration

Please fully read the manual before use


Left Side

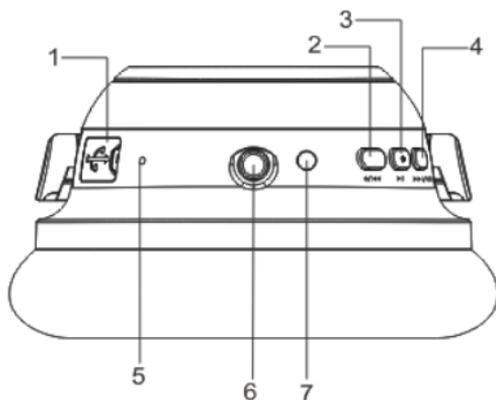

1. USB Socket (For Charging)
2. Volume – / Previous Song (Bluetooth Only)
3. Multifunction Button (MFB): Switch ON/OFF, Pairing, Make/Answer/End/Reject Call (Bluetooth only)
4. Volume + / Next song (Bluetooth only)

5. Microphone
6. 3.5mm Audio Jack
7. Bluetooth LED Indicator

Right Side

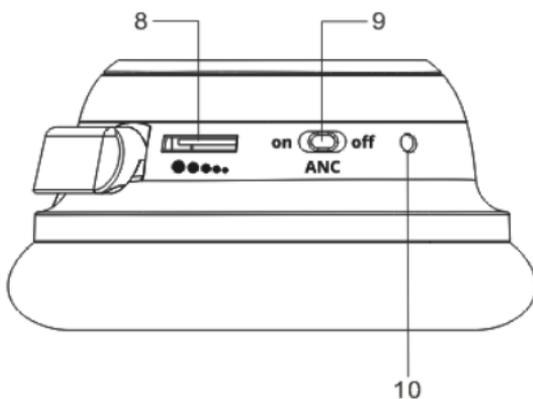

8. Volume + / - wheel
9. Active Noise cancelling(ANC) ON/OFF Button
10. Noise Cancelling LED Indicator

Safety, Maintenance and Care

Users are not permitted to make changes or modify the product and accessories in any way.

- a) Fully read the manual before use.
- b) DO NOT use the product while operating a motor vehicle.
- c) To avoid electronic interference and/or compatible conflicts, TURN OFF the product in any facilities where posted notices instruct you to do so. For example: aircraft, military base, hospitals or health care facilities.
- d) To avoid impairing your hearing, keep the headset volume at a moderate level. Do not listen at high volumes for prolonged periods. Check volume before placing in ear.
- e) For your safety, avoid distractions from music or phone calls while in public places or potentially dangerous environments.
- f) Keep away from fire, water, and high voltage equipment.
- g) Do not place or use the headset near any source of heat such as a cooker, radiator, oven, toaster, coffee maker or other apparatus (including microwave ovens) that gives

off heat.

- h) It is recommended to keep the environment temperature between 5°C & 25°C.
- i) Follow the charging procedure in this guide to charge the product.
- j) Do not use chemicals or detergents to clean the product.
- k) NC-600 is sweat proof to a degree but should not be submerged or exposed to water. Do not charge if damp or wet. Ensure fully dry before charging.
- l) If the product becomes very hot during charging or emits smoke, vapour or liquid switch off at the plug socket, disconnect, do not use and contact your retailer.

Charging

NC-600 comes with a built-in rechargeable battery. Prior to using it for the first time, it is recommended to fully charge the battery.

Plug the USB cable into a PC/laptop USB port or suitable 5.0V USB power charger

- Red light on: Charging
- Red light off: Finished charging

It takes around 2 hours to fully charge. Do not charge for longer than 2.5 hours or battery life will be damaged.

NOTE: *The headphones will power off (music stops) when you charge them. It is not possible to listen via Bluetooth whilst charging. Switch to a 3.5mm cable for continued wired listening.*

IMPORTANT WARNING: Do not connect to a PC or USB charger if damp or wet. Danger of electrocution. If the product becomes very hot during charging or emits smoke, vapour or liquid switch off at the plug socket, disconnect, do not use and contact your retailer. NC-600 should not be exposed to excessive heat, fire, water or high voltage equipment. The battery is recyclable.

Getting started with your NC-600

Please ensure fully charged before first use (see charging above). Use the Bluetooth and noise cancelling functions simultaneously for optimum listening.

Bluetooth Functions

Turning ON/OFF

- a) Power ON your headphones: Press and hold the Multifunction Button (MFB) for about 2 seconds until the Bluetooth LED indicator light starts flashing green/red rapidly with an ascending sound.
- b) Power OFF your headphones: Press and hold the MFB for about 3-4 seconds until the Bluetooth LED indicator light turns solid red with a descending sound.

Comfort

In order to achieve maximum comfort and noise cancellation, the headband should be adjusted to properly fit your head with the ear cups sitting comfortably over your ears.

Pairing

NC-600 works with all Bluetooth-enabled devices. Check your transmitting device, e.g. tablet or smartphone, is Bluetooth-enabled

and follow the steps below:

- a) Press and hold the MFB for about 4 seconds until the Bluetooth LED indicator flashes alternately between green and red. Now the NC-600 will enter into pairing mode.
- b) Enable searching of nearby Bluetooth devices on your tablet or smartphone.
- c) Once the “NC-600” is found, you can now connect and pair. If your device prompts you for a password, please use “0000”. For more details, please refer to your device’s owner manual.
- d) When pairing is successful, the Bluetooth LED indicator will flash green every 5 seconds. If pairing is unsuccessful, please turn off the NC-600 headphones and repeat the pairing steps. You may need to disable and re-enable the Bluetooth on your mobile or tablet device. If problems persist restart your mobile or tablet device.

After initial pairing is established, the headphones will automatically reconnect to the last paired device when NC-600 is switched on.

Reset Paired Device List

Be sure your headset is turned off. Power on the headset, then press buttons (2) and (4) at the same time for 2-3 seconds to reset (clear) the pair list.

Call-related Functions

Answer a call	Press MFB once to answer
End a call	Press MFB once again to end
Ignore a call	Hold MFB for 3 seconds
Last number redialling from headphone	Press MFB twice in standby status
Swap calls	Press MFB for 3 seconds while speaking

Music-related Functions

Play/Pause Music	Press the MFB Button (▶) once to start playing music and press it again to pause your music
Next/Previous Song	Press the Music/Volume Control button (▶▶) to play the next song. Press down the Music/Volume Control back button (◀◀) for previous song.

Voice Dialling from your Headphone

If your mobile device is equipped with a voice dialling function, press and hold the MFB button and say the voice tag according to your mobile device's command functions. You must record the voice tag (the person's name) into your mobile phone prior to using the voice dialling function on the NC-600.

Using the 3.5mm Audio Cable

3.5mm audio cable is included for use with multimedia devices that

do not have Bluetooth capabilities. You may also use the audio cable if the NC-600 is not charged properly.

Note

- *You are able to use both noise cancelling & Bluetooth function simultaneously.*
- *NC-600 headphone is a multifunction headphone unit. There are 2 types of volume control. # Volume controls can be used during regular wired, active noise cancelling, or Bluetooth modes. The right sided volume wheel works for all functions. The left side volume buttons (2) & (4) only work for Bluetooth enabled functionality (See illustration on page 1).*

Adjusting the Volume

When you are on the phone or listening to the music in Bluetooth mode, move the volume dial (8) or (if supported by your device) long press the button (2) or (4) repeatedly until you reach the desired volume level.

Active Noise Cancelling Mode

- Move the ANC switch to ON. The noise cancelling LED indicator will light up in blue.

Note: After you turn ON the power, you might hear a slight hissing noise. This is a normal function and will cease after a few seconds.

- Adjust the volume on the headphones for the required level of noise cancellation.
- When the batteries are running low, the noise cancelling LED indicator will become dim.
- Once the battery is fully drained, the active noise cancelling feature will turn off but the audio signal from the music player will continue to transmit.
- In quiet environments where noise cancellation is not required, the NC-600 can also be used like conventional headphones, without the use of batteries.
- When not in use, switch the ANC button OFF to extend battery life.

Troubleshooting

If you are unable to connect your headphones and your mobile phone or tablet, please try the following:

- Ensure headphones are turned ON and properly charged.
- Ensure headphones are properly paired with your mobile device.
- Ensure headphones are within a 10 metre range of your paired Bluetooth device and that there are no obstructions, such as walls or other electronic devices, in between.
- Ensure your mobile device's Bluetooth feature is activated. Please refer to your mobile device's user guide for specific instructions.
- To reset certain functions of the NC-600 headphones you can simply plug-in, whilst Bluetooth mode is connected to recharge then disconnect.

Specification and Technical Parameters

Bluetooth version: 4.1

Bluetooth chipset: CSR8645 w/aptX

Noise-cancellation rate: 85%

Speakers: 40mm Mylar

Audio impedance: 32 Ohm

Battery: Li-Polymer 320mAh

Charging time: 3.0 hrs Micro USB

Charging input: DC5.0V-500mA

Operating range: ≤ 10 m

Connection: 3.5mm jack

Battery life: Noise cancelling only: 30 hours

Bluetooth only: 15 hours

Bluetooth + noise cancelling: 12 hours

Box Contents

Headphones

3.5mm audio cable

1/4" (6.35mm) stereo audio adapter

Dual Airline 3.5mm audio adapter

Micro USB charging cable

Hard EVA carry case with mesh pouch

User manual

igadgitz



FC CE 