



Galaxy II Video Light


INCLUDED IN THE BOX:

- Galaxy II video light
- USB charging cable
- Li ion battery pack (3*18650-A battery pack)
- YS clip, ball base
- Padded case

WARNING: Read these instructions before use. Keep in a safe location for future reference.

STOP: If for any reason your light fails or malfunctions, please review the trouble shooting guide at www.tovatec.com.

CHANGING BETWEEN MODES

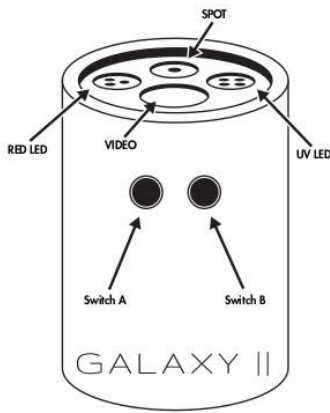

Power On: hold switch-A for 1 second. When the torch switches on, the power indicator light will come on.

Switch-A: press switch-A to select the light mode. In the startup state: red light (100%)-Warm floodlight (100%)- White spotlight (100%)--UV light (100%). Press repeatedly to get to your desired light mode. PLEASE NOTE THAT THE FLOODLIGHT MODE "POWERS UP" FROM THE LOWER POWER RED LIGHT TO HIGH POWER OVER APPROXIMATELY 1 SECOND. THIS OPERATION PROTECTS THE LED.

Switch-B: press switch-B to select the brightness of each light :100%-50%-25%. (Note: the UV light is only 100% brightness).

Power Off: Hold switch-A for 1 second. The flashlight will power off and the battery indicator will go off.

SOS & 10HZ strobe: in OFF status, hold the switch-A for 1 second, when the battery indicator lights up, hold switch-A and switch-B for 5 seconds at the same time, only the spotlight source enters the SOS mode. Switch to 10HZ strobe mode by pressing Switch B for less than 1 second. It will switch back to the SOS when you press Switch-B again. To turn off the SOS or 10HZ by holding switch-A for 1 second.

POWER LEVELS and BURN TIME CHART

Light Mode	Lumens/Beam	Power Levels	Burn time
Red Light	200/120 degrees	100% - 50% - 25%	7-22 hours
Video Mode	3000/115 degrees	100% - 50% - 25%	2-4 hours
Spot Mode	800 / 25 degrees	100% - 50% - 25% - SOS – 10Hz	4-10 hours
UV light	10/120 degrees	100%	4.5 hours

O-RING CARE

Inspect O-rings to be sure they are clean and free of dust, debris, hair, sand, etc. before using underwater. Lightly lubricate O-rings with silicone grease prior to use and maintain lubrication at all times.

RECHARGEABLE BATTERIES

The burn-time of rechargeable batteries varies. (See chart above for burn times).

Burn-time is affected by:

(A) - *Operating temperature* – Do not use at highly elevated temperatures for extended periods of time. This light can be used above and below water.

(B) - *Storage temperature* – Store in a cool and dry place at room temperature (20-25° Celsius/ 68-77° Fahrenheit).

(C) - *Time period the light was out of use.* For extended storage, discharge a lithium-ion battery to about 40 percent (or approximately 1 hour on a fully charged battery) and store it in a cool, dry place. **Warning: always disconnect batteries from light when storing longer than 30 days.**

(D) - *Avoid completely discharging lithium ion batteries* – Battery experts suggest that after 30 charges, you should allow lithium-ion batteries to almost completely discharge. Continuous partial discharges create a condition called digital memory, decreasing the accuracy of the device's power gauge. Let the battery discharge to the cut-off point and then recharge. The power gauge will be recalibrated. For safety reasons, do not recharge deeply discharged lithium-ion batteries if they have been stored in that condition for several months.

RECHARGING LITHIUM ION BATTERIES

WARNING: DO NOT RECHARGE THE BATTERY NEAR FLAMMABLE ITEMS AND/OR PRODUCTS.

- Unscrew the light head from the battery pack.
- Plug battery pack into the USB cable and into charging unit.
- A red LED indicates that the torch is charging.
- When charging is complete, the green LED switches on.
- Fully screw the battery pack back onto the light head.
- Charging takes approximately 3-4 hours for full charge with a standard 5V2.1A cell phone adapter.

WARNING: When using rechargeable lithium ion batteries use only the Tovatec battery pack created for this light.

BATTERY DISPOSAL

Rechargeable lithium ion batteries as well as alkaline and rechargeable alkaline batteries must all be disposed of or recycled in compliance with all applicable laws. Never throw into the trash or fire - batteries may explode in fire. Keep batteries away from children.

WARNINGS

- Remove the battery pack from light head if the light will not be used for long periods or during transport.
- If you anticipate extended periods of no use, recharge the battery every 3 months.
- Make sure the battery pack is completely tightened to light head before each dive.
- Never point the light directly into eyes.
- Never try to open or disassemble the light head or battery pack.

ROUTINE MAINTENANCE

- Rinse the outside of the torch in fresh water after every dive. NEVER disassemble the light.
- Periodically check the condition of the O-rings, lubricate on a regular basis and replace as needed.

WARRANTY

We want you to be 100% satisfied with your purchase. If for any reason your light fails or malfunctions, you can return it within 12 months of consumer purchase for repair and/or replacement. **Proof of Purchase from an authorized dealer within the past 12 months must be included with all warranty returns.** Please return your light to the place of purchase if purchased outside of North America. Commercial and Rental use is not covered. Any lights or batteries that have been disassembled void warranty. Warranty is not transferable. For additional information, please contact Warranty@tovatec.com.

Contact Details:

Innovative Scuba Concepts, Inc / Tovatec Division

6170- B Lake Shore Court, Colorado Springs, CO 80915

800-324-5032

www.tovatec.com