



- To reset the gauge: TURN THE PUMP ON FIRST, then press and hold the power button for 10 seconds. The gauge will turn off and on during this process, do not let go of the button until the gauge turns on again.