


HassleFree™ Premium Tent

SKU:
TNT10 - 10' x 10'
TNT15 - 10' x 15'
TNT20 - 20' x 20'

Make your brand stand out with our HassleFree™ Premium Tents!

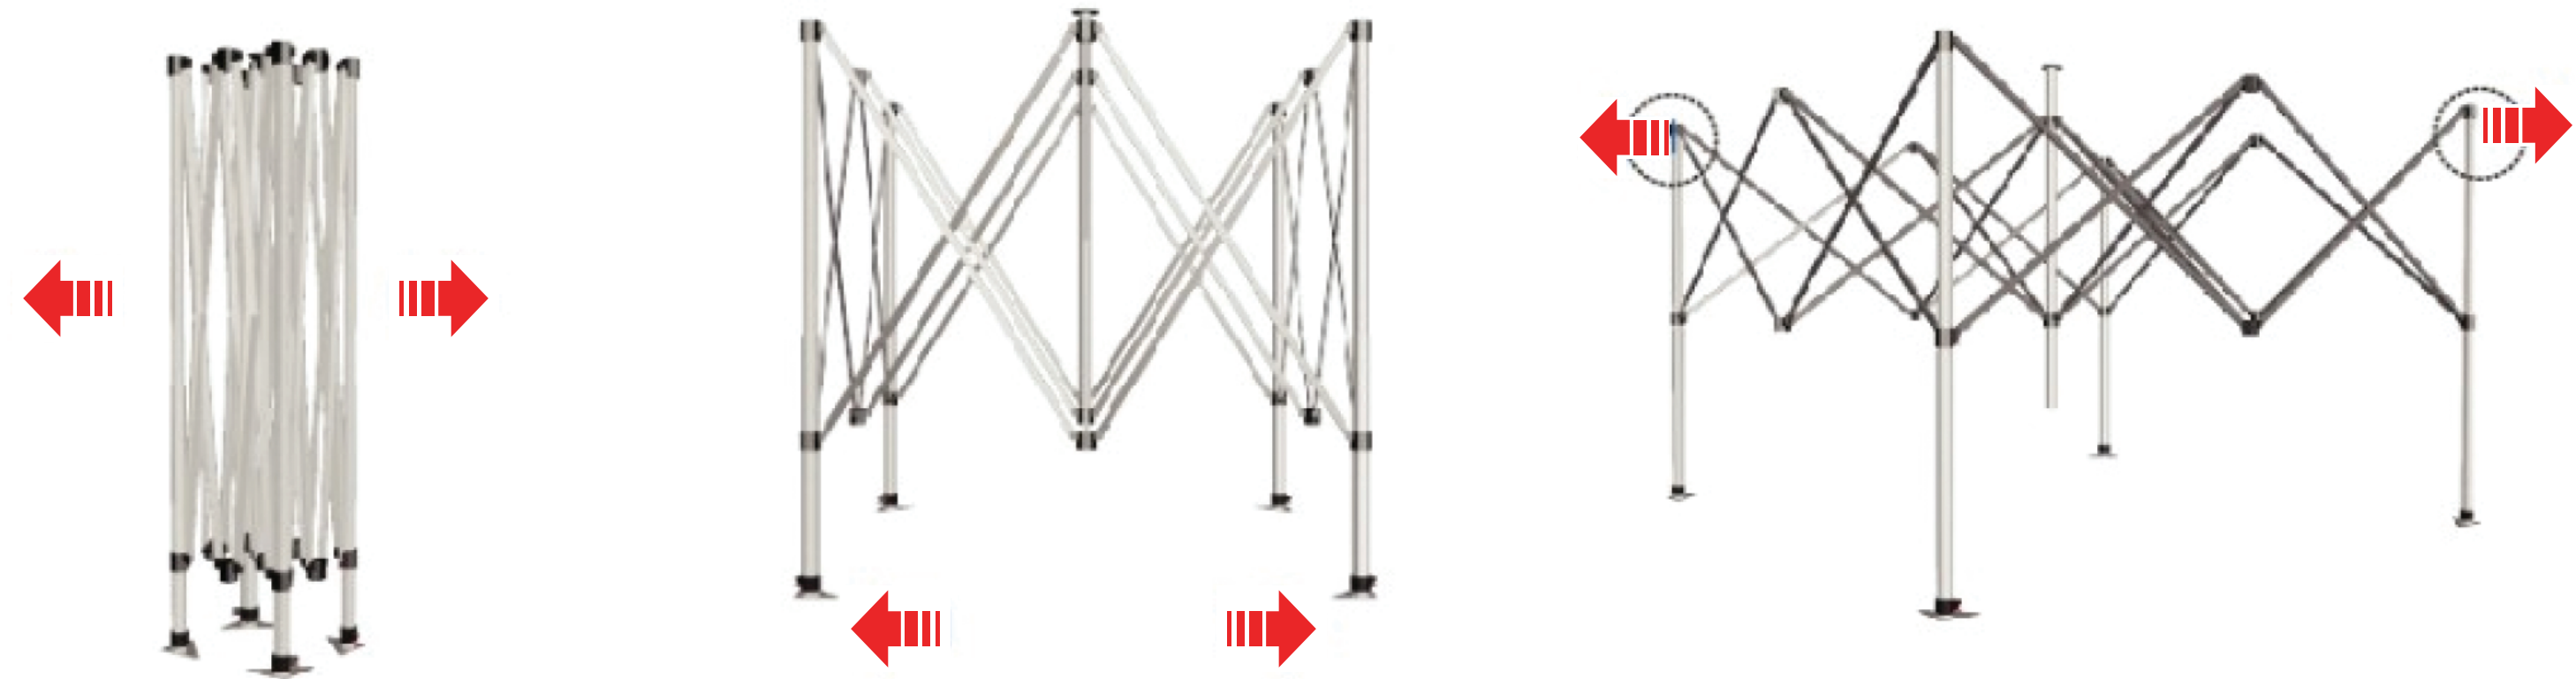

Remove the frame from the carrying bag. Watch out for pinching fingers. Two people stand opposite to each other and gently pull the frame until it is half open.



Unfold your canopy and drape over the frame. Tie canopy corners and frame corners down with the velcro. Two people stand diagonal to each other. Lift and separate the frame legs to extend the tent out completely. For height adjustment, stand on the foot of frame leg and slide the frame up until it locks into your desired position.

