


1

INSTALLATION INSTRUCTIONS FOR SINGLE HOLE LAV FAUCET

MIX SERIES - 290-06, 290-07, 290-08, 290L-06, 290L-07 and 290L-08 **STRIA SERIES** - 291-06, 291-08, 291L-06 and 291L-08

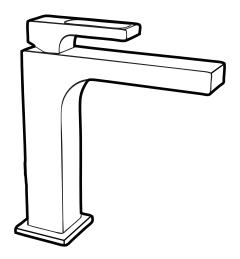

GENERAL CHARACTERISTICS

WE RECOMMEND THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Thoroughly read instructions before installation.

VALVE SPECIFICATION

Recommended supply pressure = 20 to 80 psi (1,38-5,52 bar)

Recommended hot water supply temperature = 120° to 140°F (48°-60°C)

Operating pressures between **hot and cold supplies** should vary no more than **30 psi (2,07 bar)**. If water pressure exceeds **70 psi (4,83 bar)**, install a pressure reducing valve.

Ensure the mixing valve is in compliance with local plumbing codes when setting the temperature on the water heater.

It is the installer's responsibility to verify **correct temperature setting** to prevent any risk of scalding prior to consumer use.

25mm diameter size open type cartridge

Opening angle of the lever = 25°

Mixing rotation of the lever = 100°

Aerator flow rate = 1.2 gpm (4.5 L/min)


STEPS FOR FAUCET INSTALLATION

Ensure **escutcheon base and o-ring seal** are in place before feeding the supply hoses through the **1 3/8**" **mounting hole**.

Feed the **supply hoses** through the **1 3/8" mounting hole** on the counter.


From below the deck, install the locknut onto the mounting sleeve.

Before final tightening, adjust the lavatory faucet so it is centered and covers the 1 3/8" mounting hole completely.

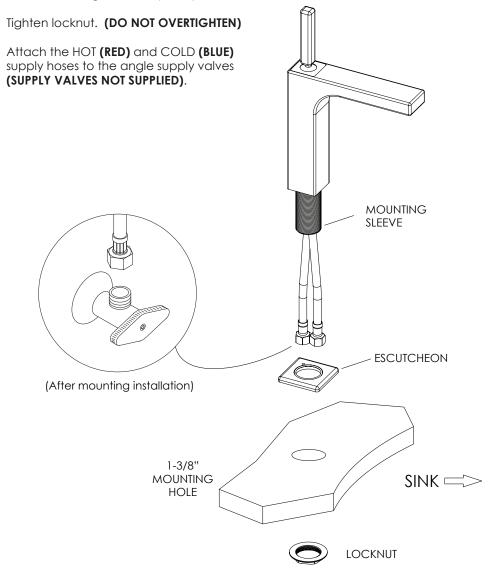

DRAIN ASSEMBLY


Insert *Pre-assembled drain rim (A) into the basin placing the Teflon washer (B) under the rim. From below slip on washer (C) onto the bottom thread of the drain rim and secure to basin with drain nut and washer (D & E) then insert Tail tube drain (F) onto the drain rim (A)

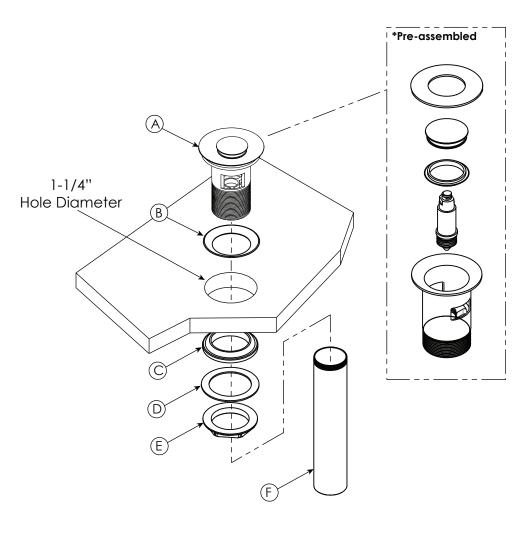


3


DRAIN ASSEMBLY


HIGH SPOUT

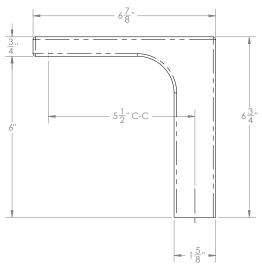

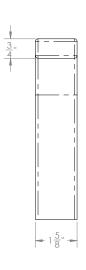

LOW SPOUT

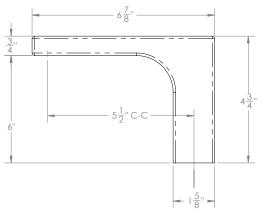

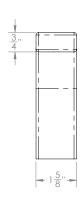

HANDLES

