
PHYLRICH®

Defining Luxury Since 1959

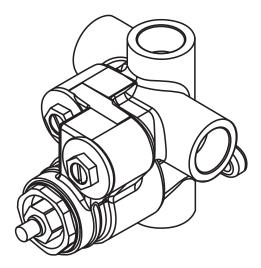

INSTALLATION INSTRUCTIONS FOR 3/4 Medi Thermostatic Valve 1-135

w/ 3 Way Diverter shared 1-143
 w/ 2 Way Diverter shared 1-144

GENERAL CHARACTERISTICS

WE RECOMMEND THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Thoroughly read instructions before installation.

WARNING: IF THIS VALVE IS INSTALLED UPSIDE-DOWN A REVERSE CARTRIDGE IS NOT AVAILABLE. CONSEQUENTLY, VALVE MUST BE REMOVED AND REINSTALLED RIGHT-SIDE UP.

The valve is designed with two outlets for ease of installation, but are not intended to be used concurrently with each other. Using both outlets will reduce the performance of the valve.

VALVE SPECIFICATION


Recommended supply pressure = 20 to 80 psi (1,38-5,52 bar)

Recommended hot water supply temperature = 120° to 140°F (48°-60°C)

Operating pressures between **hot and cold supplies** should vary no more than **30 psi (2,07 bar)**. If water pressure exceeds **70 psi (4,83 bar)**, install a pressure reducing valve.

Ensure the mixing valve is in compliance with local plumbing codes when setting the temperature on the water heater.


It is the installer's responsibility to verify **correct temperature setting** to prevent any risk of scalding prior to consumer use.

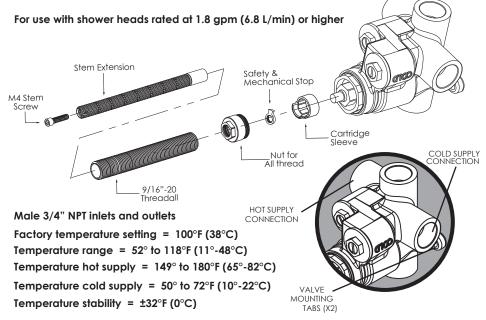


PARTS BREAKDOWN




1

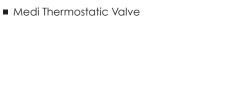

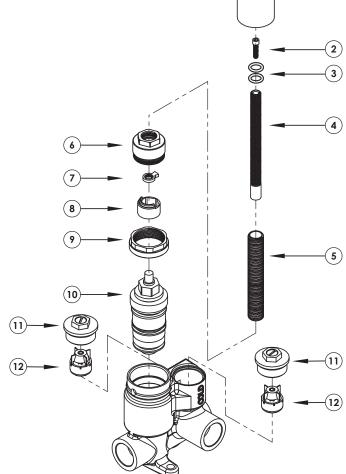

1-135 3/4" Medi Therm Valve			
#	PART #	DESCRIPTION	QTY
1	11496	MUD GUARD	1
2	92335	SCREW	1
3	90011	O-RING	2
4	10054	STEM EXTENSION	1
5	10209	SHANK, NIPPLE THREAD ALL	1
6	11610	MEDITHERM NUT FOR ALL THREAD	1
7	11320	SAFETY AND MECHANICAL STOP	1
8	11598	CARTRIDGE LIMIT STOP SLEEVE, MEDI	1
9	11599	RETAINER NUT	1
10	11583	CARTRIDGE	1
11	2-256	SHUT OFF NUT	2
12	11593	CHECK VALVE	2

Medi Thermostatic Valve w/ 3 WAY DIVERTER SHARED

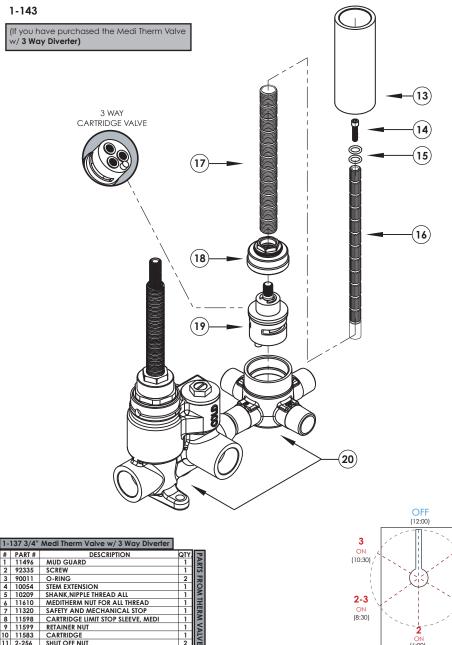

1

1 2 2

1

1

2

1

1

1

1

1

1

ON

(1:30)

1-2

(3:30)

120°

2

(6:00)

100°

Н

80°

CAP TO CLOSE UNUSED OUTLETS INCLUDED IF LOWER PORT IS USED, INSTALL A VOLUME CONTROL DO NOT USE UPPER & LOWER PORTS

AT THE SAME TIME.

С

9 11599

11 2-256

12 11593

13 11496

14 92157

15 90011

16 11416

17 11498

18 10349

19 11417

20 2-261

10 11583 RETAINER NUT

SHUT OFF NUT

CHECK VALVE

STEM EXTENSION

SHANK, NIPPLE THREAD ALL

CARTRIDGE VALVE - SHARED

3/4" MEDITHERM W/ 3 WAY DIVERTER


NUT, 3 WAY DIVERTER

MUD GUARD

SCREW

O-RING


CARTRIDGE

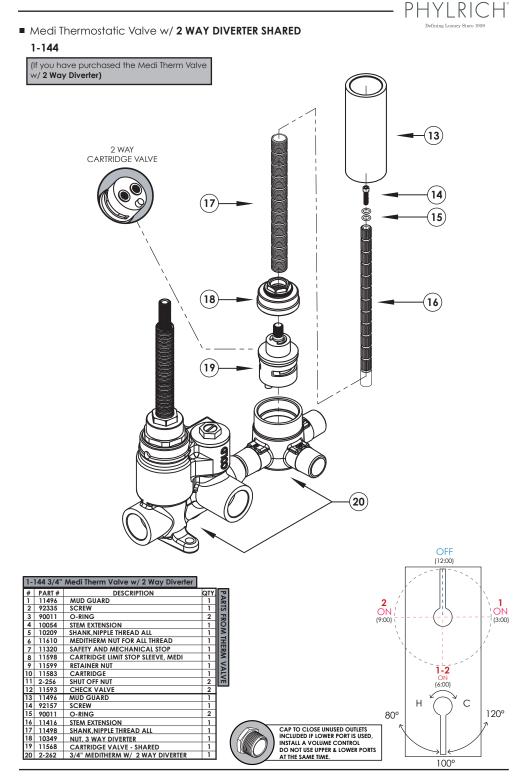

ROUGH IN DIMENSIONS / ROUGH IN VALVE TO FRAME

(All dimesions shown are to the nearest 1/16")


Once the desired location has been determined, install a **cross support beam to wall studs**. Ensure to level the **valve & secure to the cross support**. The valve should be level horizontally, vertically, & parallel to finished wall.

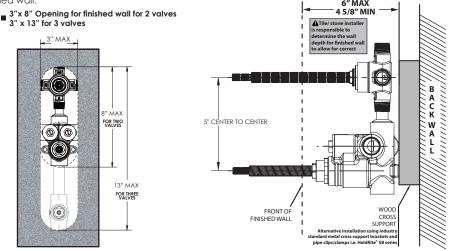

Pre-assemble fittings before attaching to cross support. Attach the "COLD" Inlet to Cold Supply & "HOT" Inlet to Hot Supply using copper supply lines.

 IMPORTANT:
 Thoroughly flush supply lines to remove any debris prior to installation to pevent damage & malfunction of thermostatic cartridge.

Use **plumber's tape** or thread sealant to all threaded port joints & attach to valve. All soldering/brazing of fittings shall be performed a minimum of **4**" away from valve.

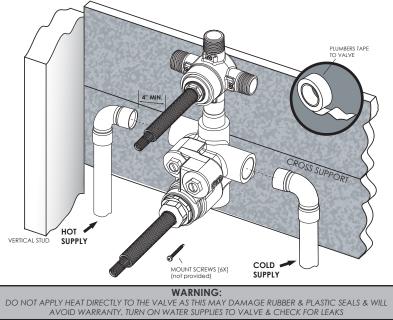

MAINTENANCE



THERMOSTATIC CARTRIDGE


Carefully remove the trim and plate and place in a safe location for the time being. Use a flat head screwdriver to shut off the water supply to the cartridge by turning the temporary shutoff screws clockwise until screw stops. Ensure to close both the hot and cold sides of the water supplies. Remove extensions to gain access to the cartridge nut. Unscrew the cartridge nut using a 11/16" plumbers wrench or adjustable wrench, if possible.

Gently pull the cartridge out of the housing body (rotating cartridge while pulling may assist in removing). Clean the cartridge by rinsing it under running water to remove any possible debris. Wipe cartridae and housing seat clean and apply a thin film of NON-PETROLEUM GREASE to o-rings.

NOTE: Do NOT use oil based lubricants as this may cause the o-rinas to dry out over time and crack.

How to calibrate temperature:

To limit the amount of HOT water allowed to mix with cold water, use a 4 " long flat blade screw driver to remove the stem. Remove the limit safety stop and rotate the stem counterclockwise till the desired maximum temperature is found. The maximum temperature is factory set at 120°F. Once the desired temperature is set, reinstall the safety stop at the maximum position. Proceed installing the stem and trim.

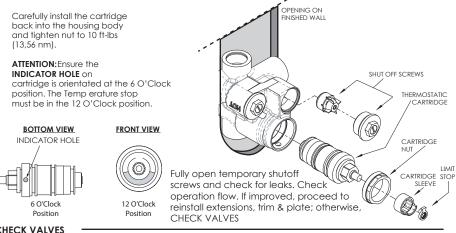

CHECK VALVES

Shut off water supply at main or upstream from valve body. Remove check valve nut with a 5/8" (16mm) socket wrench from the body.


If check valve needs replacement, forcefully remove check valve w/ needle nose pliers. Wipe check valve and housing seat clean and apply a thin film of NON-PETROLEUM GREASE to o-rings. Install new check valves by pressing them in evenly & ensuring check valve snaps into place.

NOTE: Do NOT use oil based lubricants as this may cause o-rings to dry out over time and crack.

Tighten check valves to 10 ft-lbs (13,56 nm).


Reinstate water supply from upstream and check for leaks.

Check operation of flow. If improved, proceed to reinstall extensions, trim, & plate; otherwise, see PARTS BREAKOUT for any replacement parts needed.

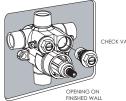


CHECK VALVE (2X)

VALVE TURN MECHANICS

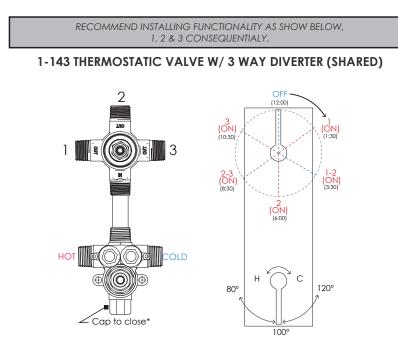

1-144 THERMOSTATIC VALVE W/ 2 WAY DIVERTER (SHARED)

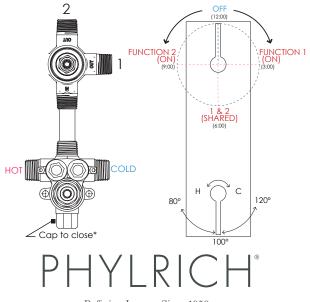

Defining Luxury Since 1959