 



**POWER BANK 10000 mAh**

*User Guide*

**BAREBONES**

## PRODUCT COMPONENTS

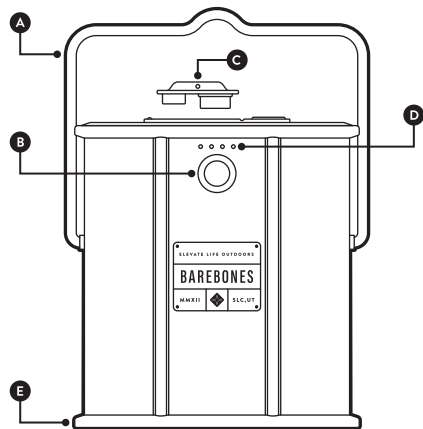

## KEY

- |                                  |   |
|----------------------------------|---|
| <b>A</b> Carrying/Hanging Handle | <b>F</b> USB-C Port <i>(In &amp; Out)</i>       |
| <b>B</b> LED Light               | <b>G</b> USB-A Port <i>(Out)</i>                |
| <b>C</b> Port Cover              | <b>H</b> Power Button                           |
| <b>D</b> Battery Level Indicator | <b>I</b> USB-C to USB-C Cable <i>Included</i>   |
| <b>E</b> Magnets for Mounting    | <b>J</b> USB-C to USB-A Adapter <i>Included</i> |

## OPERATING INSTRUCTIONS

### POWER OUTPUT

You can use the power button to control the power bank output or simply plug in and charge a device through either USB port.

### POWER OUTPUT INSTRUCTIONS

#### POWER ON

Press power button once

#### POWER OFF

Double-click power button

## OPERATING INSTRUCTIONS

### AS A POWER SOURCE

Both USB-A and USB-C ports are capable of power output individually or simultaneously.

- Plug USB cable of external device into either corresponding USB port.
- Power bank will automatically turn on when device is plugged in.
- Power bank will automatically turn off 30 seconds after device and/or USB cable are unplugged.

### QUICK CHARGE MODE

Quick Charge Mode is available with capable devices.

\*The Battery Level Indicator furthest to the left will automatically turn green to indicate that the device is in Quick Charge Mode.

**QUICK CHARGE**



## LED LIGHT INSTRUCTIONS





<b>POWER ON</b>	Press power button for 2 seconds
<b>BRIGHTNESS</b>	Press power button a single time to switch between low and high brightness
<b>POWER OFF</b>	Press power button for 2 seconds

## CHARGING INSTRUCTIONS

- Plug USB-C cable into power bank and the other end into an external power source.
- Battery Level Indicator (BLI) lights will light up with one light blinking to indicate that the power bank is successfully charging.
- When the power bank is fully charged, all four BLI lights will stay lit until unplugged.

## BATTERY LEVEL INDICATOR (BLI)

Battery Level Indicator measures the power remaining in the Power Bank.

BLI LIGHTS	POWER LEVEL
	85% - 100%
	50% - 84%
	25% - 49%
	Less than 25%

## **SAFETY**

- Store power bank in a cool, dry place at all times. Operating temperature should stay between 32°F–113°F (0°C–45°C). When charging a device, the power bank may feel warm. This is a normal operating condition.
- Do not disassemble and reassemble the power bank. Please contact Barebones if product becomes faulty.
- If power bank is not in use for long durations, charge and discharge once every three months. Battery performance will decline over several years in normal conditions.
- Keep power bank away from heat and fire.
- Do not clean with harmful chemicals or detergents.
- Refrain from misuse, dropping, or excessive force to the power bank to reduce the risk of damage.

## **WARNING & SAFETY**

The warnings, cautions, and instructions in this manual cannot cover all possible conditions or situations that could occur. Exercise common sense and caution when using this product.

## SPECIFICATIONS



CAPACITY	3.6V, 10000mAh 36Wh
USB-A OUTPUT	5.0V-2.4A
USB-C OUTPUT	5.0V-3.0A 9V-2.0A MAX 12V-1.5 MAX
CHARGE TIME	~4h at 3A   ~6h at 2A   ~12h at 1A
LED TYPE	1.5W LED
LIGHT SPECTRUM	3000K
LUMENS	HIGH: 100lm   LOW: 20lm
DIMENSIONS	4" x 4" (5.25" w/ HANDLE) x 1"
MATERIALS	ALUMINUM, STAINLESS STEEL, ABS



# BAREBONES



**BAREBONESLIVING.COM**

DESIGNED IN UTAH | MADE IN CHINA

1215 WILMINGTON AVE #140

SALT LAKE CITY, UT 84106

1.855.895.7040

SUPPORT@BAREBONESLIVING.COM



042622



ONLINE VERSION



PLEASE  
RECYCLE