
# **EDISON MINI LANTERN**

# User Guide

BAREBONES

### PRODUCT COMPONENTS

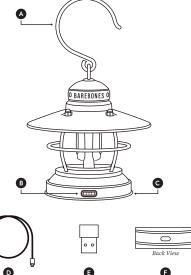

#### KEY

- A Wire Hanging Hook
- USB-C to USB-C Cable Included
- B Power Button
- USB-C to USB-A
- C Battery Cover
- USB-C Port

## QUICK USE

#### AA BATTERY INSTALLATION

- While holding lantern upside down, twist battery cover counterclockwise to unlock and expose battery tray.
- Insert AA Batteries into battery tray and re-attach battery cover. Twist battery cover clockwise to lock.

#### EXTERNAL POWER SOURCE / USB-C

- Plug USB-C Cable into USB-C Port located on back of the Mini Edison Lantern.
- Plug other end of USB-C cable into external power source. USB-C to USB-A adapter included (if needed).

### **OPERATING INSTRUCTIONS**

#### **POWER & BRIGHTNESS**

Use Power Button to power lantern on, off, and to cycle through brightness modes.

Cick 1: Power On/Low Brightness

Cick 2: High Brightness

Cick 3: Power Off

#### FAQ

#### CAN I CHARGE THE BATTERIES THROUGH THE LIGHT?

No. The lantern will not charge the AA batteries.

#### CAN I STORE THE EDISON MINI LANTERN OUTSIDE?

This product is not meant to be stored outside for long periods of time. Extended exposure to wet conditions may cause rust and unnecessary wear and tear. We recommend storing your lantern indoors after use to help it last as long as possible.

#### WARNING

Avoid shining light directly into eyes. This product is not intended for use by children.



LED	5V 1.6 WATT
LUMENS	LOW: 35   HIGH: 100
TEMPERATURE	3000K - 3200K
BATTERY	(2) AA 1.5 V ALKALINE - Not Included
RUN TIME	LOW: 20+ HRS   HIGH: 5+ HRS
INPUT	5V USB-C
DIMENSIONS	4.25" × 4.25" × 4.50"















### BAREBONES

Customer Service 1-855-895-7040

Email info@barebonesliving.com

020222

Scan the QR code to view this information online.



### BAREBONESLIVING.COM/INSTRUCTIONS