



GoMist™

Misting & Drinking Bottle Cap

User Manual

Congratulations on the purchase of your new GoMist™, the world's only rechargeable misting cap that can cool you down while you hydrate.



Scan to
Watch Video



EXTREMEMIST®

Important Safety Instructions

It's essential to follow these instructions provided in this manual before using the product to ensure your safety and the device's proper functioning. If you have any questions or concerns, contact customer support.

- To prevent any damage to the pump and nozzle, it is crucial to use only potable water that is clean and safe for consumption.
- Drinking from the misting nozzle is not recommended to avoid any potential health hazards.
- To avoid damaging the product, do not immerse the cap in water.
- To ensure safe and effective use, refrain from using the product if any of the seals or parts are missing, damaged, or out of place.
- Using dry ice or freezing is not advised as it may damage the product.
- To avoid any potential hazards, refrain from putting the bottle or cap in the microwave.
- Mishandling, damaging, or using defective lithium-ion batteries can result in fire hazards, injuries, and property damage. It is essential to handle them with care and strictly adhere to the provided instructions.
- Once the battery is fully charged, disconnect it, and avoid charging it near flammable materials or when it is wet to prevent any potential hazards. Store the cap away from heat and humidity when not in use to maintain the product's quality.
- Due to the choking hazard associated with small parts, this product is not suitable for children under 5 years of age.



How to Use

- **Charge** - the device until the blue light stops flashing and stays constant.
- **Fill** - the bottle with filtered water up to 1 inch below the neck of the bottle.
- **Mist** - press and hold the power button. Press the button again to activate 'Turbo' mode.
- **Hydrate** - remove the drinking cap and enjoy!

Misting Feature Details

1. Press and hold the power button for 1 second to turn it on to speed 1 ('Gentle').
2. Press and release the power button a second time to turn up to speed 2 ('Turbo').
3. Press and release the power button for the 3rd time to turn the mist off.

The mister will automatically turn off after 1 minute of continuous use. For best performance and pump life, it is recommended to let the pump rest for up to 30 seconds before turning it back on.

Cleaning Instructions (not dishwasher safe)

1. Misting Cap: Make sure the USB cover and all other seals are securely in place. Do not submerge in water. Sponge or dish brush clean with warm soapy water. Rinse under warm, slow-running water.

- To prevent clogging, periodically rinse the intake filter with warm, running water.
- If nozzle becomes clogged, remove and tap on hard surface several times to dislodge any possible blockage. If using hard water, periodically soak in CLR or white vinegar for 10 to 15 minutes (repeat as necessary) and thoroughly rinse.

The GoMist™ Cap is compatible with most widemouth water bottles but is not guaranteed to fit every bottle. For an updated list of compatible bottles, please visit our website.

For detailed instructions and troubleshooting visit ExtremeMist.com/gomist-care

To Learn More: www.ExtremeMist.com

Contact: Info@ExtremeMist.com or call (602) 368-9625

ExtremeMist® is a trademark of ExtremeMist® PCS LLC.

Designed in USA, made in China.