

PIVOT

pivotcase.com

INSTRU	ICTIC	7 N I N A	114 A B	1 / 1
IINSIRU	JULIU	JIV IV	IAINU	JAL

Document no.	Revision	Date	Page
PM-B747-NHO Installation and Removal Manual	20-01	01 Mar 2020	1 of 5



# **Better Connection. Better Protection.**

Making the **Case** for Aviation.

# Boeing B747 Long Term Removable Mount (LTRM™) Installation and Removal Manual





Document no. PM-B747-NHO Installation and Removal Manual	Revision	Date	Page
	20-01	01 Mar 2020	2 of 5
1 W B/47 W O Mistaliation and Kemoval Mandal	20 01	01 Widi 2020	2013

#### **Read Before Use**

Follow the instructions to ensure proper installation, deployment, and maintenance of the PIVOT B747 LTRM™ device.

For the purposes of this manual, the term "LTRM™ device" will be replaced with "device" as appropriate, as these terms are interchangeable.

## **Purpose**

Provide information for correct installation, removal, and maintenance of the device for the Boeing B747.

#### **Extent**

This instruction manual is appropriate for all personnel involved in the installation, removal, or maintenance of the device for the Boeing B747.

#### **Reference / Definitions**

LTRM Long Term Removable Mount

Device LTRM™ device

CA Captain's Side Mount (PM-B747)
FO First Officer's Side Mount (PM-B747)



## **Revision Highlights**

Added Revision Highlights and Revision Record sections. Changed Revision Numbering format. Replaced *Periodic Care* with *Daily Use Considerations*; updated instructions.

### **Revision Record**

Revision Number	Revision Date	Author	Technical Approval	
20-01	01 Mar 2020	Jessica Gillespie Swanwick	Nate Stoffregen	

## Responsibility

PIVOT reserves the right to make design updates to meet new requirements without obligation to modify existing installations. This manual is subject to change without notice. Service Bulletins may be issued separately and their effect on this manual will be made evident by reissue of the appropriate list of Service Bulletins. This document can only be changed by an authorized PIVOT employee.

## Illustrations

Visual depictions are for explanatory purposes only.



Document no. PM-B747-NHO Installation and Removal Manual	Revision 20-01	Date 01 Mar 2020	Page 3 of 5
--	----------------	---------------------	----------------

#### **Overview**

The PIVOT LTRM™ device consists of several parts:

- Contoured attachment plate
- High-deflection AMPS adapter with PPK-1 mounting plate

Total installation time for a shipset (CA and FO) is approximately five (5) minutes. Captain and First Officer devices are the same part and uses the same installation and removal process. Installation does not require tools. Accomplishing the steps detailed in the manual provide any user with required data for successful installation or removal. You may also want to refer to the following: https://pivotcase.com/ltrm/.

#### **Installation Instructions**

With the window shade in the stowed position, hold the device with one hand and move it into position over the window shroud.



Place upper edge of the device into gap in the window shade channel. Lift chart spring clip. Slide the device forward and guide the chart spring clip through forward slot in the device.



Release chart spring clip. Press down on the top edge of the device to secure it in position. Raise the window shade to ensure there is no interference with its operation.

The installation is complete.



## **Attachment & Removal of PIVOT Case to Device**

Refer to PIVOT Case User Guide for details.



Document no. PM-B747-NHO Installation and Removal Manual	Revision	Date	Page
	20-01	01 Mar 2020	4 of 5
TW B/47 WIO IIIStallation and Removal Wallach	20 01	01 Widi 2020	7013

#### **Removal Instructions**

Ensure the window shade is in its stowed position.



With one hand, raise the chart spring clip. Using your other hand, slide the device aft to remove the chart spring clip from the slot in the device.



With the other hand, lift up on the device to separate it from the gap in the window shade channel.

The removal is complete.



## **Daily Use Considerations**

Scratches and other surface imperfections are typical and do not affect the performance of the device.

If a discrepancy is identified, remove the device from service and either repair or replace. If any part is visibly damaged, loose, or missing, remove the device from service and either repair or replace before further use. All surfaces of the device may be wiped with a solvent-free cleaner to remove any accumulated dirt or debris prior to being re-installed.

## **Additional Information**

To learn more, please visit pivotcase.com for instructional videos, product support, and additional information about PIVOT products. You'll find valuable online resources to enhance your user experience and see the complete line of PIVOT products.

If you have questions, please contact PIVOT Support.





9720 Landry Blvd., Spring, TX 77379

pivotcase.com

#### **INSTRUCTION MANUAL**

Document no. PM-B747-NHO Installation and Removal Manual	Revision 20-01	Date 01 Mar 2020	Page 5 of 5	l
--	-------------------	---------------------	----------------	---



www.pivotcase.com/support



sales@pivotcase.com



1-888-4-FLYBOYS (1-888-435-9269) Outside the U.S.A.: 281-895-0128



www.youtube.com/c/pivotcasevideo

TM and © 2020 Fly Boys All rights reserved. Designed in USA. Printed in USA.